

Fuller Heavy-Duty Transmissions TRSM1500 EN-US

April 2013

RT-8908LL
RTO-11707LL
RTO-11708LL
RTOF-11707LL
RTOF-11708LL
RTOF-14708LL
RTX-11708LL
RTX-14708LL
RTXF-11708LL
RTXF-14708LL
RTO-11707DLL
RTO-11709MLL
RTO-11908LL
RTO-11909ALL
RTO-11909MLL
RTO-13707DLL
RTO-13707MLL
RTO-14709MLL

RTO-14908LL
RTO-14909ALL
RTO-14909MLL
RTO-16908LL
RTO-16909ALL
RTOF-11709MLL
RTOF-11908LL
RTOF-11909ALL
RTOF-11909MLL
RTOF-13707DLL
RTOF-13707MLL
RTOF-14709MLL
RTOF-14908LL
RTOF-14909ALL
RTOF-14909MLL
RTOF-16908LL
RTOF-16909ALL
RTX-11715

RTX-14715
RTXF-11715
RTXF-14715
RTXF-15715



Powering Business Worldwide

BACKED BY

Roadranger

SUPPORT

Warnings and Precautions



Before starting a vehicle always be seated in the driver's seat, place the transmission in neutral, set the parking brakes and disengage the clutch.

Before working on a vehicle place the transmission in neutral, set the parking brakes and block the wheels.

Before towing the vehicle place the transmission in neutral, and lift the rear wheels off the ground, remove the axle shafts, or disconnect the driveline to avoid damage to the transmission during towing.

The description and specifications contained in this service publication are current at the time of printing.

Eaton Corporation reserves the right to discontinue or modify its models and/or procedures and to change specifications at any time without notice.

Any reference to brand name in this publication is made as an example of the types of tools and materials recommended for use and should not be considered an endorsement. Equivalents may be used.



This symbol is used throughout this manual to call attention to procedures where carelessness or failure to follow specific instructions may result in personal injury and/or component damage.

Departure from the instructions, choice of tools, materials and recommended parts mentioned in this publication may jeopardize the personal safety of the service technician or vehicle operator.

Warning: Failure to follow indicated procedures creates a high risk of personal injury to the service technician.

Caution: Failure to follow indicated procedures may cause component damage or malfunction.


Note: Additional service information not covered in the service procedures.

Tip: Helpful removal and installation procedures to aid in the service of this unit.

Always use genuine Eaton replacement parts.

Introduction

Transmission Overview

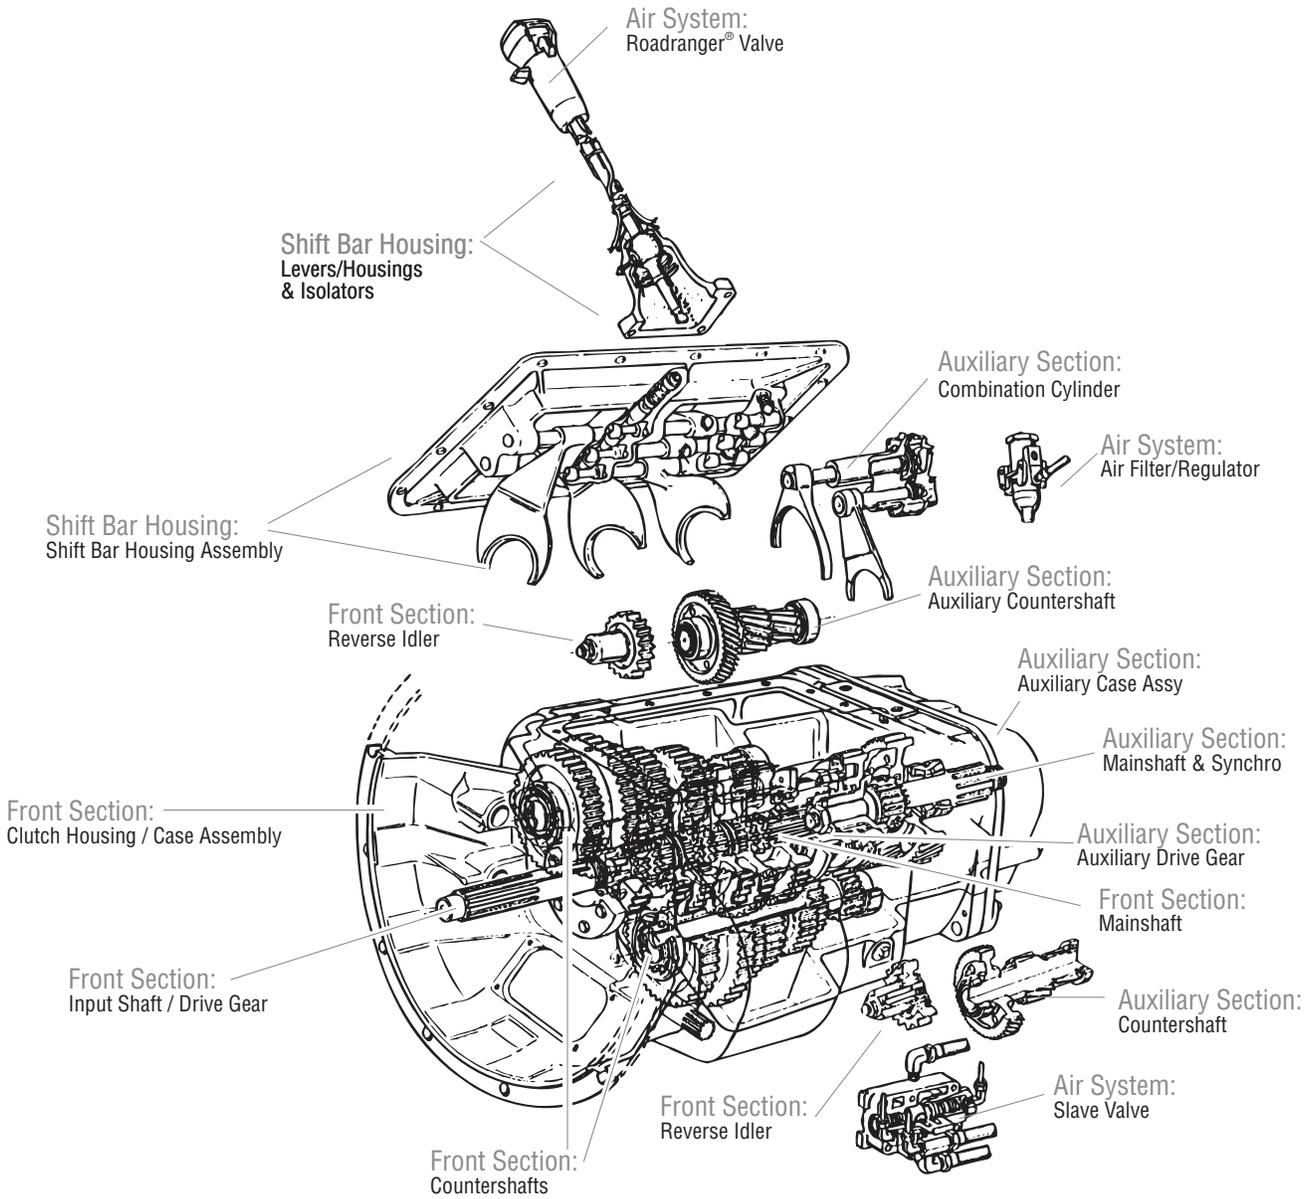

General Information

| | |
|---|----|
| Purpose and Scope of Manual | 1 |
| Serial Tag Information and Model Nomenclature | 5 |
| Lubrication Specifications | 7 |
| Transmission Operation | 9 |
| Tool Specifications | 13 |
| Preventive Maintenance Inspection | 17 |
| Power Flow Diagrams | 21 |
| Air System Overview | 35 |
| General Troubleshooting Chart | 47 |
| Air System Troubleshooting | 50 |

In-Vehicle Service Procedures

| | |
|---|-----|
| Timing Procedures | 66 |
| How to Disassemble Roadranger Valve A-4900 | 70 |
| How to Assemble Roadranger Valve A-4900 | 72 |
| How to Remove the Air Lines and Hoses | 74 |
| How to Install the Air Lines and Hoses | 76 |
| How to Remove Compression Type Fittings | 78 |
| How to Install Compression Type Fittings | 79 |
| How to Remove Push-To-Connect Type Fittings | 80 |
| How to Install Push-To-Connect Type Fittings | 81 |
| How to Remove Rubber 1/4" Air Hoses | 82 |
| How to Install Rubber 1/4" Air Hoses | 83 |
| How to Remove the Air Filter/Regulator | 84 |
| How to Install the Air Filter/Regulator | 85 |
| How to Remove a Roadranger Valve | 86 |
| How to Install a Roadranger Valve | 87 |
| How to Remove a Slave Valve | 88 |
| How to Install a Slave Valve | 89 |
| How to Remove the Gear Shift Lever/Remote Shift Control | 90 |
| How to Install the Gear Shift Lever/Remote Shift Control | 91 |
| How to Adjust the Remote Shift Control (LRC Type) . | 92 |
| Neutral Switch Operation and Testing | 94 |
| How to Remove the Neutral Switch | 95 |
| How to Install the Neutral Switch | 96 |
| Reverse Switch Operation and Testing | 97 |
| How to Remove the Reverse Switch | 98 |
| How to Install the Reverse Switch | 99 |
| How to Remove the Shift Bar Housing | 100 |
| How to Install the Shift Bar Housing | 102 |
| How to Remove the Oil Seal - Mechanical Speedometer | 104 |
| How to Install the Oil Seal - Mechanical Speedometer | 106 |
| How to Remove the Oil Seal - Magnetic Speedometer | 107 |

| | |
|---|-----|
| How to Install the Oil Seal - Magnetic Speedometer | 110 |
| How to Remove the Output Yoke/Companion Flange and Nut | 112 |
| How to Install the Output Yoke/Companion Flange and Nut | 114 |
| How to Remove the Output Yoke/ Flange and Retaining Capscrews | 116 |
| How to Install the Output Yoke/ Flange and Retaining Capscrews | 117 |
| How to Remove the Auxiliary Section in Chassis | 118 |
| How to Install the Auxiliary Section in Chassis | 120 |
| How to Remove the Combination Cylinder Assembly | 123 |
| How to Install the Combination Cylinder Assembly . | 125 |

Transmission Overhaul Procedures-Bench Service

| | |
|--|-----|
| How to Disassemble the Gear Shift Lever | 127 |
| How to Assemble the Gear Shift Lever | 129 |
| How to Remove the Shift Bar Housing | 131 |
| How to Install the Shift Bar Housing | 133 |
| How to Disassemble the Standard Shift Bar Housing | 135 |
| How to Assemble the Standard Shift Bar Housing ... | 138 |
| How to Disassemble the Forward Shift Bar Housing | 141 |
| How to Assemble the Forward Shift Bar Housing | 144 |
| How to Remove the Input Shaft Assembly (without main case disassembly) | 147 |
| How to Install the Input Shaft Assembly (without main case disassembly) | 149 |
| How to Remove the Auxiliary Section with Tapered Bearings | 151 |
| How to Remove the Combination Cylinder Assembly | 153 |
| How to Remove the Auxiliary Countershaft Assembly | 155 |
| How to Disassemble the Output Shaft Assembly | 158 |
| How to Disassemble the Synchronizer Assembly | 162 |
| How to Assemble the Synchronizer Assembly | 163 |
| How to Assemble the Output Shaft Assembly | 165 |
| How to Install the Combination Cylinder Assembly . | 171 |
| How to Install the Auxiliary Countershaft Assembly | 173 |
| How to Remove the Clutch Housing | 177 |
| How to Remove the Auxiliary Drive Gear Assembly . | 179 |
| How to Disassemble the Upper Reverse Idler Gear Assembly | 182 |
| How to Disassemble the Lower Reverse Idler Gear Assembly | 184 |
| How to Remove the Upper and Lower Countershaft Bearings | 185 |

Table of Contents

| | |
|---|-----|
| How to Remove the Mainshaft Assembly | 187 |
| How to Remove the Countershaft Assemblies | 188 |
| How to Disassemble the Countershaft Assemblies . | 190 |
| How to Remove the | |
| Input Shaft and Main Drive Gear | 192 |
| How to Disassemble the Mainshaft Assembly | 195 |
| How to Disassemble the Mainshaft Assembly | |
| with Low Force Gearing | 197 |
| How to Assemble the Mainshaft Assembly | |
| with Selective (Adjustable) Thickness Tolerance | |
| Washers | 199 |
| How to Assemble the Mainshaft Assembly | |
| with Non-Selective (Non-Adjustable) Tolerance | |
| Washers | 205 |
| How to Assemble the Mainshaft Assembly | |
| with Low Force Gearing | 208 |
| How to Prepare the Main Case for Assembly | 211 |
| How to Assemble the Countershaft Assemblies | 212 |
| How to Assemble the | |
| Lower Reverse Idler Gear Assembly | 214 |
| How to Install Countershaft Assemblies | 217 |
| How to Install the Lower Countershaft Bearings | 218 |
| How to Install the | |
| Input Shaft and Main Drive Gear | 220 |
| How to Install the Mainshaft Assembly | 222 |
| How to Install the Upper Countershaft Bearings | 224 |
| How to Assemble the | |
| Upper Reverse Idler Gear Assembly | 227 |
| How to Install the Auxiliary Drive Gear Assembly | 230 |
| How to Install the Clutch Housing | 233 |
| How to Disassemble the Integral Oil Pump | |
| without Auxiliary Oil Tube | 234 |
| How to Assemble the Integral Oil Pump | |
| without Auxiliary Oil Tube | 237 |
| How to Remove the Integral Oil Pump | 240 |
| How to Install the Integral Oil Pump | 242 |
| How to Install the Auxiliary Section | |
| with Tapered Bearings | 244 |
| Shim Procedure without a Shim Tool | |
| for Tapered Bearings | 246 |

Purpose and Scope of Manual

This manual is designed to provide information necessary to service and repair the Fuller® transmissions listed on the front.

How to use this Manual

The service procedures have been divided into two sections: In-Vehicle Service Procedures and Transmission Overhaul Procedures—Bench Service. In-Vehicle Service Procedures contain procedures that can be performed while the transmission is still installed in the vehicle. Transmission Overhaul Procedures contain procedures that are performed after the transmission has been removed from the vehicle.

The procedure sections are laid out with a general heading at the top outside edge of each page followed by more specific headings and the procedures. To find the information you need in these sections, first go to the section that contains the procedure you need. Then look at the heading at the top and outside edge of each page until you find the one that contains the procedure you need.

Transmission Overhaul Procedures follow the general steps for complete disassembly and then assembly of the transmission.

Note: In some instances the transmission appearance may be different from the illustrations, but the procedure is the same.

Disassemble Precautions

It is assumed in the detailed assembly instructions that the lubricant has been drained from the transmission, the necessary linkage and vehicle air lines disconnected and the transmission has been removed from vehicle chassis. Removal of the gear shift lever housing assembly (or remote control assembly) is included in the detailed instructions (How to Remove the Gear Shift Lever). This assembly **MUST** be detached from the shift bar housing before the transmission can be removed.

Follow closely each procedure in the detailed instructions, make use of the text, illustrations, and photographs provided.

Assemblies

- When disassembling the various assemblies, such as the mainshaft, countershafts, and shift bar housing, lay all parts on a clean bench in the same sequence as removed. This procedure will simplify assembly and reduce the possibility of losing parts.

Bearings

- Carefully wash and lubricate all usable bearings as removed and protectively wrap until ready for use. Remove bearings planned to be reused with pullers designed for this purpose.

Cleanliness

- Provide a clean place to work. It is important that no dirt or foreign material enters the unit during repairs. Dirt is an abrasive and can damage bearings. It is always a good practice to clean the outside of the unit before starting the planned disassembly.

Input Shaft

- The input shaft can be removed from the transmission without removing the countershafts, mainshaft, or main drive gear. Special procedures are required and provided in this manual.

For parts or service call us
Pro Gear & Transmission, Inc.



1 (877) 776-4600

(407) 872-1901

parts@eprogear.com

906 W. Gore St.

Orlando, FL 32805



Introduction

Snap Rings

- Remove snap rings with pliers designed for this purpose. Snap rings removed in this manner can be reused, if they are not sprung or loose.

When Using Tools to Move Parts

- Always apply force to shafts, housings, etc., with restraint. Movement of some parts is restricted. Never apply force to driven parts after they stop solidly. The use of soft hammers, soft bars, and mauls for all disassembly work is recommended.

Inspection Precautions

Before assembling the transmission, check each part carefully for abnormal or excessive wear and damage to determine reuse or replacement. When replacement is necessary, use only genuine Fuller[®] Transmission parts to assure continued performance and extended life from your unit.

Since the cost of a new part is generally a small fraction of the total cost of downtime and labor, avoid reusing a questionable part which could lead to additional repairs and expense soon after assembly. To aid in determining the reuse or replacement of any transmission part, consideration should also be given to the unit's history, mileage, application, etc.

Recommended inspection procedures are provided in the following checklist.

Bearings

- Wash all bearings in clean solvent. Check balls, rollers, and raceways for pitting, discoloration, and spalled areas. Replace bearings that are pitted, discolored, spalled, or damaged during disassembly.
- Lubricate bearings that are not pitted, discolored, or spalled and check for axial and radial clearances.
- Replace bearings with excessive clearances.
- Check bearing fit. Bearing inner races should be tight to shaft; outer races slightly tight to slightly loose in case bore. If the bearing spins freely in the bore the case should be replaced.

Bearing Covers

- Check covers for wear from thrust of adjacent bearing. Replace covers damaged from thrust of bearing outer race.
- Check cover bores for wear. Replace those worn or oversized.

Clutch Release Parts

- Check clutch release parts. Replace yokes worn at cam surfaces and bearing carrier worn at contact pads.
- Check pedal shafts. Replace those worn at bushing surfaces.

Gears

- Check gear teeth for frosting and pitting. Frosting of gear teeth faces presents no threat of transmission failure. Often in continued operation of the unit, frosted gears "heal" and do not progress to the pitting stage. In most cases, gears with light to moderate pitted teeth have considerable gear life remaining and can be reused, but gears in the advanced stage of pitting should be replaced.
- Check for gears with clutching teeth abnormally worn, tapered, or reduced in length from clashing during shifting. Replace gears found in any of these conditions.
- Check axial clearance of gears.

Gear Shift Lever Housing Assembly

- Check spring tension on shift lever. Replace tension spring if lever moves too freely.
- If housing is disassembled, check gear shift lever bottom end and shift finger assembly for wear. Replace both gears if excessively worn.

Gray Iron Parts

- Check all gray iron parts for cracks and breaks. Replace parts found to be damaged.

Oil Return Threads and Seals

- Check oil return threads on the input shaft. If return action of threads has been destroyed, replace the input shaft.
- Check oil seal in rear bearing cover. If sealing action of lip has been destroyed, replace seal.

O-Rings

- Check all o-rings for cracks or distortion. Replace if worn.

Reverse Idler Gear Assemblies

- Check for excessive wear from action of roller bearings.

Shift Bar Housing Assembly

- Check for wear on shift yokes and block at pads and lever slot. Replace excessively worn parts.
- Check yokes for correct alignment. Replace sprung yokes.
- Check lock screw in yoke and blocks. Tighten and rewire those found loose.
- If housing has been disassembled, check neutral notches of shift bars for wear from interlock balls.

Sliding Clutches

- Check all shift yokes and yoke slots in sliding clutches for extreme wear or discoloration from heat.
- Check engaging teeth of sliding clutches for partial engagement pattern.

Splines

- Check splines on all shafts for abnormal wear. If sliding clutch gears, companion flange, or clutch hub has wear marks in the spline sides, replace the specific shaft effected.

Synchronizer Assembly

- Check synchronizer for burrs, uneven and excessive wear at contact surface, and metal particles.
- Check blocker pins for excessive wear or looseness.
- Check synchronizer contact surfaces on the synchronizer cups for wear.

Washers

- Check surfaces of all washers. Washers scored or reduced in thickness should be replaced.

Introduction

Assembly Precautions

Make sure that case interiors and housings are clean. It is important that dirt and other foreign materials are kept out of the transmission during assembly. Dirt is an abrasive and can damage polished surfaces of bearings and washers. Use certain precautions, as listed below, during assembly.

Axial Clearances

- Maintain original axial clearances of 0.006-0.015 in. for mainshaft gears.

Bearings

- Use a flange-end bearing driver for bearing installation. These special drivers apply equal force to both bearing races, preventing damage to balls/rollers and races while maintaining correct bearing alignment with bore and shaft. Avoid using a tubular or sleeve-type driver, whenever possible, as force is applied to only one of the bearing races.

Capscrews

- To prevent oil leakage and loosening, use Fuller[®] sealant #71205 on all capscrews.

Gaskets

- Use new gaskets throughout the transmission as it is being rebuilt. Make sure all gaskets are installed. An omission of any gasket can result in oil leakage or misalignment of bearing covers.

Initial Lubrication

- Coat all limit washers and shaft splines with Lubricant during assembly to prevent scoring and galling of such parts.

O-Rings

- Lubricate all o-rings with silicon lubricant.

Universal Joint Companion Flange or Yoke

- Pull the companion flange or yoke tightly into place with the output shaft nut, using 650-700 lb-ft (881.28-949.07 N•m) of torque. Make sure the speedometer drive gear or a replacement spacer of the same width has been installed. Failure to pull the companion flange or yoke tightly into place can result in damage to the mainshaft rear bearing.



See the appropriate Illustrated Parts Lists (specified by model series) to ensure that proper parts are used during assembly of the transmission.

Model Designations and Specifications

Serial Tag Information and Model Nomenclature

Transmission model designation and other transmission identification information are stamped on the transmission tag. To identify the transmission model designation and serial number, locate the tag on the transmission and then locate the numbers as shown.

When calling for service assistance or parts, have the model and serial numbers handy.

Do not remove or destroy the transmission identification tag.

R T O - 1 1 9 0 9 M L L

Eaton Fuller Model Designation Prefix _____
See options below:

| Prefix | Definition |
|--------|--|
| RT | Roadranger Twin Countershaft |
| RTF | w/ Forward Shift Bar Housing |
| RTO | w/ Overdrive |
| RTOF | w/ Overdrive and Forward Shift Bar Housing |
| RTX | w/ Overdrive and Direct Shift Pattern |
| RTXF | w/ Overdrive, Direct Shift Pattern and Forward Shift Bar Housing |

Ratio Set

Forward Speeds

6 = "Multi-Mesh" Gearing

7 = Helical Auxiliary Gearing and "Multi-Mesh" Front Gearing

9 = Improved Seal System

This (x) 100 = Nominal Torque Capacity

L or LL notation used here indicates one (L) or two Low (LL) gears in addition to designated speeds

General Information



The model number gives basic information about the transmission. Use this number when calling for service assistance or replacement parts.

Serial Number

The serial number is the sequential identification number of the transmission. Before calling for service assistance, write the number down. It may be needed.

Bill of Material or Customer Number

This number may be located below the model and serial numbers. It is a reference number used by Eaton®.

Model Designations and Specifications

Model Options

Torque Rating

The torque rating of the transmission specified in the model number is the input torque capacity in Lb-ft. Various torque ratings are available. For more information, call your Eaton Fuller regional sales and service office at 1-800-826-HELP (4357).

Shift Bar Housings


Two types of shift bar housings are available for this transmission. Both are described and shown below.

Standard


The standard shift bar housing has a gear shift lever opening that is located toward the rear of the transmission.

Forward

The forward shift bar housing has a gear shift lever opening located three inches closer to the transmission front than the standard opening. This forward design allows greater flexibility in mounting the transmission and is indicated by an "F" in the model number.

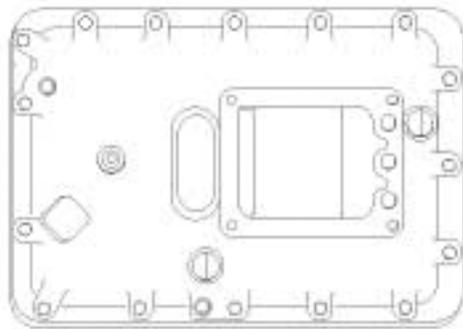

Standard Opening

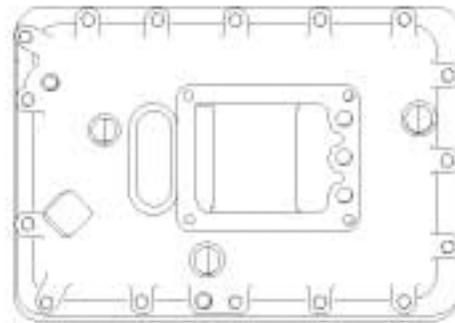

Forward Opening

Lubrication Pumps

Internal: An internal lubrication pump is located in the lower front of the transmission and is driven off the upper countershaft. Transmissions rated 1550 Lb-ft. and above include the internal pump standard.

PTO Driven: A PTO driven pump is externally mounted on the 6 or 8 bolt PTO openings and driven off the PTO gear.

Power Take Off (PTO) Usage

PTOs can be mounted in the following way:

6 or 8 Bolt: The 6 or 8 bolt openings are standard with the transmission. The PTO is mounted to the opening and driven from the PTO gear on the front countershaft.

Thru-Shaft: The thru-shaft PTO mounts on the rear of the transmission. It requires a special auxiliary housing and main case countershaft with internal splines.

Lubrication Specifications

▲ IMPORTANT

Transmission filters should be changed during regular lube intervals. Inspection of the transmission filter should be conducted during preventive maintenance checks for damage or corrosion. Replace as necessary.

Note: For a list of Eaton® Approved Synthetic Lubricants, see TCMT0021 or call 1-800-826-HELP (4357).

Note: The use of lubricants not meeting these requirements will affect warranty coverage.

Note: Additives and friction modifiers must not be introduced. Never mix engine oils and gear oils in the same transmission.

Buy from a reputable dealer

For a complete list of approved and reputable dealers, write to: Eaton Corporation, Worldwide Marketing Services, P.O. Box 4013, Kalamazoo, MI 49003,

Transmission Operating Angles

If the transmission operating angle is more than 12 degrees, improper lubrication will occur. The operating angle is the transmission mounting angle in the chassis plus the percent of upgrade (expressed in degrees). For operating angles over 12 degrees, the transmission must be equipped with an oil pump or cooler kit to insure proper lubrication.

Operating Temperatures with Oil Coolers

The transmission must not be operated consistently at temperatures above 250°F. Operation at temperatures above 250°F [121°C] causes loaded gear tooth temperatures to exceed 350°F [177°C] which will ultimately destroy the heat treatment of the gears. If the elevated temperature is associated with an unusual operating condition that will reoccur, a cooler should be added, or the capacity of the existing cooling system increased.

The following conditions in any combination can cause operating temperatures of over 250° F [121°C]:

- Operating consistently at slow speed.
- High ambient temperatures.
- Restricted air flow around transmission.
- Use of engine retarder.
- High horsepower operation.

Note: Transmission coolers must be used to reduce the operating temperatures when the above conditions are encountered.

Lubrication

Oil Cooler Chart

Table 4

| |
|--|
| TRANSMISSION OIL COOLERS ARE: |
| Recommended |
| <ul style="list-style-type: none">• With engines of 350 H.P. and above. |
| Required |
| <ul style="list-style-type: none">• With engines 399 H.P. and above and GCW's over 90,000 lbs.• With engines 399 H.P. and above and 1400 lb-ft (1898.15 N•m) or greater torque.• With engines 1500 lb-ft (2033.73 N•m) and above |
| 18-speed AutoShift transmissions require use of an Eaton® supplied oil-to-water cooler or approved equivalent. |
| <ul style="list-style-type: none">• With engines 450 H.P. and above. |


Transmission Operation

Depending on specific model, this Fuller® transmission model contains from 9 to 15 forward gear ratios and three reverse gear ratios. The gear shift lever mechanically engages and disengages five forward gears and one reverse gear in the transmission front section. The rear section of the transmission (auxiliary section) contains three additional gear sets which are shifted with air. The auxiliary section provides deep reduction (low low range), low range, and high range. The driver can shift in or out of deep reduction by moving the deep reduction button found on the shift knob side. Low and high range are shifted by moving the range selection lever found on the shift knob front. Therefore, when a front section gear is combined with the proper auxiliary section condition (deep reduction, low range, or high range) a corresponding forward or reverse gear ratio is obtained. See the operating instructions and power flow charts found in this section for specific details.


Shift Patterns

A shift pattern decal that explains how to properly shift the transmission should be in your vehicle (Figure 2-1). If it has been lost, a replacement may be obtained from any Eaton® parts distributor.


RTO-11707LL
RTO-11707DLL
RTO-13707MLL
RTO-13707DLL

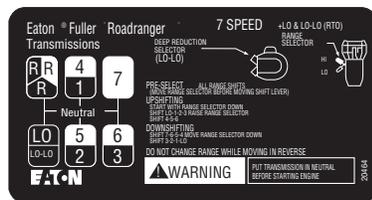


RTO-11709MLL
RTO-14709MLL
RTO-11909MLL
RTO-14909MLL

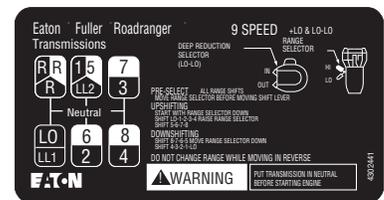


RTO-11708LL
RTO-14708LL

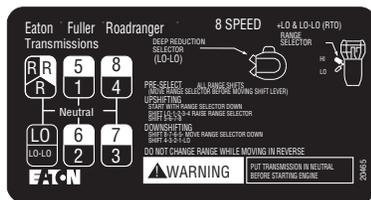

RT-11715
RT-14715
RT-15715
RT-14915
RTX-11715
RTX-14715
RTX-15715
RTO-14915
RTO-16915

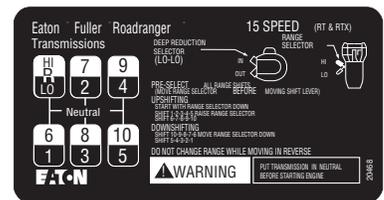

RTX-11708LL
RTX-14708LL
RTO-11908LL
RTO-14908LL
RTO-16908LL

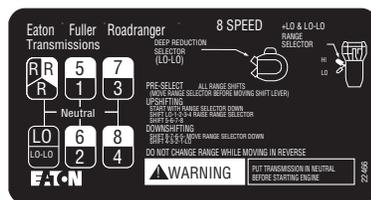

RTO-11715
RTO-14715
RTO-15715

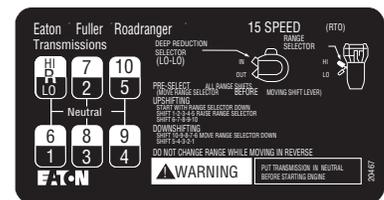


Figure 2-1. Shift Pattern Decal

Transmission Operation and Theory

Initial Start-Up

⚠ WARNING

Before starting a vehicle always be seated in the driver's seat, move the shift lever to neutral, and set the parking brakes.

⚠ CAUTION

Before moving a vehicle, make sure you understand the shift pattern configuration.

1. Make sure the shift lever is in neutral and the parking brakes are set.
2. Turn on the key switch, and start the engine.
3. Allow the vehicle air pressure to build to the correct level. Refer to your "Operator and Service Manual" supplied with the truck.
4. Apply the service brakes.
5. Release the parking brakes on the vehicle.
6. Make sure the Range Selector is down in the low range position (Figure 2-2).

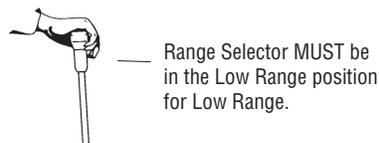


Figure 2-2.

7. Depress the clutch pedal to the floor.
8. Move the shift lever to the desired initial gear.
9. Slowly release the clutch pedal and apply the accelerator.

Double-Clutching Procedure

1. Depress the pedal to disengage the clutch.
2. Move the shift lever to neutral.
3. Release the pedal to engage the clutch.*
 - a. Upshifts—decelerate engine until engine RPM and road speed match.
 - b. Downshifts—accelerate engine until engine RPM and road speed match.
4. Quickly depress the pedal to disengage the clutch and move the shift lever to the next gear speed position.
5. Release the pedal to engage the clutch.

Note: By engaging the clutch with the shift lever in the neutral position, the operator is able to control the mainshaft gear RPM since it is regulated by engine RPM. This procedure allows the operator to

speed up or slow down the mainshaft gearing to properly match the desired gear speed and the outputshaft speed.

Lever Shifts

When moving the shift lever, double-clutching is recommended.

Range Shifts



Avoid moving the Range Selector with the shift lever in neutral while the vehicle is moving.

Low range to high range

When in the last gear position for low range and ready for the next upshift, preselect by moving the range selector lever up. Then move the shift lever, double-clutch, to the next higher speed position according to your shift pattern. As the shift lever passes through neutral, the transmission will automatically shift from low to high range.

High range to low range

While still in gear, preselect for low by moving the range selector down. Then move the shift lever, double-clutching, to the next desired gear position in low range. As the shift lever passes through neutral, the transmission automatically shifts from high range to low range.

Deep Reduction Shifts

Note: Deep reduction is only available in low range.

Button back - deep reduction not selected.



Button forward - deep reduction selected



To obtain deep reduction (low low), first make sure range selection lever is down for low range. Then, move deep reduction button forward.

Upshifts

An upshift from deep reduction can be performed while the vehicle is moving.

If the driver is not moving the shift lever during the shift (example: RTO-14708LL) depress the clutch pedal once immediately after moving the deep reduction button rearward. Decrease engine RPM to obtain synchronous for shift completion.

If the driver is moving the shift lever during the shift (example: RTO-14715) move the deep reduction button rearward and immediately double-clutch while moving the shift lever. Decrease engine RPM to obtain synchronous for shift completion.

Transmission Operation and Theory

Downshifts


Downshifts into deep reduction while moving are generally not recommended, but are possible if operating conditions make it necessary. In this situation, complete the shift immediately after moving the deep reduction button. Single clutch if not moving the shift lever, double-clutch if the shift lever will be moved.

Special Notes

15 Speed Models

When upshifting from a deep reduction gear into a low range gear, it is recommended that the shift lever is moved back one gear position during the shift out of deep reduction. For example:

If the driver is in deep reduction 5th gear position, he/she should double-clutch and move the shift lever to the 4th gear position immediately after moving the deep reduction button. If the shift lever is not moved during this shift, the vehicle must have enough speed to make a 42% step upshift.

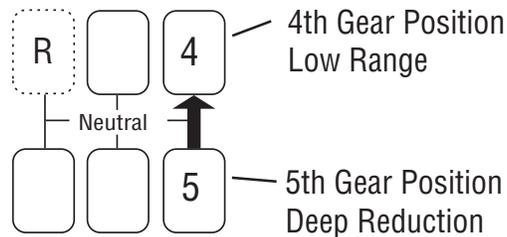

DLL and MLL Models

The three lowest gears (LL1, LO, LL2) are used for road speed control. These shifts are not intended to be used as progressive shifts.

Additional Operating Information

Preselect

IMPORTANT: Always preselect all range shifts when upshifting or downshifting. Preselection requires that the Range Selector is moved to the needed position before starting the lever shift. Preselected range shifts are completed automatically as the lever is moved through neutral and into the next gear. Preselecting all range shifts prevents damage to the transmission and provides for smoother shifts.

Clutch Brake (Used with pull-type clutches)

The Clutch Brake is applied by fully depressing the clutch pedal to the floor board. When applied, the brake slows down and can stop the transmission front box gearing. It is a disc-type brake incorporated into the clutch and transmission drive gear assemblies. Never use the Clutch Brake when upshifting or downshifting. Use only for initial gear engagement when the vehicle is standing still.

Countershaft Brake (Used with push-type clutches)

The control button is mounted on the shift lever just below the shift knob. To operate the brake, disengage the clutch, press down the control button, and shift into 1st or reverse. This is an air operated mechanical brake which slows down the transmission gearing by forcing a piston against the countershaft PTO gear

Note: Never use the Countershaft Brake when upshifting or downshifting. Use only for initial gear engagement when the vehicle is standing still.

Tool Specifications

Some repair procedures pictured in this manual show the use of specialized tools. Their actual use is recommended as they make transmission repair easier, faster, and prevent costly damage to critical parts.

For the most part, ordinary mechanic's tools such as socket wrenches, screwdrivers, etc., and other standard shop items such as a press, mauls and soft bars are the only tools needed to successfully disassemble and reassemble any Fuller[®] transmission.

The following tables list and describe the typical tools required to properly service this model transmission above and beyond the necessary basic wrenches, sockets, screwdrivers, and prybars.

General Tools

The following tools are available from several tool manufacturers such as Snap-On, Mac, Craftsman, OTC, and many others.

Table 5 General Tools

| TOOL | PURPOSE |
|--|---|
| 0-100 lb-ft 1/2" drive Torque Wrench | General torquing of fasteners (Typically 15-80 lb-ft [20.34-108.47 N•m]) |
| 0-700 lb-ft 3/4" or 1" drive Torque Wrench | Torquing of output nut to 650-700 lb-ft (881.28-949.07 N•m) |
| 0-50 lb-in 3/8" drive Torque Wrench | General torquing of fasteners |
| 0-30 lb-in 1/4" drive Torque Wrench | Torquing of capscrews to 7 lb-in (0.79 N•m) during auxiliary countershaft bearing endplay setting procedure |
| 70 MM or 2 2/4" Socket - Standard Depth | To remove the output shaft nut |
| Large Brass Drift | Used to protect shafts and bearings during removal |
| Large Dead Blow Hammer or Maul | To provide force for shaft and bearing removal |
| Snap Ring Pliers - Large Standard External | To remove the snap rings at the auxiliary drive gear, input shaft bearing, and countershaft bearings |
| Feeler Gauges | To set mainshaft washer endplay and auxiliary tapered bearing endplay |
| Rolling Head (Crow's Foot) Prybar | To remove the auxiliary drive gear bearing |
| (2) Air Pressure Gauges 0-100 PSI (0-1034 kPa) | To troubleshoot and verify correct operation of air system |
| Universal Bushing Driver | To remove and install clutch housing bushings. Bushing OD = 1.125 in., ID = 1.000 in. |

Recommended Tools

The following special tools are designed for this Fuller® transmission. The addresses and phone numbers of the tool suppliers are listed after the table. This list is provided as a convenience to our customers. These tools are manufactured by independent companies with no relationship to Eaton. Eaton does not warrant the fit or function of the listed tools. To obtain the tools, contact the tool supplier directly.

Table 6 Special Tools

| REFERENCE NUMBER | TOOL | PURPOSE | G & W TOOL NO. | GREAT LAKES TOOL NO. | OTC TOOL NO. |
|------------------|--|--|--------------------|---|--|
| T1 | Output Yoke Puller | May be required to remove a rusted output yoke. | SP-450 | | 7075 |
| T2 | Auxiliary Section Hanger | To support, or hang, the auxiliary section in the horizontal position. | G-40 | T-125 | 5061 |
| T3 | Auxiliary Countershaft Support and Shim Tool | To hold the auxiliary countershafts in position while installing the auxiliary section in the horizontal position. Also to simplify the checking and setting of the auxiliary countershaft bearing end-play. | G-250 | T-311 | 5062 |
| T4 | Shift Lever Spring Installation Tool (Tension Spring Driver) | To install the shift tower tension spring. | G-116 | T-170 | |
| T5 | Slide Hammer | To remove the output seal and reverse idler shafts. Requires 1/2"-13 threads. (Optional, idler shaft can be driven out from front.) | G-70 | T-150 | 1155 Slide Hammer / 8007 1/2" - 13 Adapter |
| T6 | Bearing Puller | To remove front section countershaft bearings. | G-10 or G-15 | T-1 and T-2 for 9-Series | 7070A Kit |
| T7 | Bearing Driver | To install front section countershaft bearings (3.97" OD, 1.78" ID). | G200 Kit | T-101 Kit | |
| T8 | Bearing Driver | To install the front countershaft rear bearings (3.5" OD, 1.6" ID). | G200 Kit | T-101 Kit | |
| T9 | Countershaft Support Tools (2) | To support and locate the front section countershafts during bearing removal and installation. | G-50 / G-51 / G-58 | 7 series T-135 9 series T-132 T-140 as an option for front bearing (both) | 7109 |
| T10 | Input Bearing Driver | To install input bearing on input shaft. | G-35 | T-120 | 5066 (2" shaft) |

Recommended Tools

Table 6 Special Tools (Continued)

| REFERENCE NUMBER | TOOL | PURPOSE | G & W TOOL NO. | GREAT LAKES TOOL NO. | OTC TOOL NO. |
|--|---|--|----------------|----------------------|---|
| T11 | Bearing Puller | To remove the auxiliary countershaft tapered bearings. | 4332/4232 | | 1123 / 927 |
| T12 | Bearing Driver | To install the auxiliary countershaft tapered bearings. | G-200 Kit | T-105 Kit | |
| T13 | Output Seal Removal Tool | To remove the output seal in chassis. Can use slide hammer. | | | Use 27315 hook with 1155 slide hammer |
| T14 | Auxiliary Section Removal Adapter Plate | To attach transmission jack to auxiliary section for auxiliary section removal in chassis. | G-115 | | 49611 (Used with OTC transmission jack P/N 5019.) |
| T15 | Mainshaft Hook | To assist in lifting of mainshaft from front section. | G-225 | T-165 | |
| T16 | Input Bearing Puller | To remove input bearing. | G-38 | T-3 | 7070A Kit |
| T17 | Bearing Race Puller | To remove the auxiliary countershaft tapered bearing outer races. | | | 7136 puller attached to 1155 slide hammer |
| T18 | Bearing Race Installer | To install the auxiliary countershaft tapered bearing outer races. | | | 27524/27530 discs used with 27488 handle and 10020 screw. |
| * Tool ID numbers are referenced in the service procedures. Special Tools | | | | | |

Table 7 Shop Equipment

| | |
|-----------------------|--|
| 20 Ton capacity press | To press countershaft gears from countershaft. |
|-----------------------|--|

Specialty Tool Manufacturers

Below are the addresses and phone numbers of the companies that make tools specifically for Eaton®Fuller® transmissions:

G and W Tool Company

1105 E. Louisville, Broken Arrow, OK 74012-5724, Phone: 800-247-5882, or 918-258-6881

Great Lakes Tool

8530 M-89, Richland, MI 49083, Phone: 800-877-9618, or 269-629-9628

O.T.C. 655 Eisenhower Dr., Owatonna, MN 55060-117, Phone: 800-533-6127, or 507-455-7000

The specialized tools can be obtained from a tool supplier or made from tool prints as required by the individual user. Detailed Fuller® Transmission Tool Prints are available upon request by writing to:

Recommended Tools

Eaton Corporation, **Truck Components Operations** Technical Service, P.O. Box 4013, Kalamazoo, Michigan 49003

Eaton Aftermarket Parts

The following tools are available through Eaton Aftermarket Parts. To obtain any of the tools listed, contact your local Eaton parts distributor.

Table 8

| TOOL | PURPOSE | EATON® PART NUMBER |
|-----------------------------|--|--|
| 5/32" Air Line Release Tool | To remove 5/32" air lines from push-to-connect fittings. | P/N 4301157 included in kit K-2394 |
| Air Line Cutting Tool | To cut plastic air lines smoothly and squarely. | P/N 4301158 included in kit K-2394. |
| Output Seal Driver | To install output seal. | For 7 series: Eaton P/N 5564501 driver. For 9 series: Use Eaton® P/N 5564509 adapter with 5564501 driver. Both parts included in complete Eaton® seal kit P/N TCMT0912. |
| Output Seal Slinger Driver | To install output seal slinger. | For 7 series: Eaton P/N 71223. For 9 series: Eaton P/N 4303829. |


Preventive Maintenance Inspection

Everyday there are countless vehicles operating over the highways with transmissions in such a neglected mechanical condition, they can be referred to as failures looking for a place to break down. They lack a proper and organized preventive maintenance program.

Preventive maintenance is a general term which applies to all procedures necessary to have maximum life and satisfactory service at the lowest possible cost, short of removing and repairing the unit.

A number of conditions contrary to good preventive maintenance can generally be pointed to when inspecting a failed transmission. Taking a few minutes every so many hours or miles to do a few simple checks could help avoid eventual breakdown or reduce the repair cost. If the transmission is not cared for, it will breakdown.

Preventative Maintenance Check Points

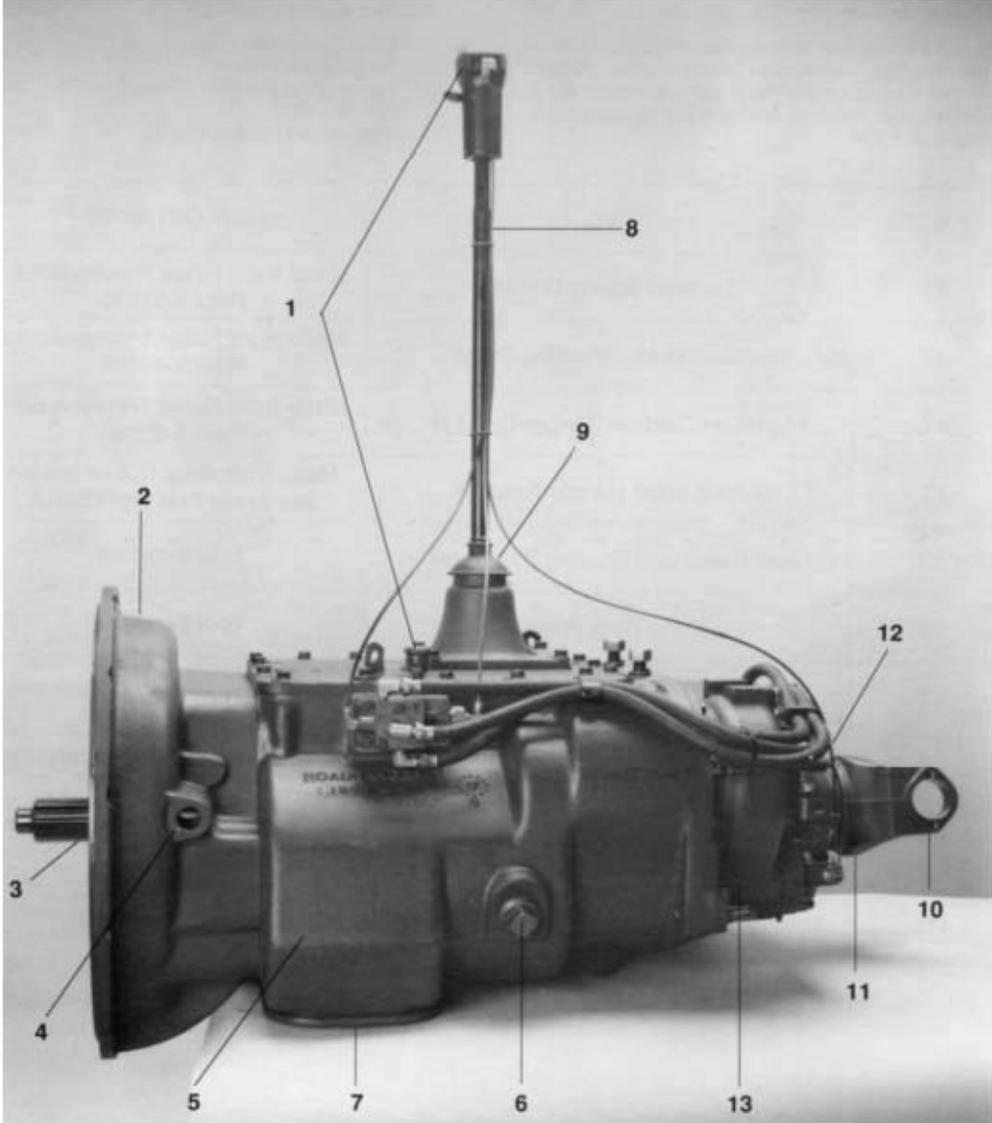

Note: Transmission appearance may differ, however the procedure is the same.

Preventive Maintenance

1. **Air System and Connections**

- Check for leaks, worn air lines, loose connections and capscrews.

2. **Clutch Housing Mounting**

- Check all capscrews of clutch housing flange for looseness.

3. **Clutch Release Bearing** (Not Shown)

- Remove hand hole cover and check radial and axial clearance in release bearing.
- Check relative position of thrust surface of release bearing with thrust sleeve on push-type clutches.

4. **Clutch Pedal Shaft and Bores**

- Pry upward on shafts to check wear.
- If excessive movement is found, remove clutch release mechanism and check bushings on bores and wear on shafts. See OEM literature.

5. **Lubricant**

- See Lubrication Manual TCMT0021.

6. **Oil Filter**

- Oil Filter Inspection (during vehicle PM schedule):
 - Inspect oil filter for damage or rust. Replace as necessary.
 - Inspect oil filter adapter for damage or leakage. Replace as necessary.
- Oil Filter Replacement
 - Replace every 100,000 miles and top off fluid.
 - Every transmission fluid change.

7. **Filler and Drain Plugs**

- Remove filler plugs and check level of lubricant at specified intervals. Tighten fill and drain plugs securely.

8. **Capscrews and Gaskets**

- For applicable models, check all capscrews, especially those on PTO covers and rear bearing covers for looseness which would cause oil leakage.
- Check PTO opening and rear bearing covers for oil leakage due to faulty gasket.

9. **Gear Shift Lever**

- Check for looseness and free play in housing. If lever is loose in housing, proceed with Check No. 10.

10. **Gear Shift Lever Housing Assembly**

- If present, remove air lines at air valve or slave valve. Remove the gear shift lever housing assembly from the transmission.
- Check the tension spring and washer for set and wear.
- Check the gear shift lever spade pin and slot for wear.
- Check bottom end of gear shift lever for wear and check slot of yokes and blocks in shift bar housing for wear at contact points with shift lever.

Checks With Drive Line Dropped

11. **Universal Joint Companion Flange or Shaft Nut**

- Check for tightness. Tighten to recommended torque.

12. Output Shaft (Not Shown)

- Pry upward against output shaft to check radial clearance in mainshaft rear bearing.

Checks With Universal Joint Companion Flange or Yoke Removed

Note: If necessary, use solvent and shop rag to clean sealing surface of companion flange or yoke. Do not use crocus cloth, emery paper, or other abrasive materials that will mar surface finish.

13. Splines on Output Shaft (Not Shown)

- Check for wear from movement and chucking action of the universal joint companion flange or yoke.

14. Mainshaft Rear Bearing Cover (Not Shown)


- Check oil seal for wear.

Inspection

| PART TO INSPECT | WHAT TO CHECK FOR | ACTION TO BE DONE |
|--|--|--|
| Speedometer Connections | Speedometer cables should not be loose. | Applied hydraulic thread sealant #71208 to threads, torque speedometer sleeve to 35-50 lb-ft (47.45-67.79 N•m). |
| | Should be an o-ring or gasket between the mating speedometer sleeve and the rear bearing cover. | Replace the o-ring/gasket if damaged or missing. |
| Rear Bearing Cover Capscrews, Gasket, and Nylon Collar | Check retaining capscrews for tightness. | Apply Eaton Sealant #71205 to the capscrew threads, torque to 35-45 lb-ft (47.45-61.01 N•m). |
| | Verify nylon collar and gasket are installed at the chamfered hole, aligned near the mechanical speedometer opening. | Use new parts if need to replace. Apply Eaton Sealant #71205 to the capscrew threads, torque to 35-45 lb-ft (47.45-61.01 N•m). |
| | Verify that a rear bearing cover gasket is in place. | Install a new gasket if rear bearing cover was removed. |
| Output Shaft Nut | Check the output shaft nut for tightness. | Torque the output shaft nut to 650-700 lb-ft (881.28-949.07 N•m). Do not over torque the output nut. |
| PTO Covers and Openings | Check the capscrews for tightness. | Apply Eaton Sealant #71205 to the capscrew threads. Torque 6 bolt PTO capscrews to 35-45 lb-ft (47.45-61.01 N•m), 8 bolt PTO capscrews to 50-65 lb-ft (67.79-88.13 N•m). |
| Gray Iron Parts | Check front bearing cover, front case, shift bar housing, rear bearing cover, and clutch housing for cracks or breaks. | Replace parts found to be damaged. |
| Front Bearing Cover | Check return threads for damage. | If threads damaged, replace the input shaft. |
| | Check the capscrews for tightness. | Torque the capscrews to 35-45 lb-ft (47.45-61.01 N•m). |
| Oil Cooler and Oil Filter | Check all connectors, fittings, hoses, and filter element for tightness. | Tighten any loose fittings. |
| Oil Drain Plug, Oil Fill Plug | Check the oil drain plug and the oil fill plug for leakage. | Torque the oil drain plug to 45-55 lb-ft (61.01-74.57 N•m), oil fill plug to 60-70 lb-ft (81.35-94.91 N•m). |

Preventive Maintenance

Oil Leak Inspection Process

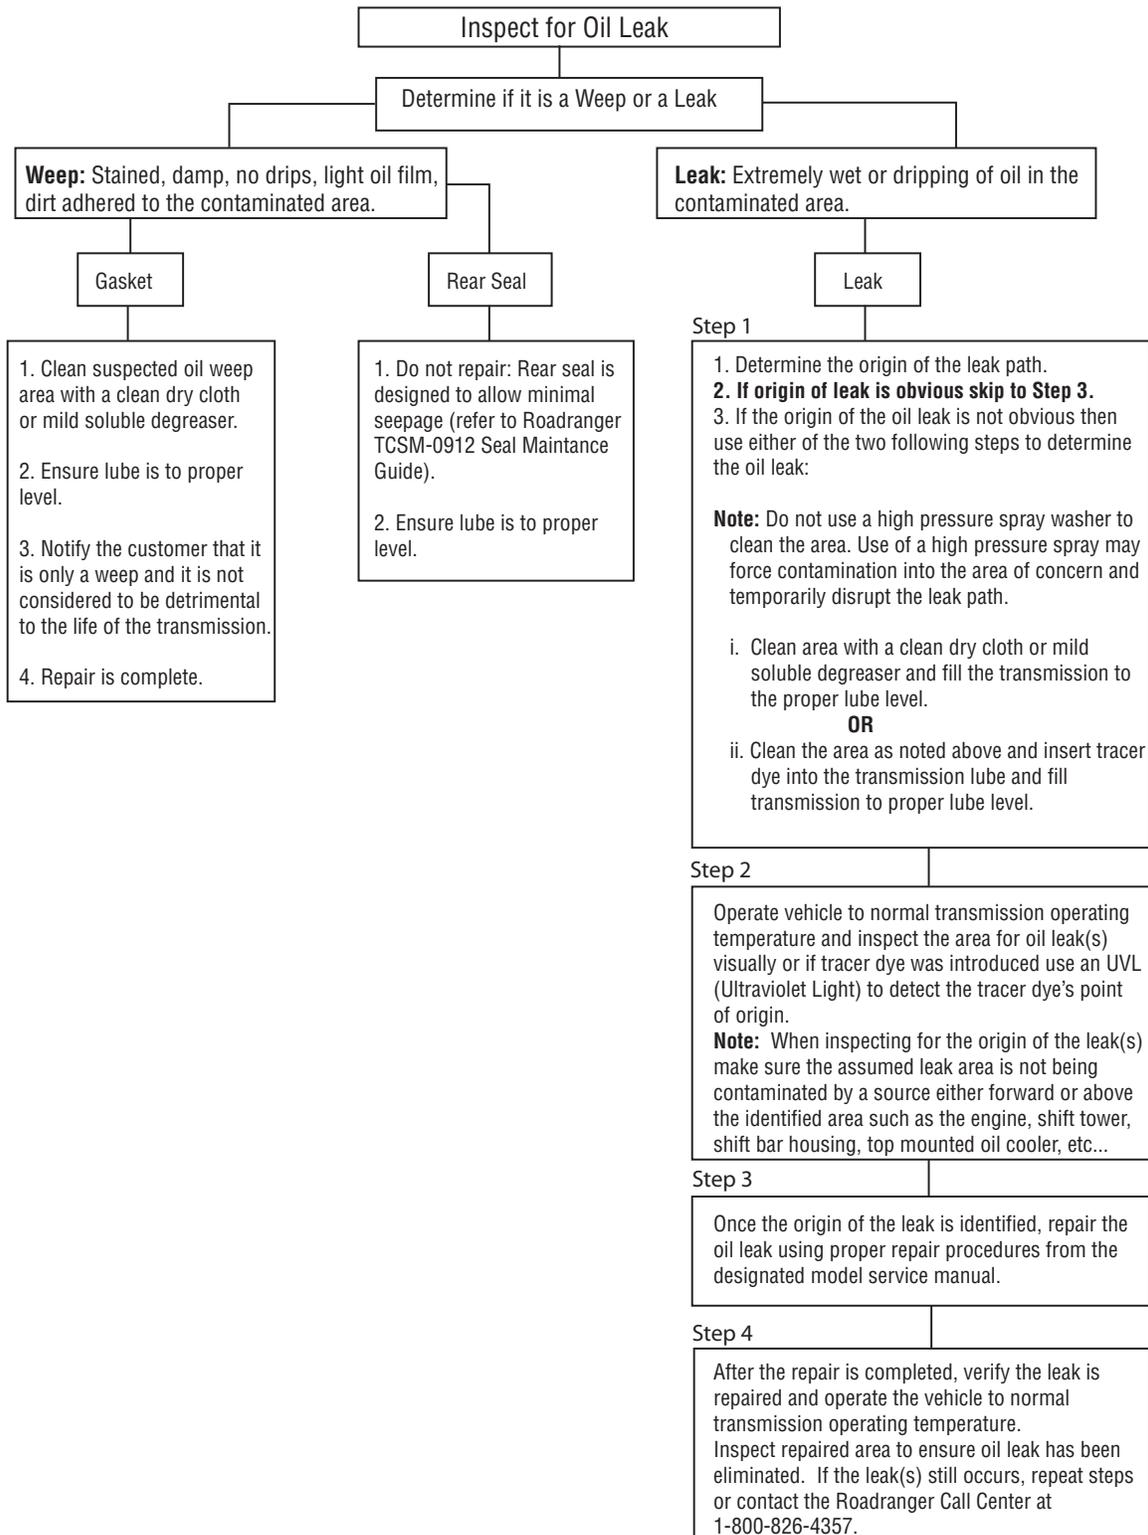


Power Flow Diagrams

An understanding of the engine's power flow through a transmission in each particular gear will assist the technician in troubleshooting and servicing a transmission.

The Fuller[®] transmission can be thought of as two separate "transmissions" combined into one unit. The first "transmission" or front section contains six gear sets which are shifted with the gear shift lever. The second "transmission" called the auxiliary section, contains two gear sets and is shifted with air pressure.

Note: This transmission is referred to as a constant mesh type transmission. When in operation, all gears are turning even though only some of them are transferring power.

The illustration below shows the transmission with the main components called out. Note that the transmission is in the neutral position because the sliding clutches are all in their center positions and not engaged in any gears.

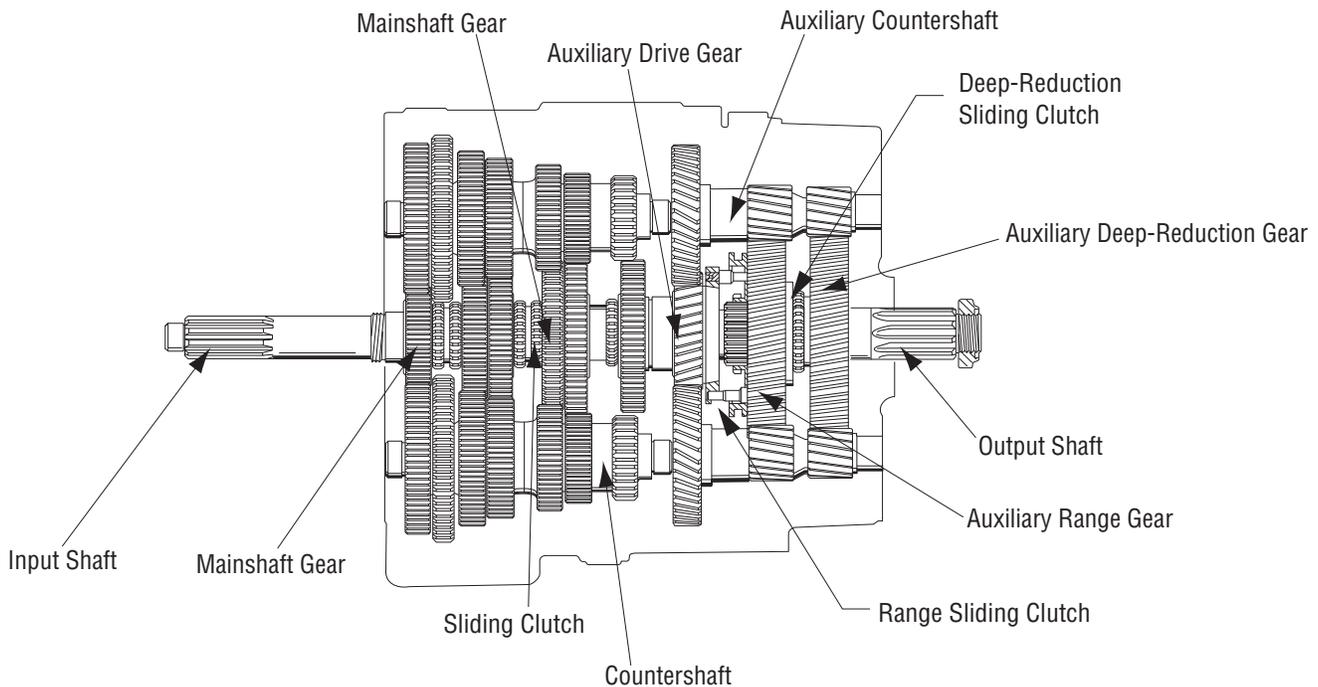

General Information

Power Flow

Front Section Power Flow

Note: The heavy lines in Figure 2-4 outline the power flow description below. For help in understanding the transmission components, refer to Figure 2-3.

1. Power (torque) from the vehicle's engine is transferred to the transmission's input shaft.
2. The input shaft rotates the main drive gear through internal splines in the hub of the gear
3. The main drive gear meshes with both countershaft driven gears and the torque is split between both countershafts
4. Because the countershaft gears are in constant mesh with the mainshaft gears, all the front section gearing rotates. However, only the engaged or selected mainshaft gear will have torque. External clutching teeth on the sliding clutch will engage internal clutching teeth on the selected mainshaft gear. Torque will now be provided from both opposing countershaft gears, into the engaged mainshaft gear, and through the sliding clutch to the front section mainshaft
5. The rear of the front section mainshaft is splined into the auxiliary drive gear and torque is now delivered to the auxiliary section.

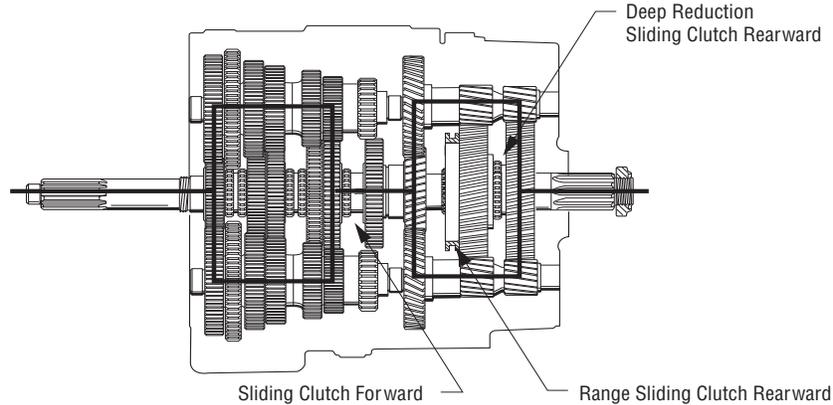


Figure 2-4. Front Section Power Flow

Front Section Power Flow - Direct Gear

In direct gear, the front sliding clutch is moved forward and engages into the back of the main drive gear. Torque will flow from the input shaft to the main drive gear, main drive gear to sliding clutch, sliding clutch straight into the front section mainshaft which delivers the torque to the auxiliary drive gear. See Figure 2- 5.

Note: All countershaft and mainshaft gears will rotate, but the gears will not be loaded.

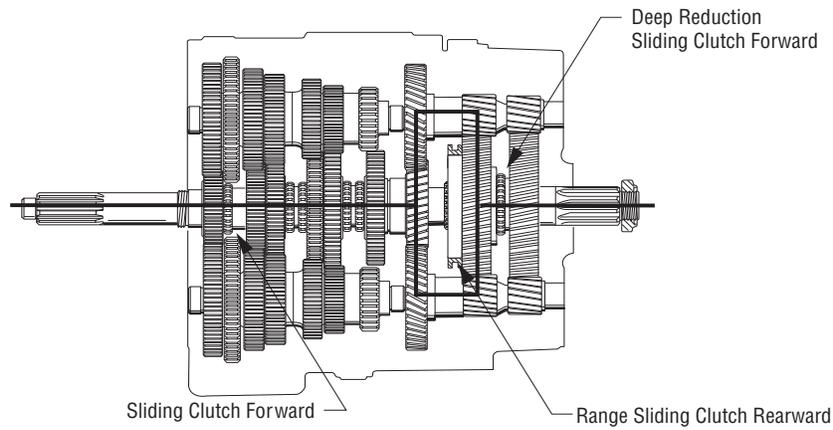


Figure 2-5. Front Section Power Flow - Direct Gear

Power Flow

Front Section Power Flow - Reverse Gear

Torque will flow from the countershafts to the reverse idler gears. Torque will then flow from the reverse idler gears to the mainshaft reverse gear. Torque will now travel through the mainshaft reverse gear, the sliding clutch in the reverse position and then to the mainshaft and auxiliary drive gear. See Figure 2-6, 2-7, 2-8.

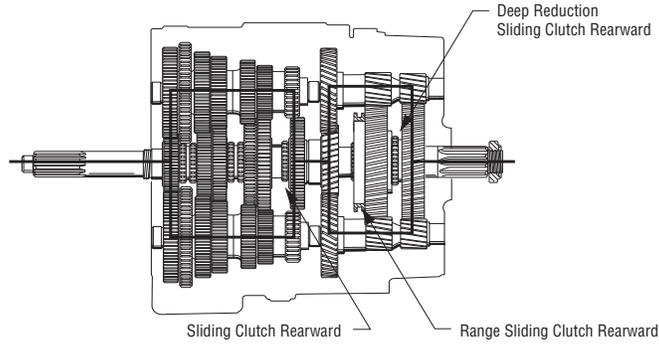


Figure 2-6. Reverse Gear-Deep Reduction

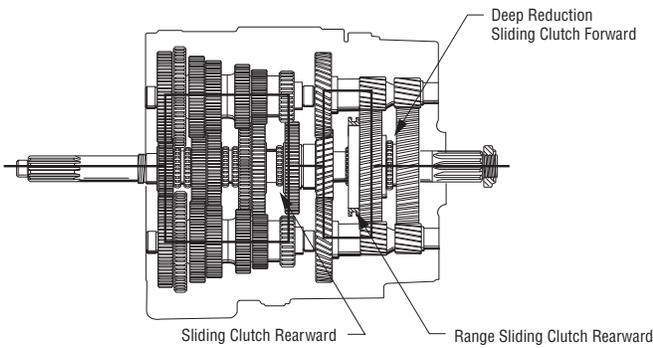


Figure 2-7. Reverse Gear-Low Range

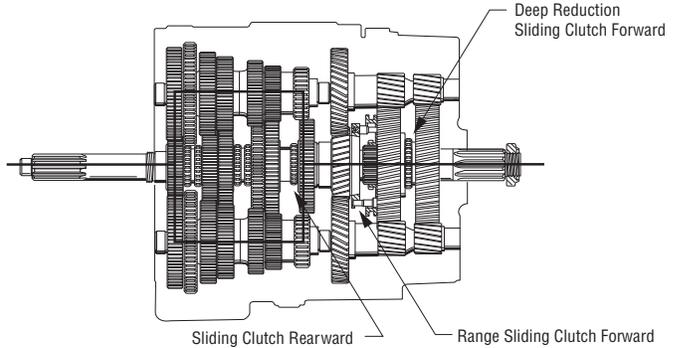


Figure 2-8. Reverse Gear-High Range

Auxiliary Section Power Flow- Low Range

The auxiliary drive gear transfers torque to both auxiliary countershafts. If the auxiliary section is in low range, the range sliding clutch is rearward and engaged into the auxiliary mainshaft reduction gear. Torque will flow from the auxiliary countershafts, into the auxiliary mainshaft reduction gear, through the range sliding clutch and then into the output shaft (auxiliary mainshaft).

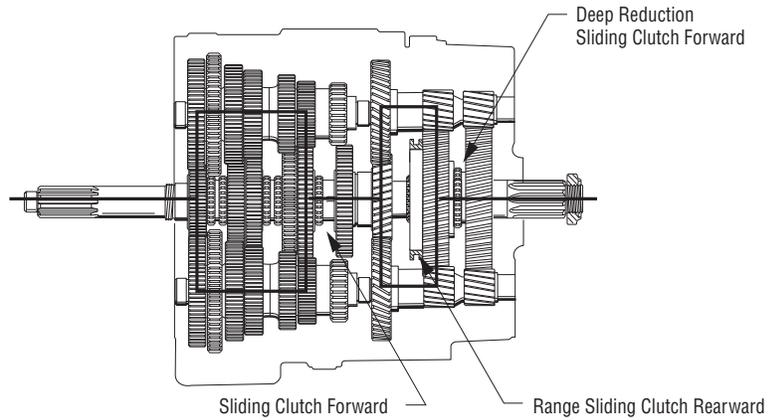


Figure 2-9. Low Range Selected (Range Sliding Clutch Rearward)

Power Flow

Auxiliary Section Power Flow- High Range

If the auxiliary section is in high range, the range sliding clutch is forward and engaged into the back of the auxiliary drive gear. Torque will flow from the auxiliary drive gear to the range sliding clutch. Because the range sliding clutch has internal splines which connect to the output shaft, torque will flow straight through the auxiliary section.

Note: The auxiliary gearing will still turn, but the gears will not be loaded.


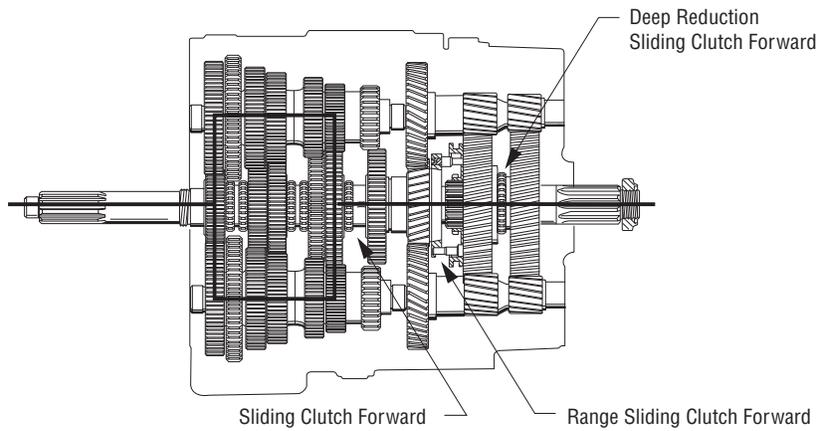



Figure 2-10. High Range Selected (Range Sliding Clutch Forward)

RTO-1X707LL/DLL/MLL


General Information

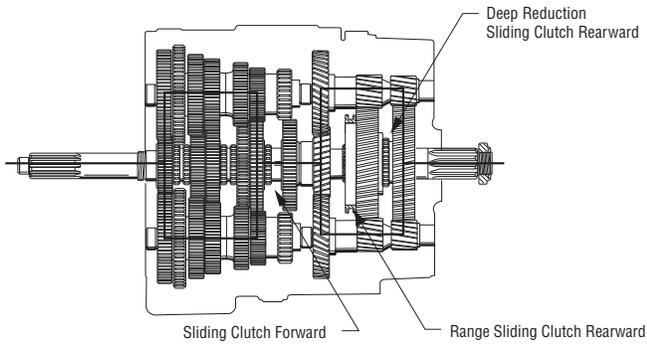


Low Low

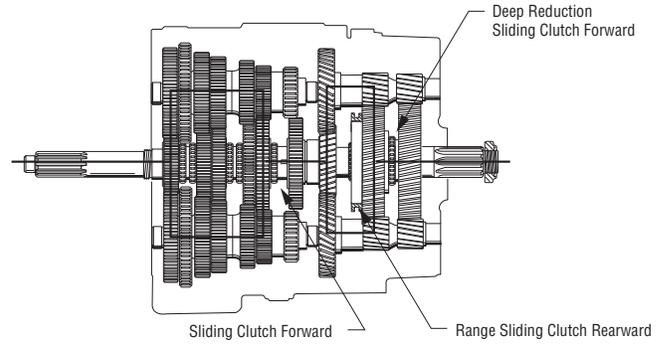


Low

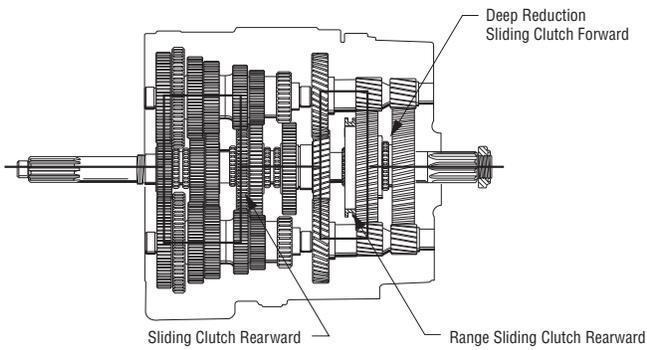


1st Gear

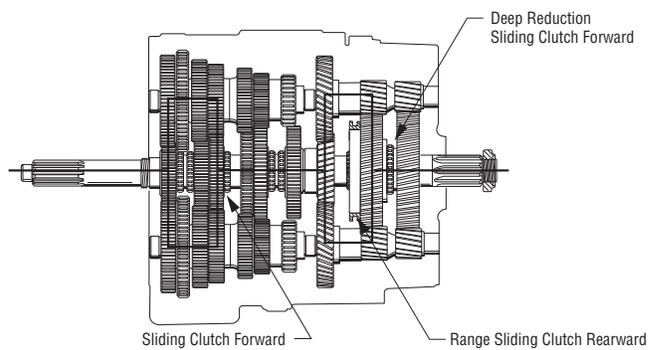

2nd Gear

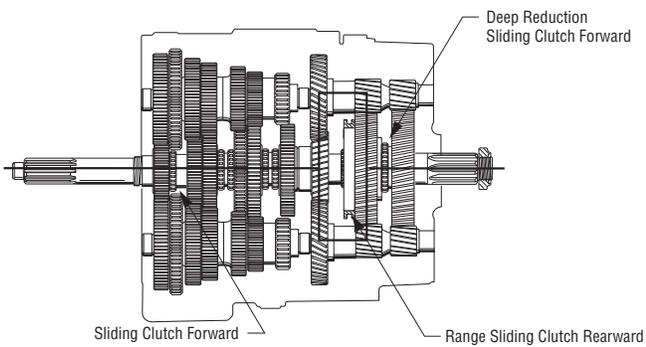


3rd Gear

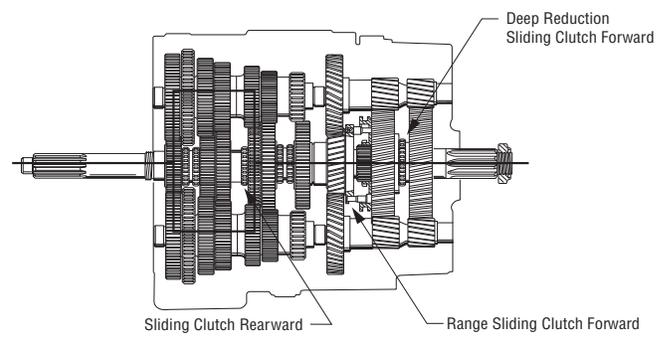


4th Gear

Power Flow


RTO-1X707LL/DLL/MLL Continued

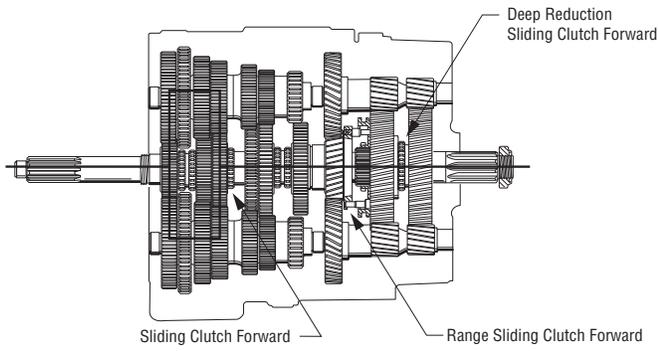

5th Gear

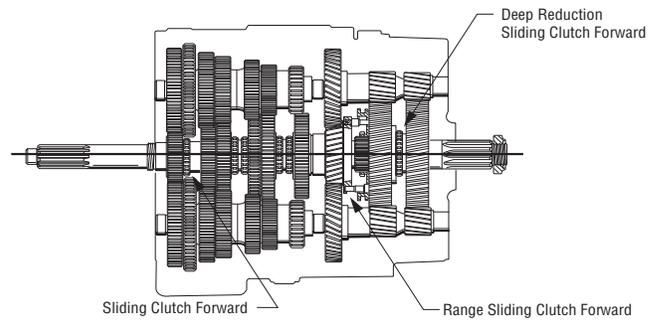


6th Gear

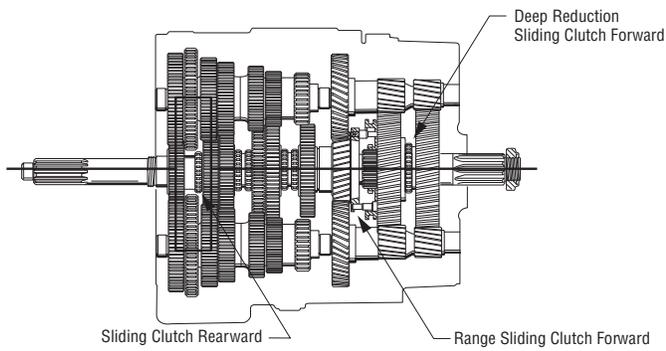


7th Gear


RT0/X-1XX08LL

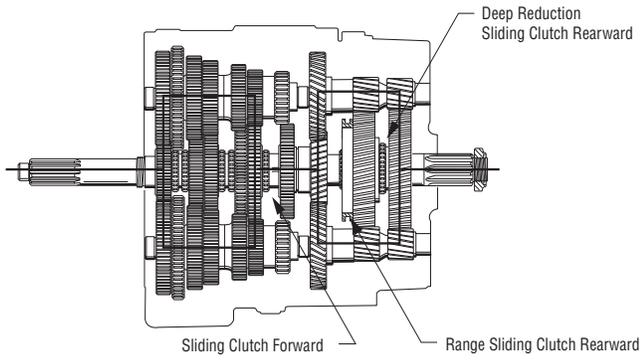


Low Low

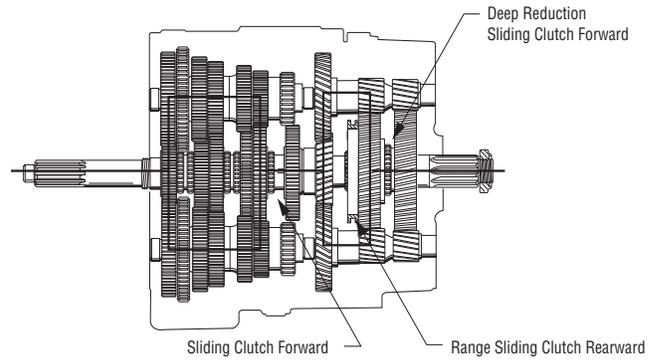


Low

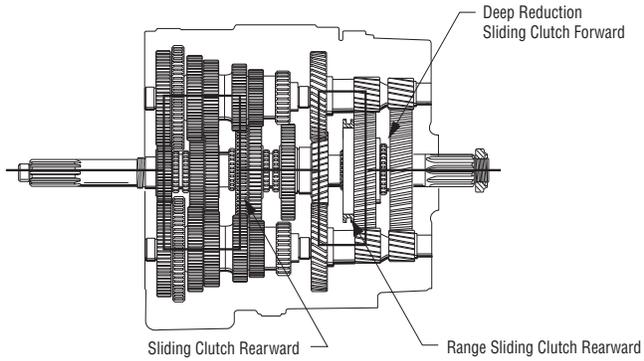


1st Gear

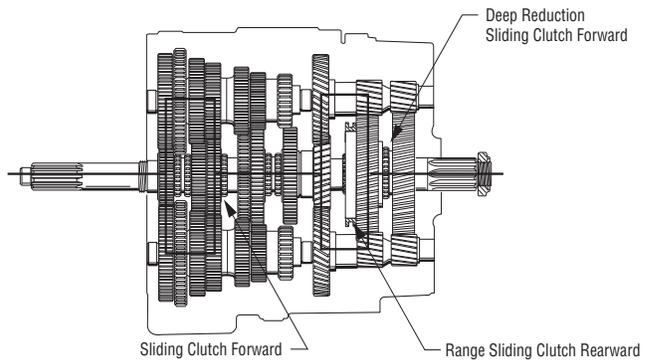

2nd Gear

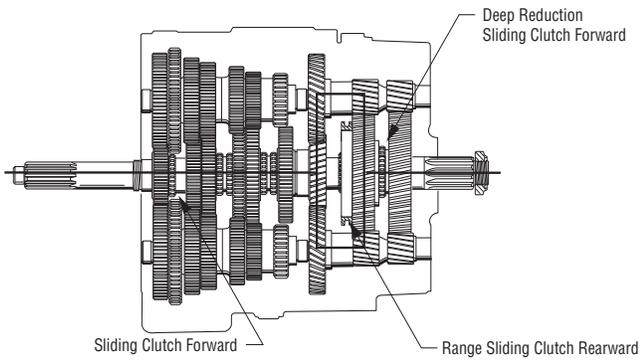

3rd Gear

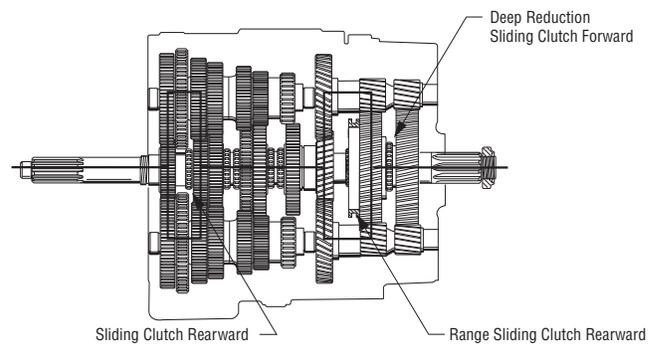


4th Gear


General Information

Power Flow


RT0/X-1XX08LL Continued

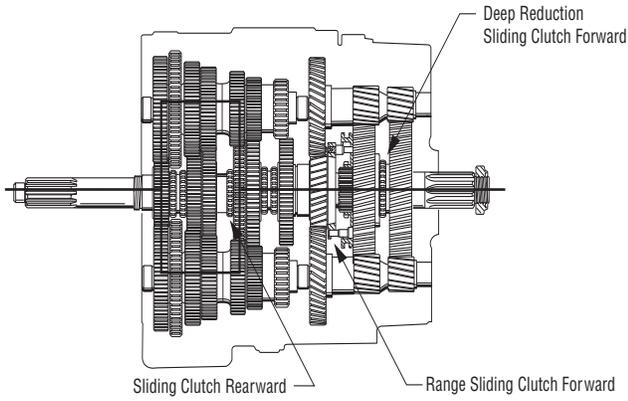


5th Gear

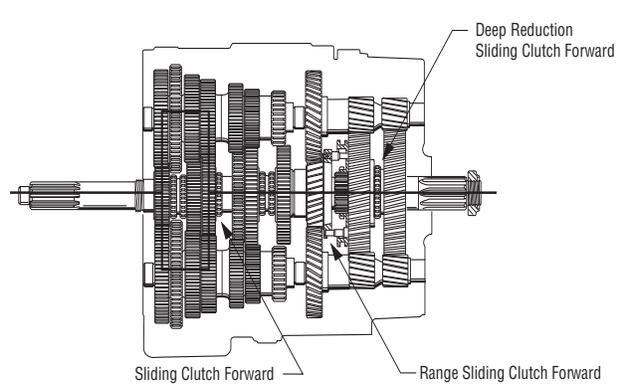

6th Gear

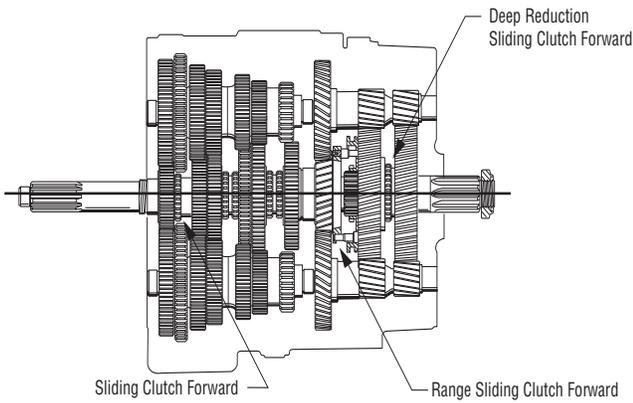


7th Gear

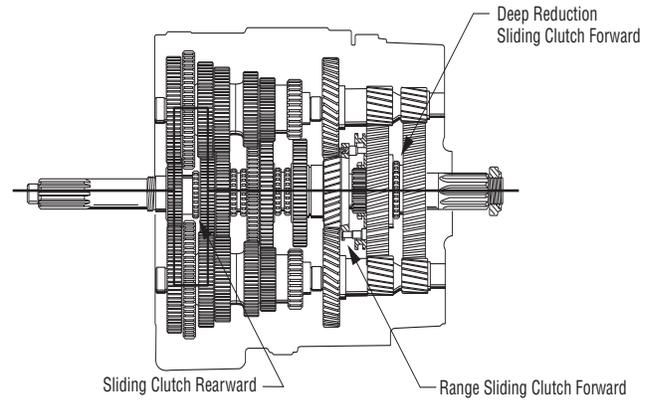


8th Gear


RTO-1XX09MLL

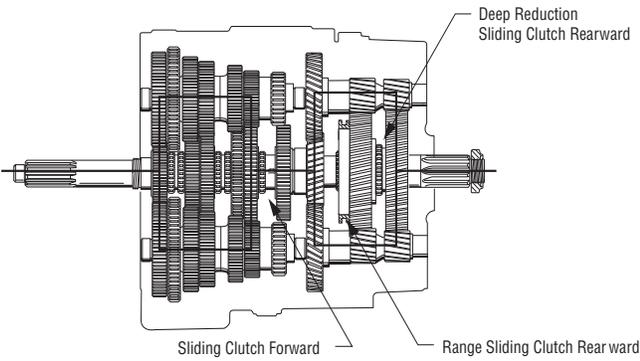


Low Low 1

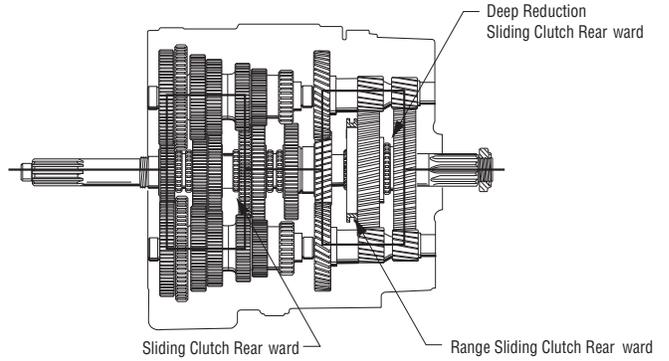


Low Low 2

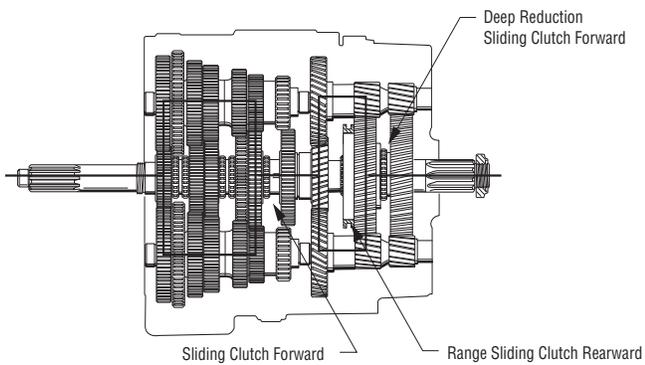


Low

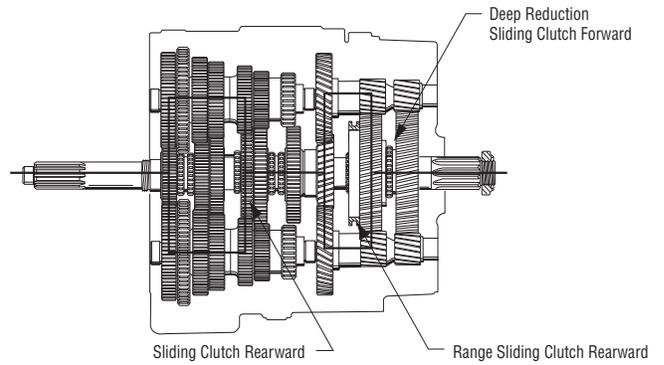

1st Gear

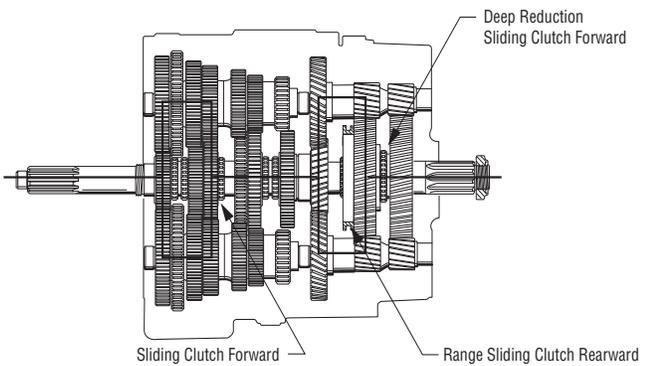


2nd Gear

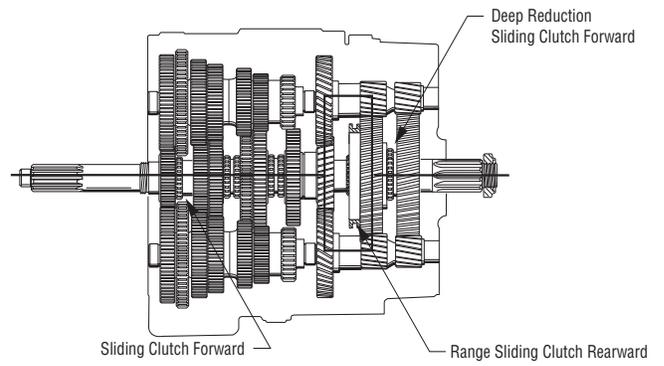


3rd Gear

Power Flow


RTO-1XX09MLL Continued

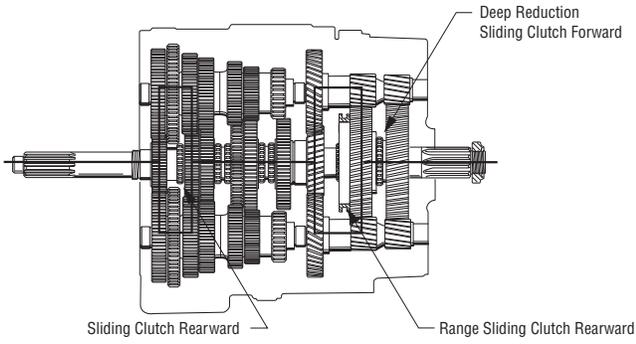


4th Gear

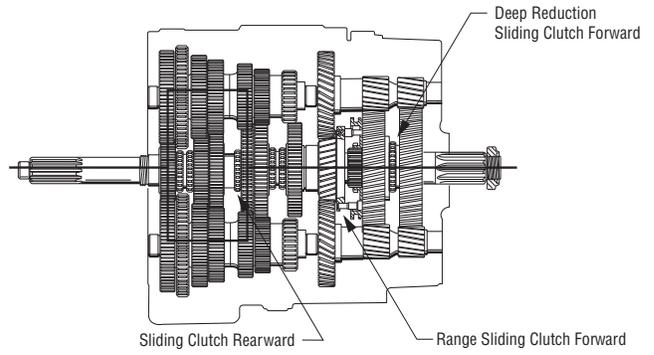


5th Gear

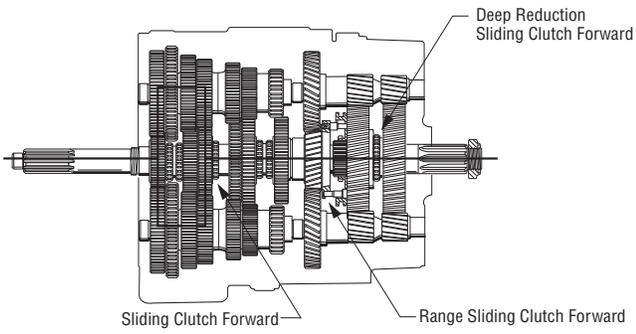

6th Gear

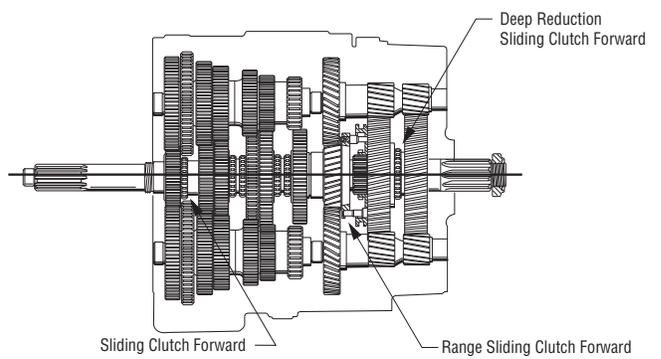


7th Gear

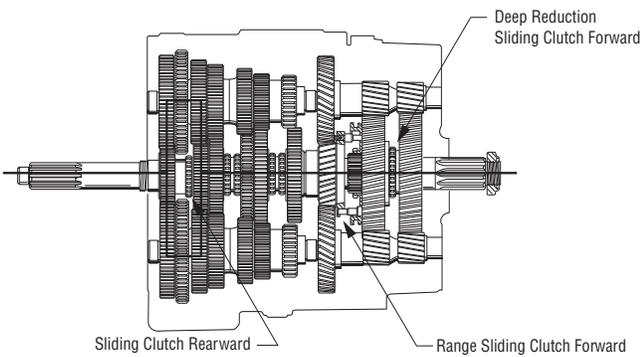


8th Gear


RT/O/X-1XX15

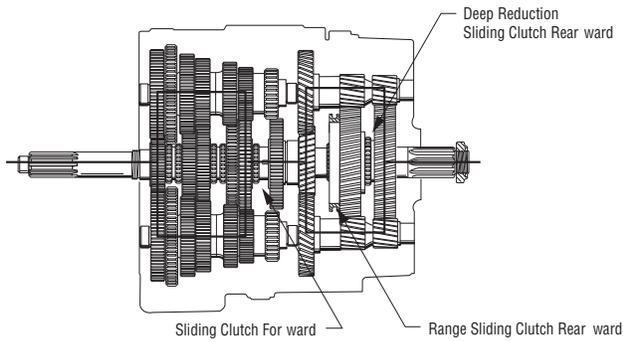


Deep Reduction-1

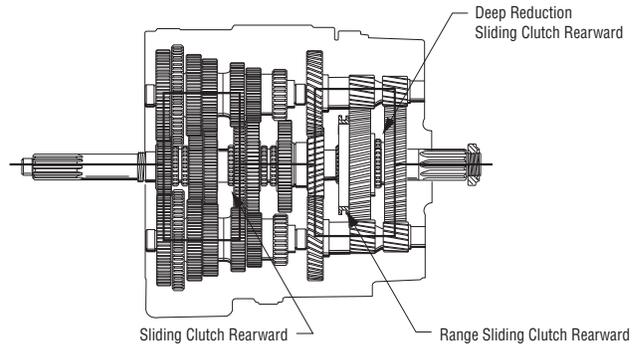


Deep Reduction-2

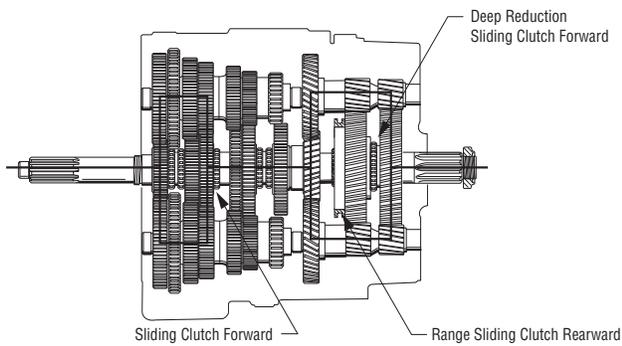


Deep Reduction-3

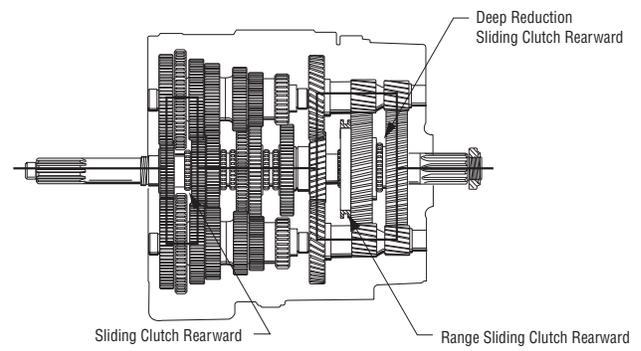


(RT) Deep Reduction-4, (RTO) Deep Reduction-5

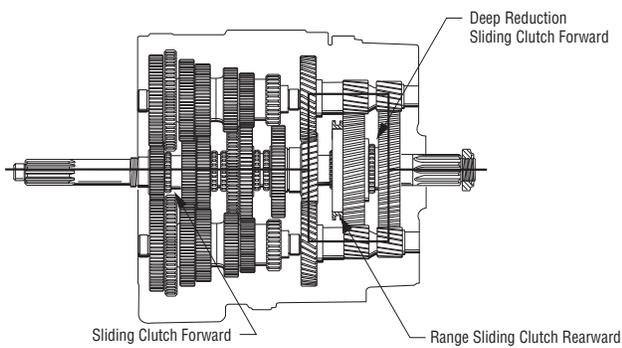


(RT) Deep Reduction-5, (RTO) Deep Reduction-4

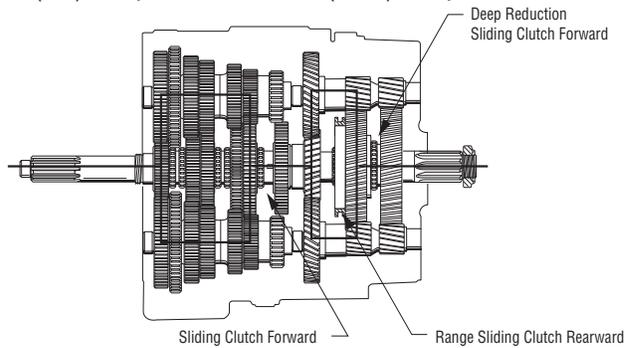

1st Gear - Low Range

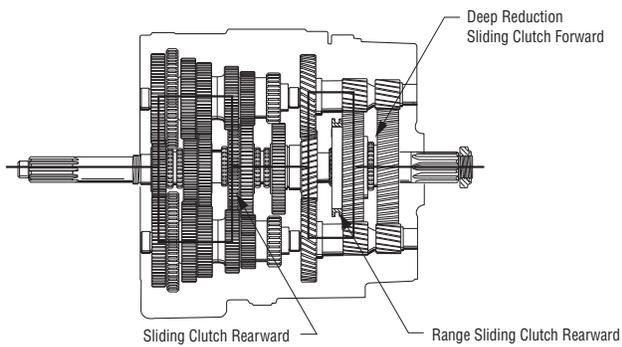


2nd Gear - Low Range

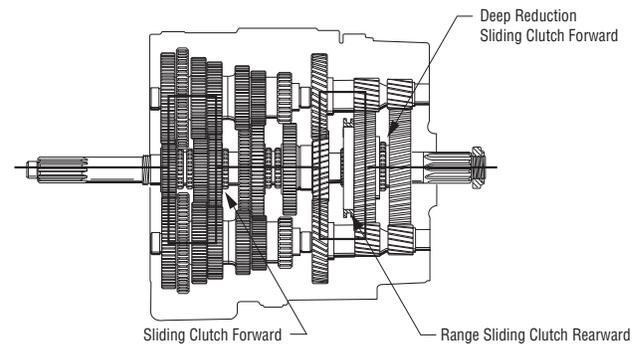


3rd Gear - Low Range

Power Flow


RT/O/X-1XX15 Continued

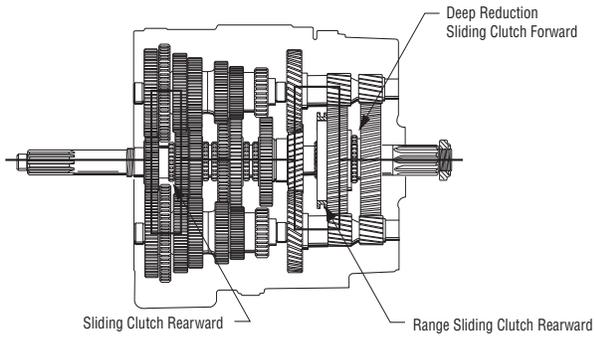


(RT) 4th Gear, (RTO) 5th Gear

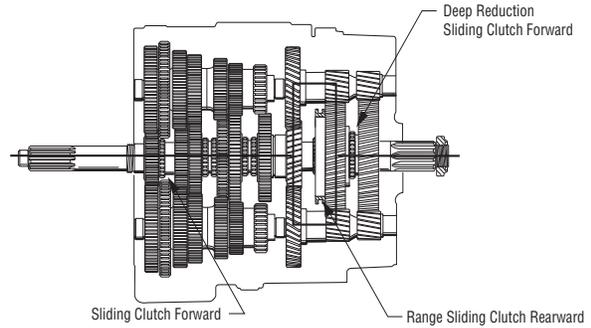


(RT) 5th Gear, (RTO) 4th Gear

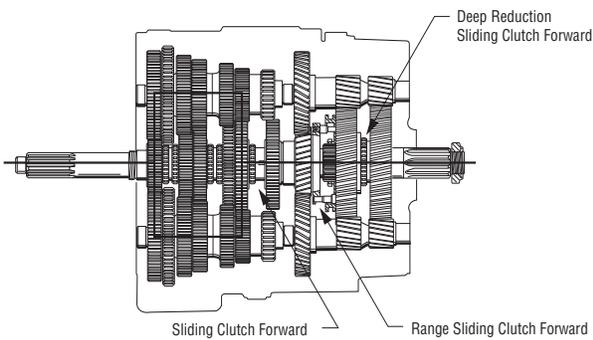


6th Gear

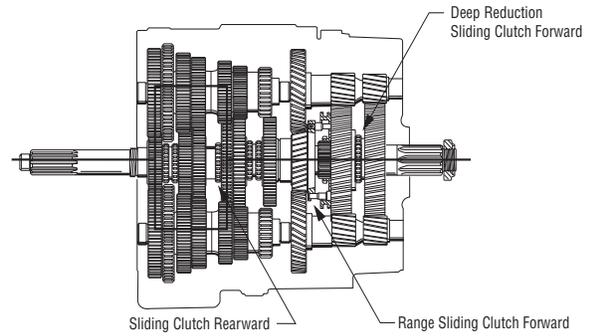


7th Gear

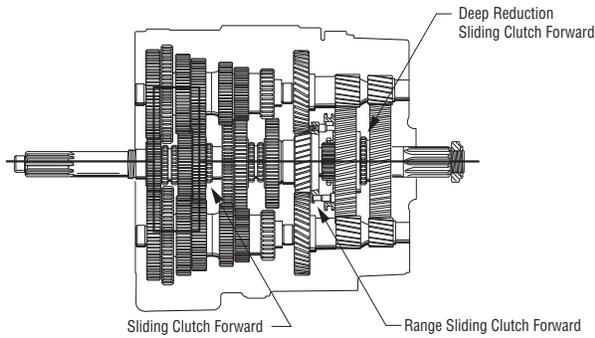

8th Gear

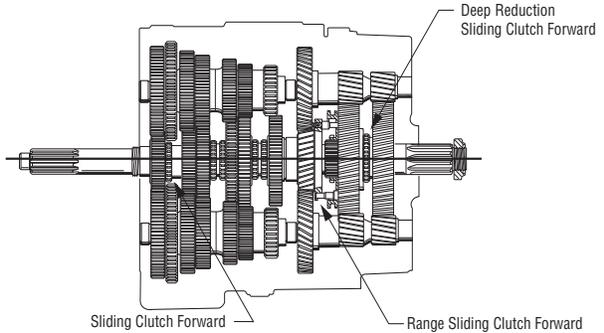

(RT) 10th Gear, (RTO) 9th Gear

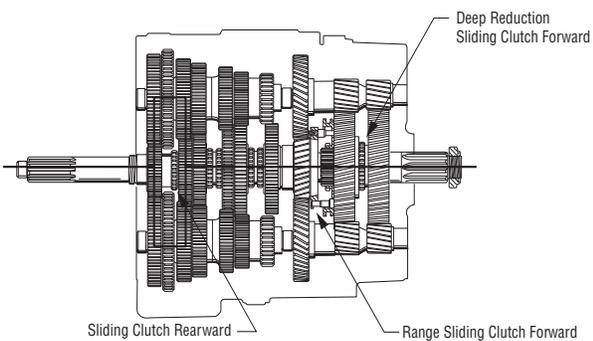


(RT) 9th Gear, (RTO) 10th Gear

Air System Overview

Pressurized air from the vehicle's air system is used to shift the transmission low/high range and deep reduction ratios. The low/high range and deep reduction gearing and shift mechanisms are located in the auxiliary section of the transmission. The vehicle operator controls these shifts with two separate switches on the shift knob (master control valve). The following components are part of the air shift systems.

Air System Components

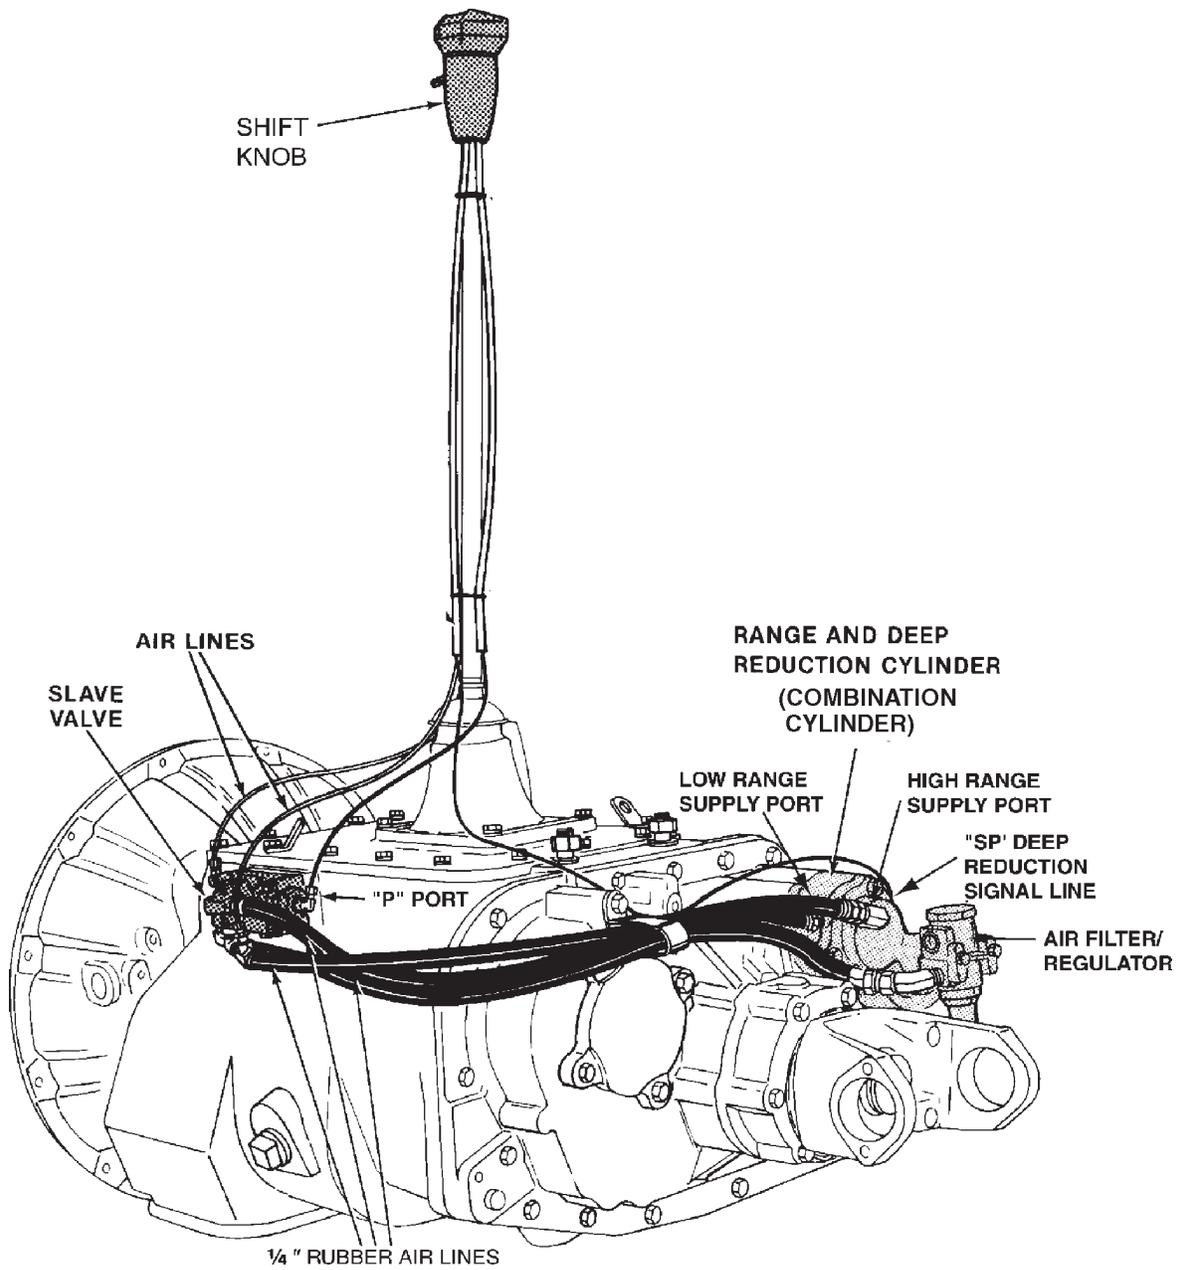


General Information

Air System

Shift Knob

The shift knob contains two switches. 1) The range selector lever on the front of the knob is moved down to select low range. When the range selector lever is moved up, high range is selected. 2) A blue deep reduction button on the side of the shift knob is moved forward to select the deep reduction ratios and moved rearward for remaining ratios. A mechanical interlock prevents moving the deep reduction button forward when the range selector lever is up in high range.

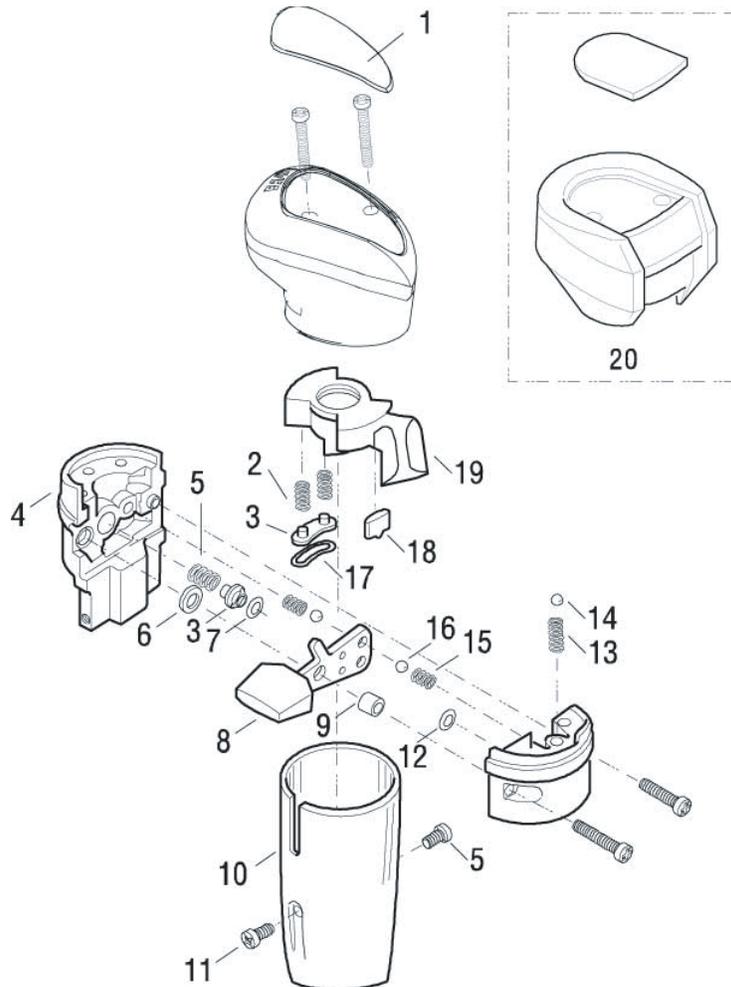


Component Nomenclature and Auxiliary Countershaft Sectional View

- | | |
|-------------------|--------------------------|
| 1. Medallion | 11. Screw |
| 2. Spring | 12. O-Ring |
| 3. Retainer | 13. Spring |
| 4. Housing | 14. 5/32" Ball |
| 5. Spring | 15. Spring |
| 6. Washer | 16. Ball |
| 7. O-Ring | 17. Seal |
| 8. Range Selector | 18. Detent |
| 9. Pin | 19. Splitter Button |
| 10. Cover | 20. Old Style Shift Knob |

Air Filter/Regulator

The filter / regulator assembly filters the vehicle supply air and regulates the pressure to 58 - 63 PSI. Two holes in the front face of the air filter / regulator assembly supply air to the range cylinder cover. The filter element can be removed by turning out the end cap.

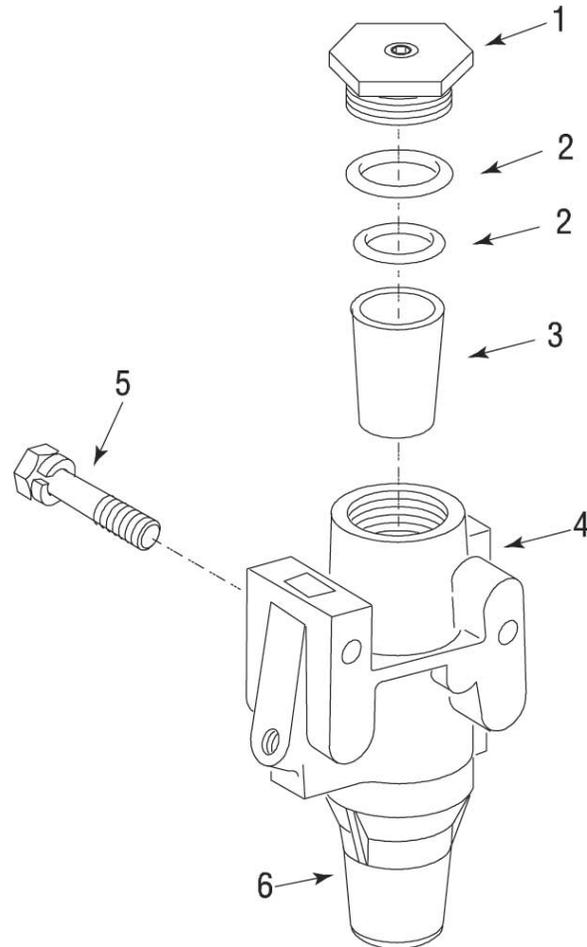

Component Nomenclature and Auxiliary Countershaft Sectional View


- | | |
|-------------------|------------------|
| 1. End Cap | 4. Housing |
| 2. O-Rings | 5. Capscrews |
| 3. Filter Element | 6. Air Regulator |

General Information

Air System

Slave Valve

The slave valve controls the supply of air to the low and high range sides of the range shift cylinder. A small air line from the shift knob (master control valve) provides a signal pressure to the slave valve.

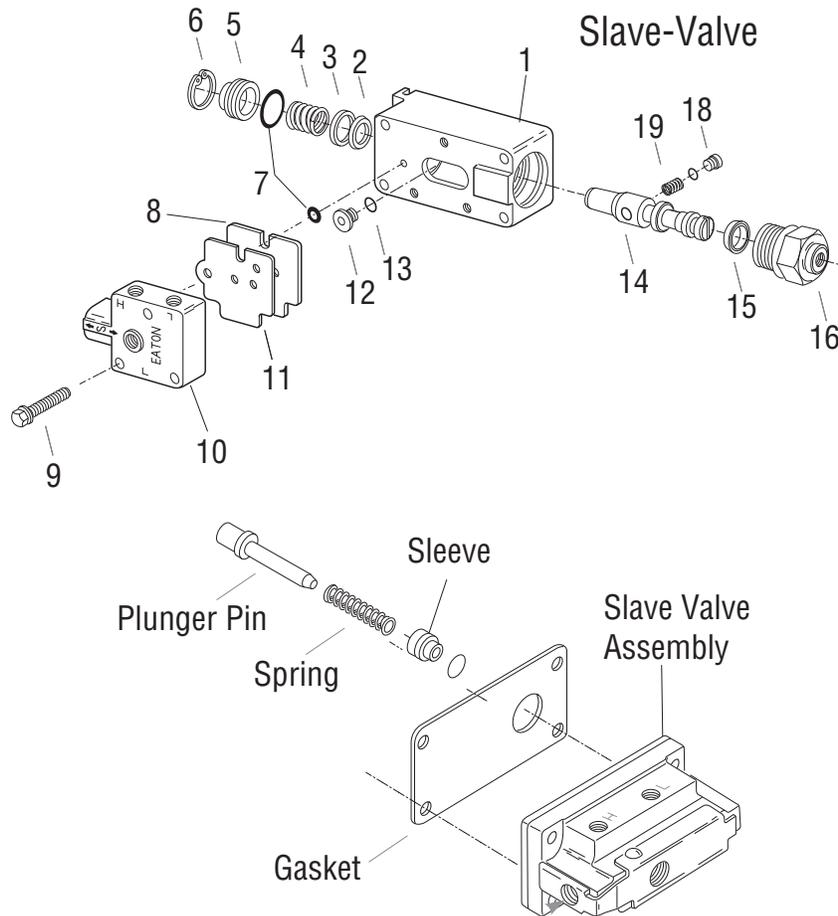


Poppet-Type

Component Nomenclature and Auxiliary Countershaft Sectional View

- | | |
|------------------------|--------------|
| 1. Slave Valve Housing | 11. Gasket |
| 2. "U" Seal | 12. Seal |
| 3. Washer | 13. O-Ring |
| 4. Spring | 14. Piston |
| 5. Plug | 15. "U" Seal |
| 6. Snap Ring | 16. Cap |
| 7. O-Rings | 17. O-Ring |
| 8. Plate | 18. Seal |
| 9. Capscrew | 19. Spring |
| 10. Cap | |

Slave Valve Preselection System

This interlock mechanism prevents the slave valve from shifting when the transmission is engaged into gear. The air valve shaft is moved towards the slave valve by the shift rails when the transmission is shifted into gear. A spring pushes the air valve shaft back when the front section is shifted into a neutral position.

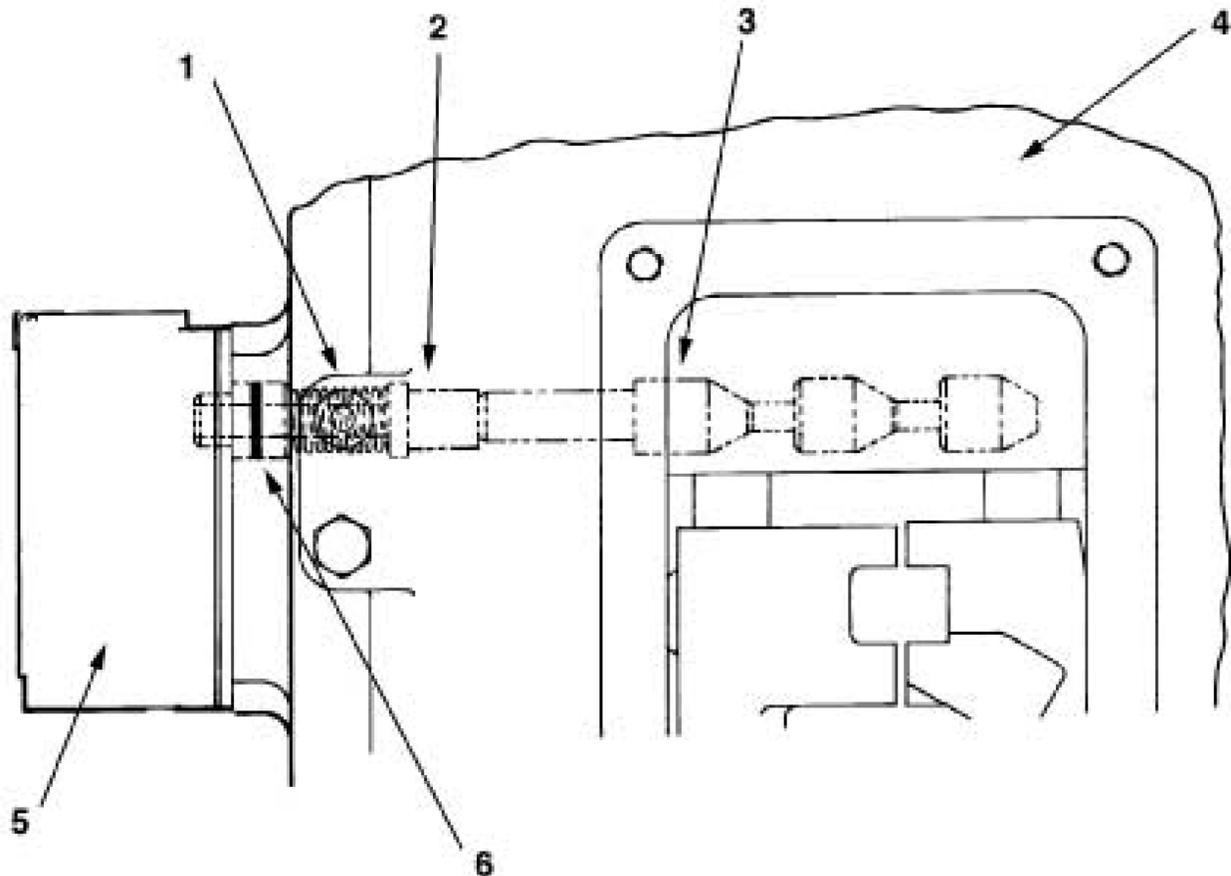

Component Nomenclature and Auxiliary Countershaft Sectional View

- | | |
|---------------------|----------------------|
| 1. Actuation Spring | 4. Shift Bar Housing |
| 2. Actuating Pin | 5. Slave Valve |
| 3. Air Valve Shaft | 6. Alignment Sleeve |


Air System

Range Cylinder

Within the range cylinder is a piston which is fastened to the range yoke bar. Air pressure on the front side of the piston shifts the range sliding clutch into low range ratio. Air pressure on the rear side shifts the range sliding clutch into high range ratio.

Deep Reduction Cylinder


The deep reduction cylinder contains a piston and reduction yoke bar. Air pressure on the front side of the piston shifts the transmission into the deep reduction ratio. Air pressure on the rear of the piston shifts the transmission out of deep reduction.

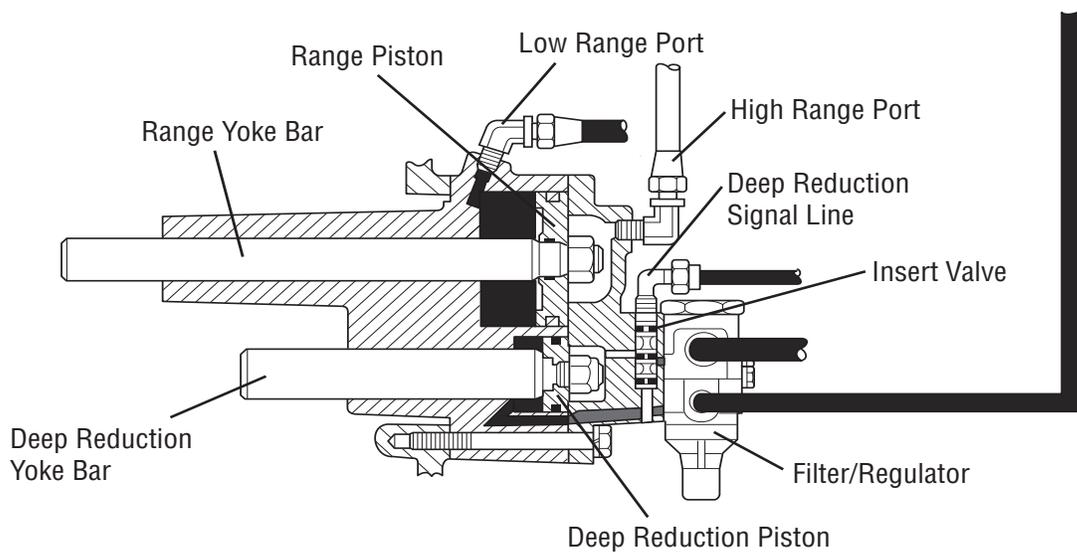


Insert valve

The insert valve is a small 3/16" diameter self-contained switching valve which is located adjacent to the deep reduction cylinder. When deep reduction is selected at the shift knob (master control valve), an air pressure signal is applied to the insert valve which then exhausts the air on the rear side of the deep reduction cylinder piston.

LO Range and HI Range

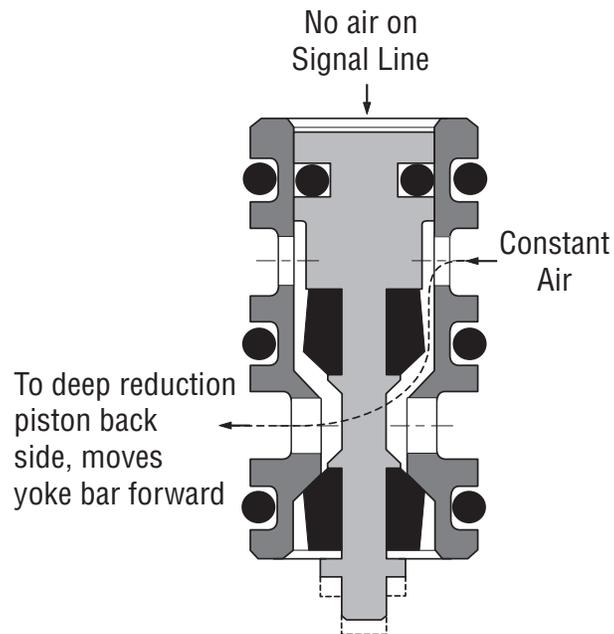

Deep Reduction

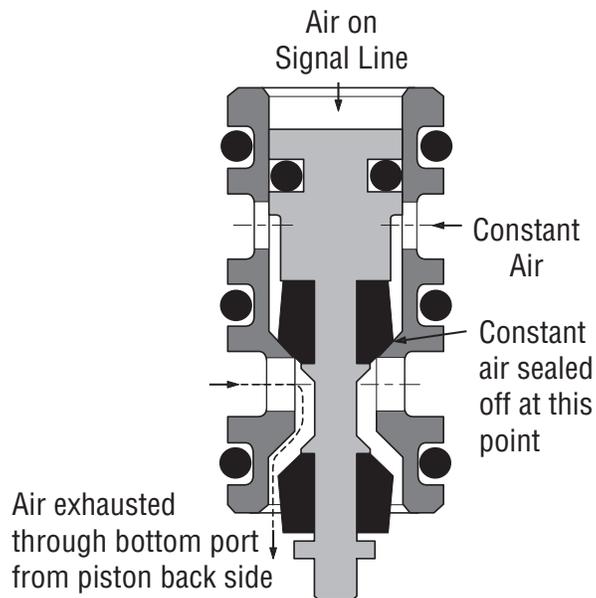

Deep reduction piston moves rearward due to constant air on front side.


Air System

Low Range


1. Vehicle supply air 110 - 130 PSI is supplied to inlet port on filter regulator where it is filtered and regulated to 58 - 63 PSI.
2. Thru a 1/4" I.D. rubber air line, a constant 58 - 63 PSI regulated air is supplied to the "S" (supply) port on the slave valve.
3. Thru a 5/32" or 1/8" air line, a constant 58 - 63 PSI regulated air is also supplied to the "S" (supply) port on the shift knob.
4. The driver selects low range by moving the range selection lever down. This allows the constant supply air at the shift knob to exit at the "P" (pilot) port air line. This 1/8" or 5/32" "P" air line connects to the "P" (pilot) 1/8" or 5/32" "P" air line connects to the "P" (pilot) port on the slave valve. The air pressure on the "P" line causes a valve within the slave valve to move to the low range position.
5. The constant supply air at the slave valve is now supplied thru a 1/4" hose to the low range port on the range cylinder. This air pressure moves the range piston, range bar, range yoke, and range sliding clutch rearward to shift the transmission into low range.

Note: The slave valve preselection system interlock will prevent the slave valve from changing from low to high or vice versa if the transmission is engaged in a front section gear. This system allows the driver to "preselect" by moving the range selection lever while still in gear, the range change will then occur as the driver moves the shift lever through neutral.


Roadranger Valve

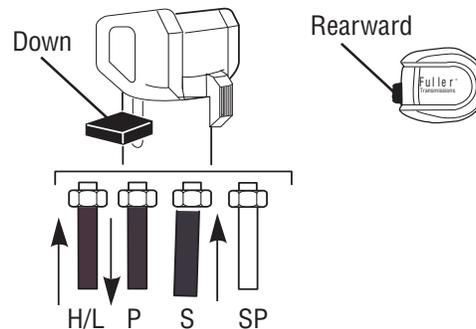

19470 or A-5000 Slave Valve

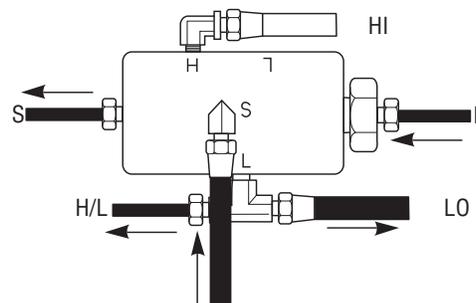

Cylinder Assembly

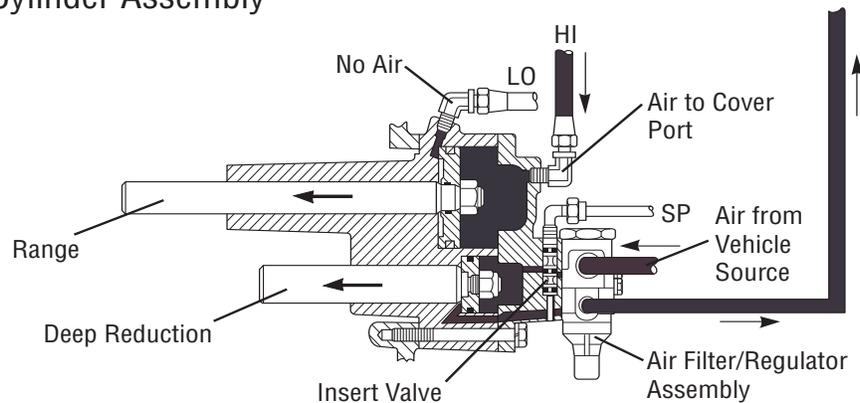


High Range


1. Vehicle supply air 110 - 130 PSI is supplied to inlet port on the filter regulator where it is filtered and regulated to 58 - 63 PSI.
2. Thru a 1/4" I.D. rubber air line, a constant 58 - 63 PSI regulated air is supplied to the "S" (supply) port on the slave valve.
3. Thru a 5/32" or 1/8" air line, a constant 58 - 63 PSI regulated air is also supplied to the "S" (supply) port on the shift knob.
4. The driver selects high range by moving the range selection lever up. This shuts off the supply air to the "P" line. The air in the "P" line will then exhaust at the shift knob port "E". With the air pressure off of the "P" port at the slave valve, a the valve will shift and air will be supplied to the high range "H" port.
5. The constant supply air at the slave valve is now supplied thru a 1/4" hose to the high range port on the range cylinder. This air pressure moves the range piston, range bar, range yoke, and range sliding clutch forward to shift the transmission into high range.
6. Note: The slave valve preselection system interlock will prevent the slave valve from changing from low to high or vise versa if the transmission is engaged in a front section gear. This system allows the driver to "preselect" by moving the range selection lever while still in gear, the range change will then occur as the driver moves the shift lever through neutral.

Air System


Roadranger Valve

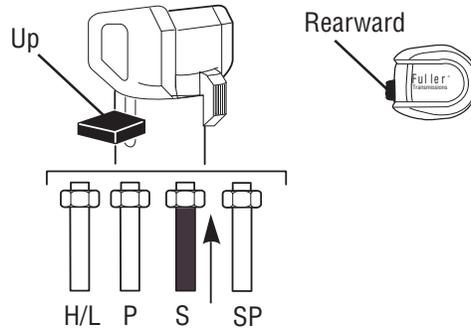

19470 or A-5000 Slave Valve

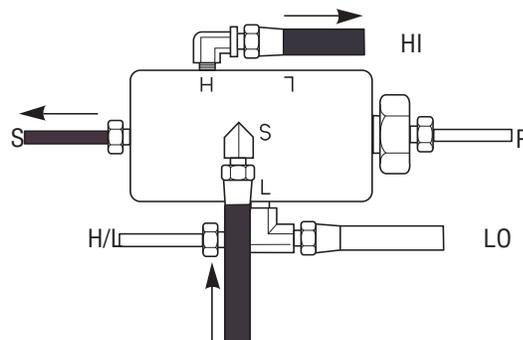


Cylinder Assembly

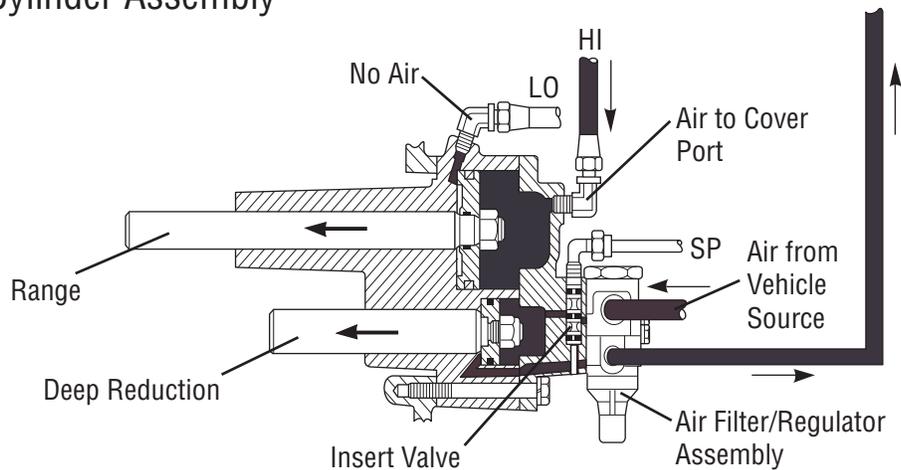


Deep Reduction

Roadranger Valve

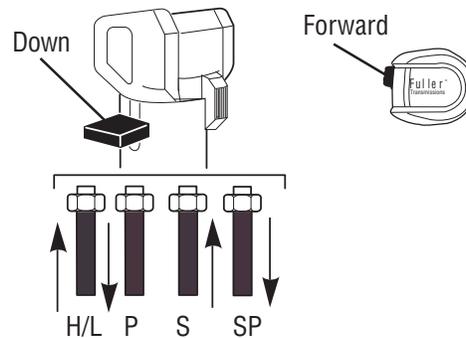

1. A tee fitting on the low range port of the slave valve will supply air through a 5/32" or 1/8" air line to the "H/L" port on the shift knob. Because this line is connected to the low range port, air is only available when low range has been selected.

19470 or A-5000 Slave Valve

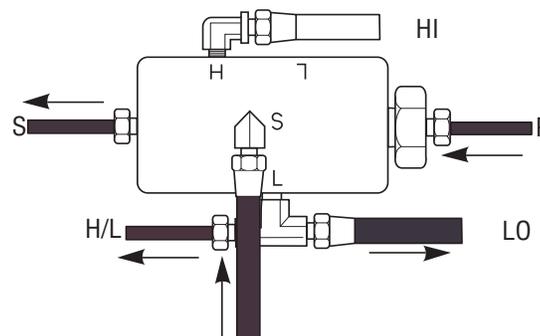


2. When the deep reduction button is moved forward, air from the "H/L" port will pass through the shift knob to the "SP" port. A 1/8" or 5/32" air line connected to the shift knob transfers this air to the insert valve at the deep reduction cylinder cover.
3. When air is applied to the Insert Valve, the valve will shut off the constant air to the rear of the deep reduction piston. The air on the rear of the deep reduction piston will exhaust through the insert valve and out a hole in the cylinder cover. Constant air on the front of the deep reduction piston will move the deep reduction piston, bar, yoke and sliding clutch rearward to engage the deep reduction gear.

Air System

4. To shift out of deep reduction, the button on the shift knob is moved rearward. The air on the "SP" is shut off and exhausted at the shift knob. This results in the insert valve supplying air to the rear side of the deep reduction piston. Supply air is present on both sides of the deep reduction piston, however, due to the greater piston surface area on the rear side, the piston moves forward. This forward movement shifts the deep reduction yoke bar, yoke, and sliding clutch out of the deep reduction ratio.

Cylinder Assembly

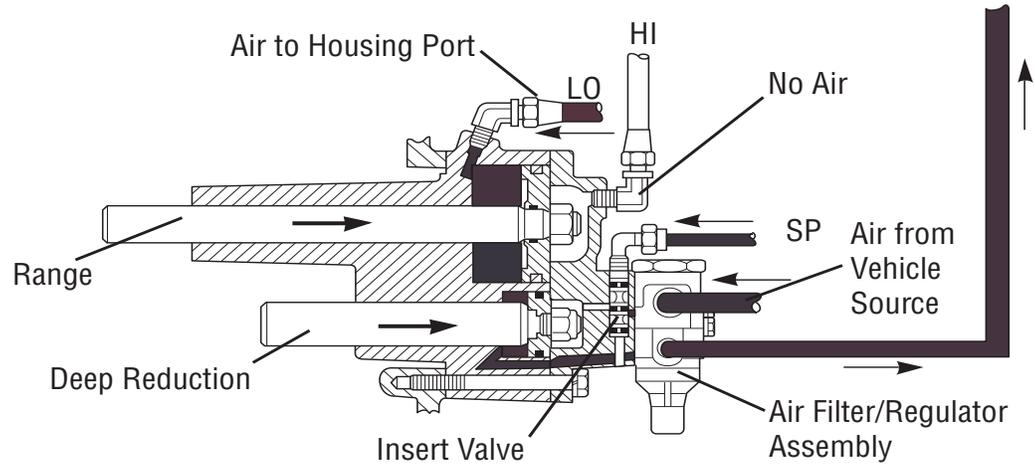

General Troubleshooting Chart

The chart on the following pages contains some of the most common problems that may occur with this transmission along with the most common causes and solutions.

| Complaint | Cause | Corrective Action |
|---|--|---|
| Noise - Growl / Rumble | Torsional Vibration. [Noise may be most pronounced when transmission is in a "float" (low torque) condition. May also be confined to a particular vehicle speed.] | Check driveline angles for proper u-joint working angles. Check driveline for out of balance or damage. Check u-joints for proper phasing. Check clutch assembly for broken damper springs. Check for inadequate clutch disc damping. |
| | Transmission bearing or gear failure. [Noise may be most pronounced under hard pull or coast (high torque).] | Check transmission oil for excessive metal particles. |
| Noise - Growl / Rumble at Idle (Idle Gear Rattle) | Excess engine torsional vibration at idle. | Check for low engine RPM. Check for uneven engine cylinder performance. Check for proper clutch damper operation. |
| Noise - High Pitched Whine | Gear Noise. Isolate as to axle or transmission noise. If transmission, isolate to specific gear or gears. | Check for worn or defective shift lever isolator. Check for direct cab or bracket contact with transmission ("grounding"). Check for proper driveline u-joint working angles. Check for damaged or worn gearing. |

General Information

General Troubleshooting

General Troubleshooting Chart (cont)

| Complaint | Cause | What to do next |
|--|---|---|
| Hard Lever Shifting (Shift lever is hard to gear into or out of gear) | Master clutch dragging. | Check master clutch for proper disengagement. Check master clutch for proper adjustment (both release bearing travel and clutch brake height). |
| | Shift linkage problem. (Remote shifter) | Check shift linkage or cables for proper adjustment, binding, lubrication, or wear. |
| | Shift bar housing problem. | Check shift bar housing components for binding, wear, or damage. |
| | Transmission mainshaft problem. | Check mainshaft for twist. Check sliding clutches for binding, damage, or excessive wear. |
| | Driver technique. | Driver not familiar or skilled with proper double-clutching technique. Driver contacting the clutch brake during shifts. |
| Shift Lever Jumpout (Shift lever comes out of gear on rough roads) | Loose or worn engine mounts. | Check engine mounts for damage, wear, or excessive looseness. |
| | Shift lever problem. | Check shift lever floor boot for binding or stretching. Check shift lever isolator for excessive looseness or wear. Check for excessive offset or overhang on the shift lever. Check for extra equipment or extra weight added to shift lever or knob. |
| | Worn or broke detent spring or mechanism. | Check for broken detent spring. Check for excessive wear on the detent key of detent plunger. Replace detent spring with heavier spring or add additional spring. |

General Troubleshooting Chart (cont)

| Complaint | Cause | Corrective Action |
|---|---------------------------------------|--|
| Shift Lever Slipout (Transmission comes out of gear under torque) | Internal transmission problem. | Check for excessively worn or damaged sliding clutches or shift yokes. |
| Transmission goes to neutral (Shift lever doesn't move) | Low air pressure. | Check air regulator pressure. |
| | Internal transmission problem. | Check for excessively worn or damaged range sliding clutch or yoke. |
| No range shift or slow range shift (Also see Air System Troubleshooting) | Transmission air system problem. | Perform air system troubleshooting procedure. Check for proper air signal from master valve. Check air module test ports for proper air delivery. |
| | Range cylinder problem. | Check for failed or damaged range piston, piston bar, or cylinder. Check for failed or loose range piston snap ring. |
| | Range yoke assembly problem. | Check for failed or damaged range yoke. Check for failed or loose range yoke snap rings. Check for excessively long fastener installed in rear support hole. Check for binding between range yoke bar and range alignment lock cover. |
| | Range synchronizer problem. | Check for failed or damaged range synchronizer, sliding clutch, or mating gear. Check for excessively worn range synchronizer friction material. |
| Grinding Noise on Range Shift | Driver not preselecting range shift. | Instruct driver to preselect range shifts. |
| | Range synchronizer worn or defective. | Check range synchronizer and mating parts for excessive wear or damage. |

Air System

Air System Troubleshooting

The symptoms listed below are covered on the following pages. Before beginning any of those troubleshooting procedures, place the transmission in neutral and move the range selection lever from low to high. Listen for any constant air leak from the shift knob, air module base (exhaust), or transmission breather. If a constant leak is heard, go to that particular leak troubleshooting procedure first.

If you do not see the symptom you need to correct, refer to the General Troubleshooting chart.

Symptom

- Air Leak from Air Module Base (Exhaust Leak)
- No or Slow Range Shift into High (Shift into low range is good)
- No or Slow Range Shift into Low (Shift into high range is good)
- Constant Air Leak from Shift Knob
- Range Shifts in Gear
- Air Leak from Transmission Breather or Transmission Case is Pressurized

Note: Use the air system troubleshooting procedures for part replacement only if the symptom can be duplicated. If the problem is intermittent, parts that are not defective could be replaced.

Note: During all testing, the vehicle air pressure must be greater than 90 PSI (620 kPa). If during testing the pressure falls below 90 PSI (620 kPa), make sure the transmission is in neutral, start the engine and let the pressure build to governor cutoff. After the pressure reaches the governor cutoff, continue testing. The pressure is critical if the vehicle is equipped with a vehicle air system Pressure Protection Valve that would shut off the air supply to certain air circuits if the system pressure dropped below a preset level.

Note: A 0-150 PSI (0-1034 kPa) air gauge with a 1/16" male pipe thread fitting attachment is required for some of the test procedures.



Prior to removing the air module, exhaust the air from it. Failure to exhaust the air module may result in personal injury or damage to parts from the sudden release of air.



Use care when removing the test port pipe plugs. If air pressure is present on the plug, it can become a projectile during removal. When removing the "L" plug or "H" plug, pressure can be shut off by selecting the opposite range mode. If removing the "F" plug, exhaust the air to the module inlet.

Procedure 1: Symptom - Air leak at shift knob

Normal operation:

A burst of air will be exhausted from the shift knob when moving the range selector from low to high. This is the air being exhausted from the "P" air line.

A burst of air will be exhausted from the shift knob when moving the deep reduction button rearward (shifting out of deep reduction). This is the air being exhausted from the "SP" air line.

Possible causes:

- Incorrectly attached air lines
- Internal leak in slave valve
- Internal leak at insert valve
- Internal leak at shift knob

| | Procedure | Result | What to do next |
|--------|--|--|---|
| Step A | Remove lower skirt on shift knob. Check for leaking fitting at the shift knob. | Leak found. No leak found. | Repair leaking fitting or air line. Go to step B. |
| Step B | Check air lines to make sure all lines are connected to the proper ports on the shift knob. Reversal of "S" and "P" lines will result in a constant leak from the exhaust when high range is selected. Reversal of the H/L and "SP" lines will result in a constant leak when the deep reduction button is rearward. | Air lines are not connected to the proper ports. Air lines are connected to proper ports. | Connect lines properly. Go to step C. |
| Step C | Move the range selector lever down to Low range. Check for constant air flow from the exhaust "E" port. | Constant air flow from "E" port. No air flow from "E" port. | Replace knob. Go to Step D. |
| Step D | Move the range selector up to high range. Disconnect the small air line connected to the "P" port of the shift knob. Check for air flow from the port and air line. | Constant air is leaking from the "P" port or the "E" port. Air is coming out of the disconnected air line. Air is not leaking from either port or disconnected air line. | Repair or replace the shift knob. 1. Verify that the air line is connected to the slave valve "p" port. 2. If properly connected, replace the slave valve. Go to Step D. |

Procedure 2: Symptom - Air leak at slave valve

Normal operation:

A momentary exhaust of air at the slave valve occurs during a range shift. The air from the low side of the range cylinder is exhausted as air pressure is applied to the high range side. Likewise, air from the high range side of the piston is exhausted as air pressure is applied to the low range side. The exhaust port is located at the slave valve to transmission mounting interface.

Possible Causes:

- Internal leak in range cylinder
- Internal leak in slave valve.

| | Procedure | Result | What to do next |
|--------|---|---|---|
| Step A | Confirm that air is leaking from the exhaust port on the slave valve and not a fitting or air line. | Air is leaking from fitting or air line. | Repair or replace fitting or air line. |
| | | Air is definitely leaking from slave valve exhaust port. | Go to Step B. |
| Step B | Move range selector down to select low range. Remove the 1/4" I.D. rubber air line at the high range supply port on the range cylinder. Feel for air flow from the open port on the range cylinder. Note: If the air leak at the slave valve only occurs when the transmission is in high range, repeat the above test, but remove the low range air hose and check with high range selected. | Air is flowing from high range supply port on range cylinder. | Remove range cylinder cover and repair leaking range piston or piston seal. After repair, check for proper range operation. |
| | | No air flow from high range port. | Repair or replace slave valve. |

Air System

Procedure 3: Symptom - Air Leak from Transmission Breather or Transmission Case is Pressurized

Normal Operation:

There should be no measurable air flow from the transmission breather.

Possible causes:

- Leak at range yoke bar O-ring
- Leak at deep reduction yoke bar O-ring

| | Procedure | Result | What to do next |
|--------|---|---|--|
| Step A | Listen for the air leak with the transmission shifted to both low and high range. | Leak is only in low range. Leak is in both low and high range. | Remove range cylinder and inspect for damaged range yoke bar, yoke bar O-ring, or range cylinder. Repair as necessary. Remove deep reduction cylinder. Inspect for damaged deep reduction yoke bar, O-ring, or cylinder. Repair as necessary. |

Procedure 4: Symptom: Air leak at deep reduction cylinder cover exhaust port

Normal operation:

A burst of air will exhaust from this port when shifting into deep reduction (the deep reduction button is moved forward while in low range).

Possible causes:

- Damaged/defective insert valve
- Leak past insert valve external O-rings
- Leak past deep reduction cylinder piston

| | Procedure | Result | What to do next |
|--------|--|-----------------------------------|---------------------------------|
| Step A | Remove insert valve. Check for contamination, damaged seals, or sticky movement. Check the insert valve bore in the deep reduction cylinder cover for contamination or damage which would result in leakage past the insert valve O-rings. | Contamination or damage found. | Repair or replace as necessary. |
| | | No contamination or damage found. | Go to step B. |
| Step B | Remove the deep reduction cylinder cover and piston. Check the piston bore for contamination or damage. Check the piston seals for damage. NOTE: Early production transmissions used a paper gasket to seal the piston to the yoke bar, if necessary, replace this configuration with the current design which uses an O-ring. | Contamination or damage found. | Repair or replace as necessary. |

General Information

Air System

Procedure 5: Symptom - No or Slow Range Shift into Low

Normal Operation:

When the range selector on the shift knob is moved down to select low range, air pressure will flow through the shift knob to the 'P' port on the slave valve. The slave valve will direct air pressure through the low range 1/4" rubber hose to the range cylinder to shift the range. There will be a brief burst of air at the slave valve as the high range side of the range piston exhausts. Likewise, when high range is selected, the air pressure in the "P" will be exhausted at the shift knob. This will cause the slave valve to direct air to the rear side of the range cylinder piston. The air pressure on the low range side will be exhausted at the slave valve.

Possible Causes:

- Incorrect air line hook up
- Insufficient air supply to transmission
- Damaged or defective air filter / regulator assembly
- Damaged or defective shift knob master valve
- Damaged or defective slave valve
- Damaged or defective range cylinder
- Damaged or defective range yoke or yoke bar
- Damaged or defective range synchronizer
- Damaged or defective gearing in auxiliary section of transmission

| | Procedure | Result | What to do next |
|--------|---|---------------------------------------|---|
| Step A | Place the shift lever in neutral. Check for constant air leakage at the shift knob, slave valve, and transmission case breather when both low and high range have been selected. | Constant air leak is detected. | Go to the other corresponding symptom first. See beginning of Air System Troubleshooting section. |
| | | No constant leak is detected. | Go to step B. |
| Step B | Place shift lever in neutral. Move range selector up to high range position. At the rear of the transmission, disconnect the 1/4" rubber air line from the low range supply port on the range cylinder. Check for air flow from the low range port. | Air flows from the low range port. | Remove range cylinder cover and repair leaking range piston or piston seal. |
| | | No air flow from low range port. | Go to step C. |
| Step C | Check for air flow from the disconnected air line. | Air flows from disconnected air line. | Go to step F. |
| | | No air flow from disconnected line. | Go to step D. |
| Step D | Install a 100 PSI air gauge in the disconnected air line end. With the shift lever in neutral, move the range selector down to select low range and observe the gauge. | The gauge read 0 PSI. | Go to step F. |

| | Procedure | Result | What to do next |
|--------|---|---|--|
| Step E | Confirm that shift lever is still in neutral. Have an assistant move the range selector up and down between low and high range. Does the pressure measured at the gauge respond rapidly when going from high to low. | <p>The gauge reads pressure but is lower than 58 PSI or higher than 63 PSI.</p> <p>The gauge reads between 58 - 63 PSI.</p> <p>Pressure rapidly changes between 58-63 PSI and 0 at the gauge.</p> <p>Pressure does not change rapidly at gauge.</p> | <p>Replace the filter/regulator and check for proper range operation.</p> <p>Go to step E.</p> <p>Air system appears to be operating satisfactory. Go to step R.</p> <ol style="list-style-type: none"> 1. Check for a plugged or dirty filter in the filter/regulator assembly. 2. Check for a pinched or obstructed 1/4" rubber air line between the filter/regulator and slave valve. 3. Check for a pinched or obstructed 1/4" rubber air line between the slave valve and the test gauge. 4. If all are satisfactory, Go to step F. |
| Step F | Place shift lever in neutral. At the shift knob, move the range selection lever up to select high range. At the slave valve, remove the air line from the "P" port (should be black line). Check for air flow from the disconnected line. | <p>Air flows from the disconnected line.</p> <p>No air flow from the disconnected line.</p> | <ol style="list-style-type: none"> 1. Confirm that the air lines are connected to the correct ports at the shift knob. 2. If the lines are correct, replace the shift knob. <p>Go to step G.</p> |
| Step G | Check for air flow from the "P" portion the slave valve. | <p>Air flows from this port.</p> <p>No air flow from this port.</p> | <p>Replace the slave valve.</p> <p>Continue to step H.</p> |
| Step H | Place the shift lever in neutral. Install a 100 PSI pressure gauge in line with the "P" line. Move the range selector back and forth from low to high range. The gauge should show rapid pressure change. | The gauge responds slowly. | <ol style="list-style-type: none"> 1. Check for a restricted line between the shift knob and slave valve. 2. Check for a restricted exhaust port on the shift knob. |

General Information

Air System

| | Procedure | Result | What to do next |
|--------|--|---|--|
| Step I | If possible, leave air lines attached to slave valve. Unbolt the slave valve from transmission side. Check for free movement of the plunger pin protruding from the case under the slave valve. The pin should extract when the transmission is shifted into gear and retract when shifted into neutral. | <p>The gauge rapidly moves between 58-63 PSI and 0 PSI.</p> <p>Actuating plunger pin does not move freely.</p> <p>Actuating plunger pin moves freely.</p> | <p>3. Check for a plugged or dirty filter in the filter / regulator assembly.</p> <p>4. Check for a pinched or obstructed 1/4" rubber air line between the filter/ regulator and slave valve.</p> <p>5. Check for a pinched or obstructed air line between the slave valve and the "S" port on the shift knob.</p> <p>6. If all are good, replace the shift knob.</p> <p>Go to step I.</p> <p>1. Remove actuating plunger pin and check for damage.</p> <p>2. Check for missing or broken spring.</p> <p>Repair or replace slave valve and check for proper range operation.</p> |
| Step R | <p>If air system has been tested and found to operate satisfactory, the auxiliary section must be removed to inspect for mechanical problem. Remove auxiliary section and inspect for:</p> <ul style="list-style-type: none"> Binding of range yoke bar or piston Damaged or defective range yoke Damaged or defective range synchronizer Cracked c/s weld resulting in gear turning on shaft Damaged or defective range sliding clutch Auxiliary section gearing out of time. | | |

Procedure 6: Symptom - No or Slow Range Shift into High

Normal Operation:

When the range selector on the shift knob is moved down to select low range, air pressure will flow through the shift knob to the 'P' port on the slave valve. The slave valve will direct air pressure through the low range 1/4" rubber supply hose to the range cylinder to shift the range. There will be a brief burst of air at the slave valve as the high range side of the range piston exhausts. Likewise, when high range is selected, the air pressure in the "P" will be exhausted at the shift knob. This will cause the slave valve to direct air to the rear side of the range cylinder piston. The air pressure on the low range side will be exhausted at the slave valve.

Possible Causes:

- Incorrect air line hook up
- Insufficient air supply to transmission
- Plugged filter
- Incorrect regulator pressure
- Damaged or defective shift knob master valve
- Damaged or defective slave valve
- Damaged or defective range cylinder
- Damaged or defective range yoke or yoke bar
- Damaged or defective range synchronizer
- Damaged or defective gearing in auxiliary section of transmission

| | Procedure | Result | What to do next |
|--------|---|---------------------------------------|---|
| Step A | Place the shift lever in neutral. Check for constant air leakage at the shift knob, slave valve, and transmission case breather when both low and high range have been selected. | Constant air leak is detected. | Go to the above corresponding symptom first. See beginning of Air System Troubleshooting section. |
| | | No constant leak is detected. | Go to step B. |
| Step B | Place shift lever in neutral. Move range selector down to low range position. At the transmission rear, disconnect the 1/4" rubber air line from the range cylinder high range supply port. Check for air flow from the cylinder high range port. | Air flows from the high range port. | Remove range cylinder cover and repair leaking range piston or piston seal. After repair, check for proper range operation. |
| | | No air flow from high range port. | Go to step C. |
| Step C | Check for air flow from the disconnected air line. | Air flows from disconnected air line. | Go to step F. |

Air System

| | Procedure | Result | What to do next |
|--------|--|--|---|
| Step D | Install a 100 PSI air gauge in the disconnected air line end. With the shift lever in neutral, move the range selector up to select high range. Observe the gauge. | The gauge reads 0 PSI. | Go to step F. |
| | | The gauge reads pressure but is lower than 58 PSI or higher than 63 PSI. | Replace the filter/regulator and check for proper range operation. |
| | | The gauge reads between 58-63 PSI. | Go to Step E. |
| Step E | Confirm that a shift lever is still in neutral. Have an assistant move the range selector up and down between low and high range. Does the pressure measured at the gauge respond rapidly when going from low to high to low. | Pressure rapidly changes between 58-63 PSI and 0 at the gauge. | Air system appears to be operating satisfactory. Go to Step R. |
| | | Pressure does not respond rapidly at gauge. | <ol style="list-style-type: none"> 1. Check for a plugged or dirty filter in the filter/regulator assembly. 2. Check for a pinched or obstructed 1/4" rubber air line between the filter/regulator and slave valve. 3. Check for a pinched or obstructed 1/4" rubber air line between the slave valve and the test gauge. 4. If all are satisfactory, Go to Step F. |
| Step F | Place shift lever in neutral. At the shift knob, move the range selector up to select high range. At the slave valve, remove the air line from the "P" port (should be black line). Check for air flow from the disconnected line. | Air flows from the disconnected line. | <ol style="list-style-type: none"> 1. Confirm proper air line hook-up at the shift knob. |
| | | No air flow from the disconnected line. | <ol style="list-style-type: none"> 2. If correct hook-up, replace the shift knob. |
| | | | Go to Step G. |
| Step G | Check for air coming out of the slave valve "P" port. | Air flows from this port. | Replace the slave valve. |
| | | No air flow from this port. | Continue to Step H. |
| Step H | Place the shift lever in neutral. Install a 100 PSI pressure gauge in line with the "P" line end. Move the range selection lever back and forth from low to high range. The gauge should show rapid pressure change. | The gauge responds slowly. | <ol style="list-style-type: none"> 1. Check for a restricted line between the shift knob and slave valve. |

Air System

Procedure 7: Symptom - No or slow shift into Deep Reduction

Normal Operation:

When the deep reduction button is moved forward to select deep reduction, air pressure is supplied through the “SP” air line to the insert valve signal port. This air pressure causes the insert valve to exhaust the air pressure on the rear of the deep reduction piston and the piston moves rearward. A burst of air occurs at the deep reduction cylinder exhaust port as this air is exhausted from the piston back side. A burst of air also occurs at the shift knob when the deep reduction button is moved rearward. This is the signal air being exhausted out of the “SP” line.

Possible causes:

- Incorrect air line hook up, Plugged filter.
- Incorrect regulator pressure. Insufficient air supply to transmission.
- Damaged or defective shift knob master valve.
- Damaged or defective deep reduction insert valve.
- Damaged or defective deep reduction piston or cylinder.
- Damaged or defective deep reduction yoke bar or yoke.
- Damaged or defective deep reduction sliding clutch or gearing.

Note: Before completing the following troubleshooting procedure, move the deep reduction button both rearward and forward and check for constant exhaust air at either the shift knob or deep reduction cylinder exhaust port. If a constant leak is noticed, go to that troubleshooting procedure first. In addition, confirm that the low and high range shifts are occurring properly. If not, go to the appropriate range shift troubleshooting procedure before completing the following procedure.

| | Procedure | Result | What to do next |
|--------|---|---|--------------------------------------|
| Step A | Move range selector down to select low range. Move the deep reduction button rearward. At the deep reduction cylinder on the transmission back, remove the small air line which provides the signal to the insert valve (SP line). Make sure this line was connected to the proper port location on the cylinder cover. Check for air flow from the line. | Air flows from the disconnected line. | Go to Step K. |
| | | No air flow from disconnected line. | Go to Step B. |
| Step B | Connect a 100 PSI pressure gauge to the disconnected signal port line. Move the deep reduction button forward. Read the pressure on the gauge. | Gauge reads 0 PSI. | Go to Step F. |
| | | Gauge reads pressure, but is lower than 58 PSI or higher than 63 PSI. | Replace filter / regulator assembly. |
| | | Gauge reads between 58 PSI and 63 PSI. | Go to Step C. |

| | Procedure | Result | What to do next |
|--------|--|--|--|
| Step C | Have an assistant move the deep reduction button forward and rearward. Observe the pressure gauge. | Pressure rapidly changes between 58-63 PSI and 0 PSI at the gauge. | Go to Step D. |
| | | Pressure does not respond rapidly at gauge. | Go to Step F. |
| Step D | Remove the insert valve. NOTE: After the insert valve plug has been removed, cover the opening with a shop rag and apply shop air to the signal line port to blow the insert valve out of it's bore. Catch the valve with the shop rag. If the vehicle air pressure is still present, constant air flow should be blowing out of the insert valve bore. Inspect the insert valve for contamination or damage. Make sure the small piston inside the valve can freely move 1/32". | Insert valve is contaminated, sticking, or damaged. | Replace insert valve, reconnect air line, and check if deep reduction shifts normally. |
| | | Insert valve is clean and small internal piston moves freely. | Go to step E. |
| Step E | Remove the deep reduction cylinder cover and deep reduction piston. Inspect piston and bore for contamination or damage. | Deep reduction cylinder bore or piston is contaminated or damaged. Deep reduction cylinder bore or piston is in good condition. | Repair as necessary, replace insert valve and air line. Check if deep reduction shifts normally 1. Remove deep reduction cylinder assembly. Inspect for contamination or damage causing deep reduction yoke bar to bind in cylinder. Repair as necessary. 2. Remove auxiliary section and inspect deep reduction yoke, sliding clutch, and gearing for damage which would prevent deep reduction shift. Repair as necessary. |

Air System

| | Procedure | Result | What to do next |
|--------|---|-------------------------------------|--|
| Step F | At the shift knob, remove the two screws attaching the lower cover, and slide the lower cover down to access the fittings. Confirm that the air lines are connected to the proper ports. Make sure the shift lever is in neutral. Move the range selector down to select low range, and move the deep reduction button rearward. Disconnect the air line connected to the "SP" port. Check for air flow from the "SP" port. | Air flows from "SP" port. | Replace shift knob. |
| | | No air flow from "SP" port. | Go to Step G. |
| Step G | Move deep reduction button forward. Check for air flow from "SP" port. | Air flows from "SP" port. | <ol style="list-style-type: none"> 1. Check for proper air line connection from "SP" port on shift knob to "SP" port on deep reduction cylinder. 2. Check for obstruction in "SP" air line or fittings. 3. If clear, reconnect the air line at the shift knob, go to step A. |
| | | No air flow from "SP" port. | Go to step H. |
| Step H | Disconnect air line H/L port on shift knob. Check for air flow from the disconnected line. | Air flows from disconnected line. | Replace shift knob. |
| | | No air flow from disconnected line. | <ol style="list-style-type: none"> 1. Check to make sure that the shift lever is in neutral, the range selector is down in low range and the "H/L" line is properly connected to the low range hose at the slave valve. 2. If no air pressure is available on low range hose, perform low range shift troubleshooting procedure to correct this problem. |

Procedure 8: Symptom - Range shifts with shift lever in gear.

Normal Operation:

Range shift should only occur when the shift lever is in neutral. The range selector can be moved up or down while the shift lever is in a gear position, but the shift will not occur until the shift lever is moved to neutral.

Possible Causes:

- Worn or missing actuating pin or air valve shaft.
- Worn shift rail

Procedure:

If the range has been confirmed to shift with the shift lever in gear, unbolt the slave valve from the side of the transmission. Confirm that the actuating pin is present and that it is the proper P/N for the corresponding slave valve. If correct, remove the shift bar housing assembly and check for a worn or damaged air valve shaft or worn shift rails. Replace necessary parts.

Timing

Timing Procedures

Special Instructions

It is essential that both countershaft assemblies of the front and auxiliary sections are “timed.” This assures proper tooth contact is made between mainshaft gears seeking to center on the mainshaft during torque transfer and mating countershaft gears that distribute the load evenly. If not properly timed, serious damage to the transmission is likely to result from unequal tooth contact causing the mainshaft gears to climb out of equilibrium.

Timing is a simple procedure of marking the appropriate teeth of a gear set prior to installation and placing them in proper mesh while in the transmission. In the front section, it is necessary to time only the drive gear set. And depending on the model, only the LO range, deep reduction, or splitter gear set is timed in the auxiliary section.

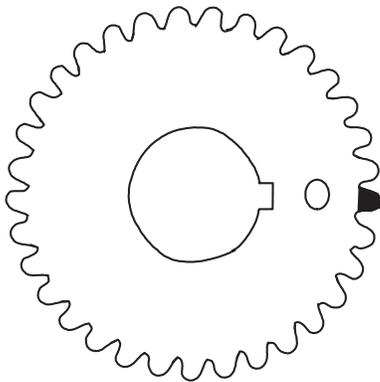


Figure 2


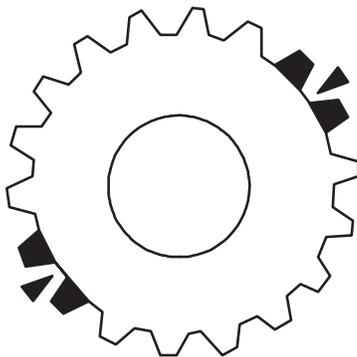


Figure 3

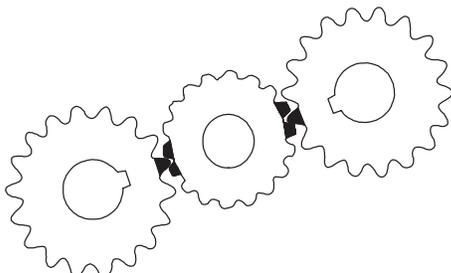

Procedure - Front Section

1. **Marking countershaft drive gear teeth:** Prior to placing each countershaft assembly into the case, clearly mark the tooth located directly over the drive gear keyway as shown. This tooth is stamped with an “O” to aid identification.

2. **Marking main drive gear teeth:** Mark any two adjacent teeth on the main drive gear.

Mark the two adjacent teeth located directly opposite the first set marked on the main drive gear. As shown to the left, there should be an equal number of unmarked gear teeth on each side between the marked sets.

3. **Meshing marked countershaft drive gear teeth with marked main drive gear teeth:** After placing the mainshaft assembly into the case, the countershaft bearings are installed to complete installation of the countershaft assemblies.

When installing the bearings on the left countershaft, mesh the countershaft drive gear marked tooth with either set of main drive gear two marked teeth.

Repeat the procedure when installing the bearings on the right countershaft, make use of the remaining set of main drive gear two marked teeth to time assembly.

Procedure - Time the RT Auxiliary Section

1. Mark a tooth on the reduction gear with a highly visible paint, preferably a yellow or white.



2. Mark a second tooth 180 degrees away from the first. (Ensure the marks are in the correct position by counting the teeth between them. You should have exactly the same number of teeth on the Reduction gear between the marked teeth).



3. Locate the two stamped "O's" on the Countershaft Reduction gears and mark both teeth with a highly visible paint, preferably a yellow or white.

FR and RT Stamp Position



Timing



Left



Right



4. Use a round file or bar to properly align from the marked teeth on the Auxiliary Countershaft to the Auxiliary Splitter gear. When the bar is lined up with the root, between the correct teeth, you will notice it's parallel with the Auxiliary Countershaft. Mark both the teeth with a highly visible paint.

Example of correct alignment:


Bar in correct position parallel with the countershaft, and between the marked Splitter gear and Reduction gear teeth.

Examples of Left or Right Misalignment.

Example showing correct view of Reduction gear timed to Countershaft gears on the bench.

5. Lay the Splitter gear on a flat surface and mark it similar to steps 1 and 2 of this procedure. **(Make sure the teeth are painted on both faces of the Splitter gear front and rear).**
6. Install the Reduction gear and Outputshaft assembly into the Auxiliary case. Then, install the Auxiliary Countershafts and Splitter gear. **(Countershaft retaining straps must be used to hold the Auxiliary Countershafts in place until the Auxiliary section is fully installed. Failure to use the straps could result in the Auxiliary section moving out of time).**

Example of Splitter gear timed to the Auxiliary Countershafts

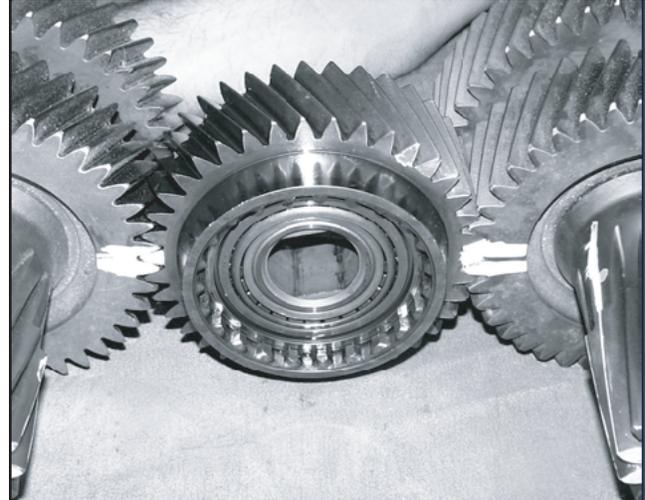

7. To ensure the timing is correct, check that the marked tooth on the Splitter gear is between the two marked teeth on the Auxiliary Countershaft gears as shown in the illustrations below.



In-Vehicle Service Procedure


How to Disassemble Roadranger Valve A-4900

Special Instructions

None

Special Tools

- Typical service tools

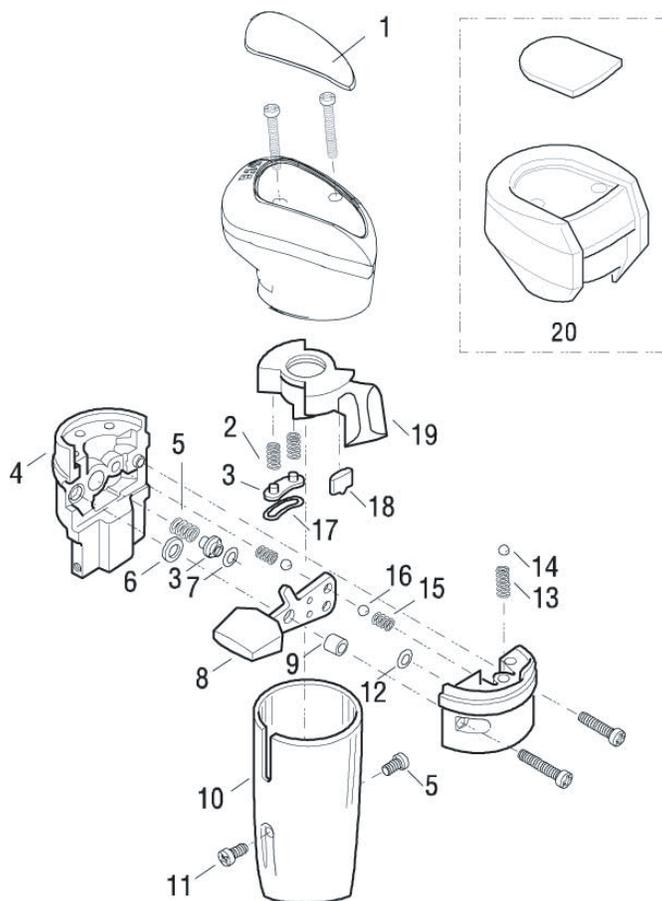

Component Nomenclature and Auxiliary Countershaft Sectional View

- | | |
|-------------------|--------------------------|
| 1. Medallion | 11. Screw |
| 2. Spring | 12. O-Ring |
| 3. Retainer | 13. Spring |
| 4. Housing | 14. 5/32" Ball |
| 5. Spring | 15. Spring |
| 6. Washer | 16. Ball |
| 7. O-Ring | 17. Seal |
| 8. Range Selector | 18. Detent |
| 9. Pin | 19. Splitter Button |
| 10. Cover | 20. Old Style Shift Knob |

Procedure -

1. Remove the two screws holding the bottom cover to the valve and slide the cover down the gearshift lever to expose the air line fittings. Disconnect the air lines.
2. Loosen the jam nut and turn the control valve from the gear shift lever.
3. Pry the medallion from the recess in the top cover.
4. Turn out the two screws to remove the top cover from the valve housing.
5. Turn out the two screws in the side of the valve housing to separate the housing.
6. Remove the range selection lever from the left housing along with the position balls and guide.
7. If necessary, remove the spring and O-ring from the bores in the left housing.
8. If necessary, remove the springs, O-ring and sleeve from the bores in the right housing.

In-Vehicle Service Procedure


How to Assemble Roadranger Valve A-4900

Special Instructions

None

Special Tools

- Typical service tools

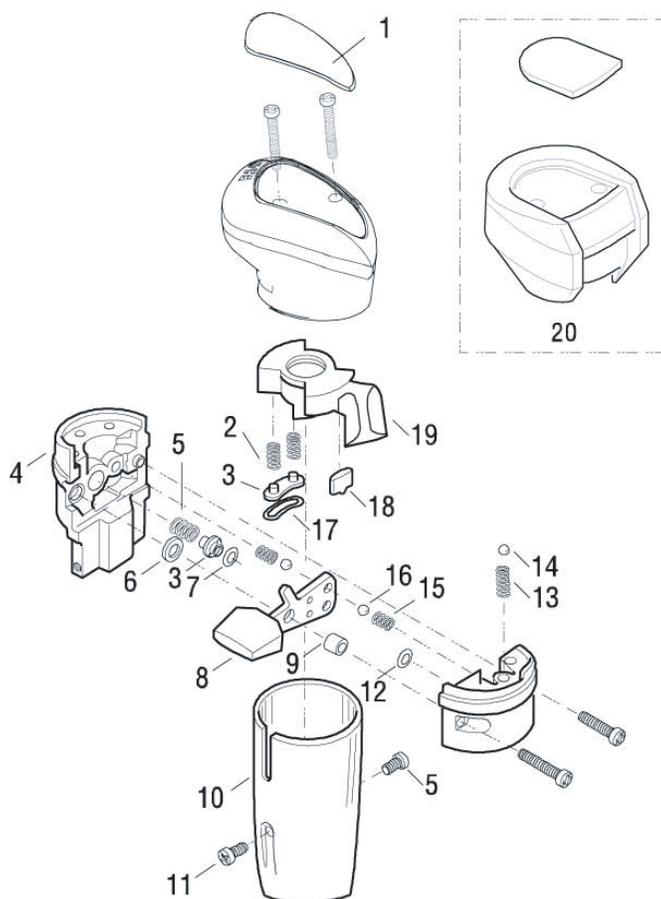

Component Nomenclature and Auxiliary Countershaft Sectional View

- | | |
|-------------------|--------------------------|
| 1. Medallion | 11. Screw |
| 2. Spring | 12. O-Ring |
| 3. Retainer | 13. Spring |
| 4. Housing | 14. 5/32" Ball |
| 5. Spring | 15. Spring |
| 6. Washer | 16. Ball |
| 7. O-Ring | 17. Seal |
| 8. Range Selector | 18. Detent |
| 9. Pin | 19. Splitter Button |
| 10. Cover | 20. Old Style Shift Knob |

Procedure -

1. Refer to the drawing for proper reassembly. Use a very small amount of silicone lubricant on the O-rings to avoid clogging the ports. A small amount of grease on the position springs and balls will help to hold them in place during reassembly
2. Install the control valve on the gear shift lever and tighten the jam nut.
3. Attach the air lines and install the bottom cover.

In-Vehicle Service Procedure

How to Remove the Air Lines and Hoses


Special Instructions

Before removing the air lines and hoses, label or record their location.

If you are unsure of their location, after you remove the air lines and hoses, see the Air System Troubleshooting Guide TRTS0920.

Special Tools

- Typical service tools
- For “push-to-connect” fittings, the Eaton service tool kit K-2394 is recommended. The kit contains the release tool and the tubing cutter.

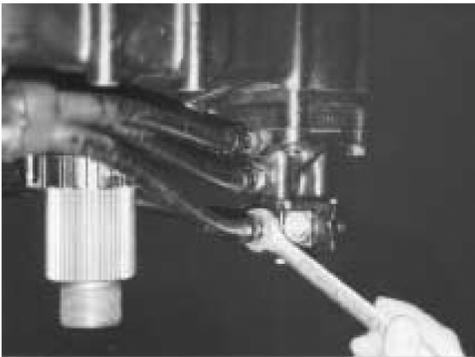


Procedure -

1. Disconnect all air lines and hoses.
2. Inspect the air lines and hoses.

In-Vehicle Service Procedure

3. Inspect air fittings and remove if damaged.

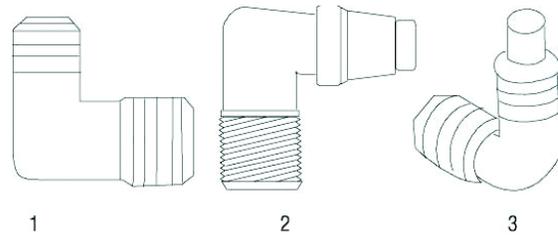

Air Line Fitting Types

1. 1/8" tube-1/8" NPTF
2. Push-to-connect
3. 5/32" tube-1/8" NPTF

In-Vehicle Service Procedure

How to Install the Air Lines and Hoses

Special Instructions

Make sure air lines and hoses are not damaged.

Install the air lines and hoses at their proper location.

All externally threaded 1/8" or 5/32" air lines and pipe fittings that are not coated with pre-applied thread sealant must be coated with Eaton® sealing material #71209 or equivalent for at least 5 complete and consecutive threads.

All externally threaded 1/4" air fittings that are not coated with pre-applied thread sealant must be coated with Eaton sealing material #71209 or equivalent for at least 3 complete and consecutive threads.


For the 1/4" I.D. air hoses, install the fixed nut end first.

To install the air lines and hoses, the air filter/regulator must be in position.

If you are unsure of the air lines and hose location, see the Air System Troubleshooting Guide TRTS0920.

Special Tools

- Typical service tools
- For 'push-to-connect' fittings, the Eaton service tool kit K-2394 is recommended. The kit contains the release tool and a tubing cutter.

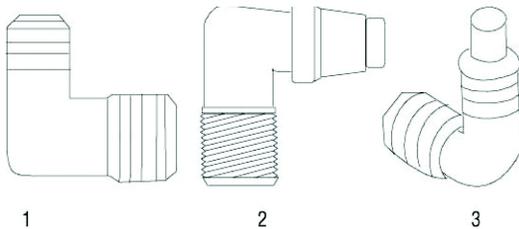

Air Line Fitting Types

1. 1/8" tube-1/8" NPTF
2. Push-to-connect
3. 5/32" tube-1/8" NPTF


Procedure -

1. Replace damaged air fittings.



In-Vehicle Service Procedure

2. Connect the air lines from the slave valve to the range cylinder.

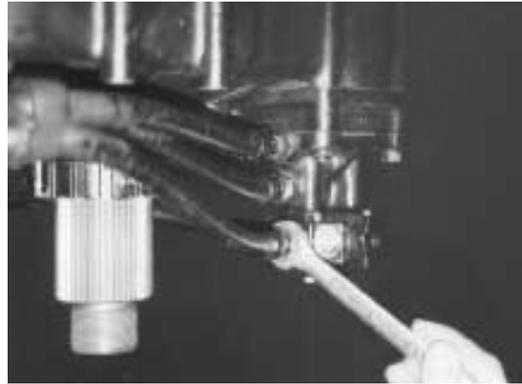

3. Connect all removed air lines and hoses.
4. Make sure the fittings are tight and the lines are not kinked.



In-Vehicle Service Procedure

How to Remove Compression Type Fittings

Special Instructions

⚠ WARNING

A sudden release of air pressure can cause personal injury or damage to equipment. To prevent injury or equipment damage, exhaust the vehicle air tanks


⚠ CAUTION

Small air lines are available in 1/8" or 5/32" sizes. Make sure 1/8" air lines are used with 1/8" fittings and 5/32" lines are used with 5/32" Mixing sizes can cause air leaks or damage to fittings.

Before removing the air lines and hoses, label or record their location.

Special Tools

- Typical service tools

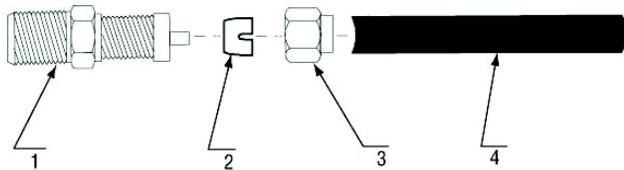

1. Connector
2. Collet
3. Nut
4. Air Line

Procedure -

1. Exhaust the vehicle air tanks before continuing.
2. Loosen the nut on the fitting, and slide it back out of the way.
3. Pull the air line and attached collet from the fitting.
4. Inspect the fitting, air line, collet, and nut for damage or wear. Replace as necessary.

How to Install Compression Type Fittings

Special Instructions

WARNING

A sudden release of air pressure can cause personal injury or damage to equipment. To prevent injury or equipment damage, exhaust the vehicle air tanks

CAUTION

Small air lines are available in 1/8" or 5/32" sizes. Make sure 1/8" air lines are used with 1/8" fittings and 5/32" air lines are used with 5/32" fittings. Mixing sizes can cause air leaks or damage to fittings.

Special Tools


- Typical service tools

Procedure -

1. Check the threads of the fitting for thread sealant. If no sealant is present, apply Eaton thread sealant #71205 or equivalent.
2. Install the fitting.

Note: Do not overtighten the nut. Overtightening can compress the collet too much and cause an air line restriction.

3. Install the air line, collet, and nut. If installing a new fitting, place the collet in the fitting and loosely install the nut. (Do not tighten the nut yet.) Insert the air line through the nut and into the collet. Tighten the nut as usual.
4. Enable the vehicle air system. Allow the air tanks to pressurize, and check for leaks. Repair as necessary.

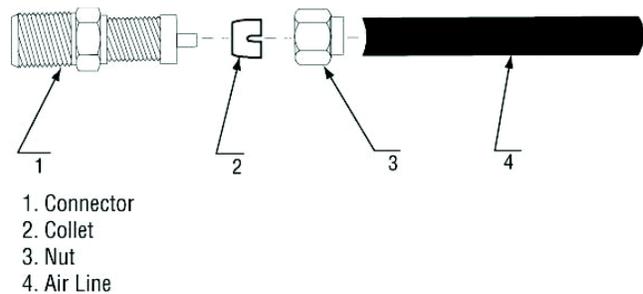

In-Vehicle Service Procedure

How to Remove Push-To-Connect Type Fittings

Special Instructions

⚠ WARNING

A sudden release of air pressure can cause personal injury or damage to equipment. To prevent injury or equipment damage, exhaust the vehicle air tank.


⚠ CAUTION

Make sure only 5/32" air lines are used with push-to-connect fittings. Using sizes other than 5/32" can cause air leaks or damage to fittings.

Before removing the air lines and hose, label or record their location.


Special Tools

- See Tool Information (see Table 8)
- For "push-to-connect" fittings, the Eaton service tool kit K-2394 is recommended. The kit contains the release tool and the tubing cutter.

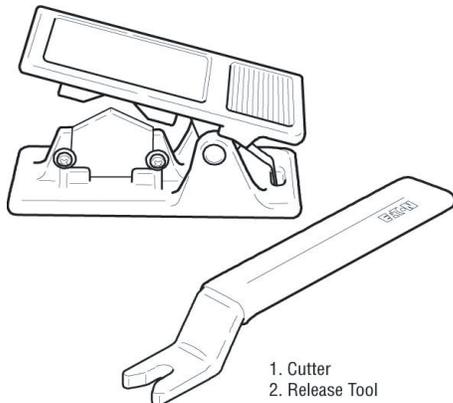

Procedure -

1. Exhaust the vehicle air tanks before continuing.
2. Use the air line release tool from kit K-2394 to press the release sleeve down while pulling the air line from the fitting.
3. Inspect the fitting for damage or wear. Remove and replace as necessary.

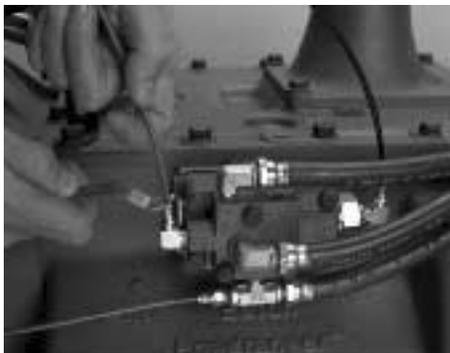

How to Install Push-To-Connect Type Fittings

Special Instructions

⚠ WARNING

A sudden release of air pressure can cause personal injury or damage to equipment. To prevent injury or equipment damage, exhaust the vehicle air tanks

⚠ CAUTION


Make sure only 5/32" air lines are used with push-to-connect fittings. Using sizes other than 5/32" can cause air leaks or damage to fittings

Special Tools

- See Tool Information (see Table 5)
- For 'push-to-connect' fittings, we recommend Eaton service tool kit K-2394. The kit contains the release tool and the tubing cutter.

Procedure -

1. Check the threads of the fitting for thread sealant. If no sealant is present, apply Eaton thread sealant #71205 or equivalent.
2. Install the fitting.
3. Inspect the air line for burrs or deformed areas. Trim the air line if necessary using a sharp razor blade or the air line cutting tool from kit K-2394. The cut must be smooth and square. If the tubing end is deformed or burred, the internal o-ring in the fitting will be damaged when the air line is inserted.
4. Push the air line into the fitting. It should insert approximately 3/4". If it does not insert far enough or is difficult to insert, the fitting may be damaged and should be replaced. After inserting, give the air line a slight tug to make sure the line stays in place. If line does not stay in place, replace the fitting.
5. Enable the vehicle air system. Allow the air tanks to pressurize, and check for leaks.

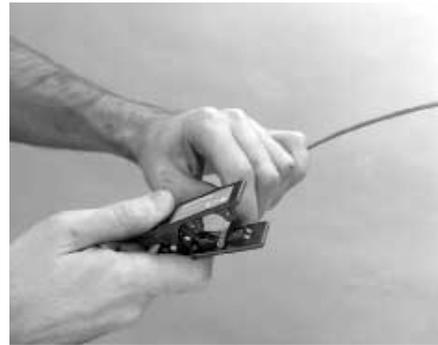

In-Vehicle Service Procedure

How to Remove Rubber 1/4" Air Hoses

Special Instructions

For the 1/4" I.D. air hoses, install the fixed nut end first.

Special Tools

- Typical service tools



Procedure -

1. Remove all air line brackets and ties.
2. Remove swivel end.
3. Remove fixed end.

How to Install Rubber 1/4" Air Hoses

Special Instructions

For the 1/4" I.D. air hoses, install the fixed nut end first.

Special Tools

- Typical service tools

Procedure -

1. If necessary, apply Eaton thread sealant #71205 or equivalent to threads.
2. Install and tighten fixed end first, then install and tighten swivel end.
3. Replace all air line brackets and ties.



In-Vehicle Service Procedure

How to Remove the Air Filter/Regulator

Special Instructions

The air filter/regulator has two (2) o-rings located between the filter/regulator and the auxiliary section.

Special Tools

- Typical service tools



Procedure -

1. Remove the air lines from the air filter regulator.
2. From the air filter/regulator, remove the two (2) cap screws.

How to Install the Air Filter/Regulator

Special Instructions

The air filter/regulator has two (2) o-rings located between the filter/regulator and the range cylinder cover.

Special Tools

- Typical service tools

Procedure -

1. Position the air filter/regulator.
2. Apply Eaton Sealant #71205 or equivalent to the two (2) retaining capscrews.
3. Install the two (2) retaining capscrews, torque to 8-12 lb-ft (10.85-16.30 N•m).



In-Vehicle Service Procedure

How to Remove a Roadranger Valve

Special Instructions



A sudden release of air pressure can injure you or damage equipment. To prevent injury or equipment damage, the vehicle air tanks must be exhausted.

Special Tools

- Typical service tools



Procedure -

1. From the Roadranger valve cover, remove the two (2) mounting screws.
2. Slide the Roadranger valve cover down.
3. From the air fittings, disconnect the air lines.
4. From the Roadranger base, loosen the jam nut. Rotate the Roadranger valve until the valve is removed.
5. Inspect the parts: nut, valve cover, air lines, sheathing, and o-rings from the lever shaft.
6. In the Roadranger valve, inspect the air fittings, and remove if damaged.

How to Install a Roadranger Valve

Special Instructions

To position the Roadranger valve, the range lever must be to the front or the splitter button to the left when facing forward.

Special Tools

- Typical service tools

Procedure -

1. Make sure the nut, valve cover, air lines, sheathing, and o-rings are in position on the lever shaft.
2. If previously removed, replace the air fittings and torque to 84-120 lb-in (9.49-13.56 N•m).
3. Place the Roadranger valve on the lever shaft and rotate so the range selector faces the vehicle front.
4. From the Roadranger valve bottom, torque the jam nut to 35-45 lb-ft (47.45-61.01 N•m).



5. Connect the air lines to the air fittings.



6. Slide the cover into position on the Roadranger valve.
7. Install the Roadranger valve cover mounting screws.

Note: Make sure the air lines are seated fully.



In-Vehicle Service Procedure

How to Remove a Slave Valve



Special Instructions



A sudden release of air pressure can injure you or damage equipment. To prevent injury or equipment damage, the vehicle air tanks must be exhausted.

Special Tools

- Typical service tools

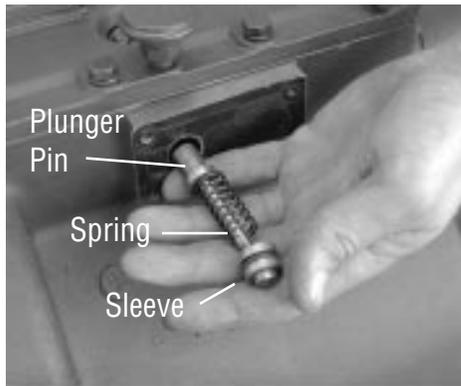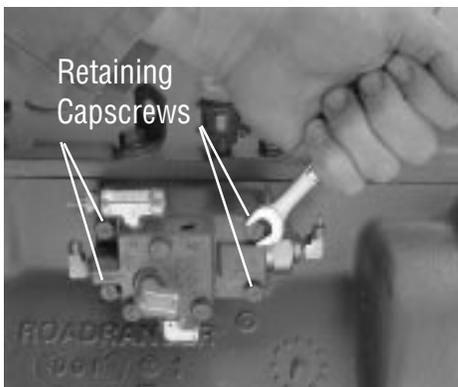

Procedure -

1. Record or mark air line locations.
2. Remove all air lines.

Note: Remove three 1/4" ID air hoses at swivel fitting at range cylinder location. Remove air line bracket at rear of transmission. Remove slave valve with air hoses still attached.

3. Remove the retaining cap screws around valve perimeter.
4. Remove slave valve and gasket.
5. From the transmission case, remove the sleeve, spring, and plunger pin.
6. Inspect the air fittings, replace if damaged.

How to Install a Slave Valve

Special Instructions

None



Special Tools

- Typical service tools

Procedure -

1. Clean gasket surface and install air fittings.
2. Lightly lubricate and install plunger pin, spring, and sleeve into case.
3. Install any necessary air hoses at this time.
4. Install new gasket.
5. Apply Eaton sealant #71205 or equivalent to the retaining capscrews.
6. Install the retaining capscrews, torque to 8-12 lb-ft (10.85-16.30 N•m).

Note: Make sure the retaining capscrews are properly torqued.

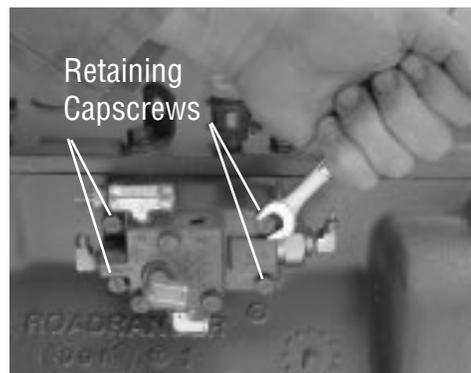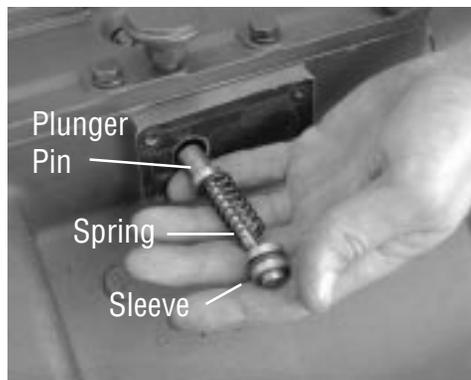

In-Vehicle Service Procedure

How to Remove the Gear Shift Lever/Remote Shift Control

Special Instructions



The air lines must be disconnected from the transmission or from the Roadranger valve.

Different detent springs are available to increase or decrease shifting effort. Note and record specific locations for specific springs. In some cases, a stiffer spring is installed in the top rail position.

Remote control housings are removed the same way as gear shift levers.

Special Tools

- Typical service tools

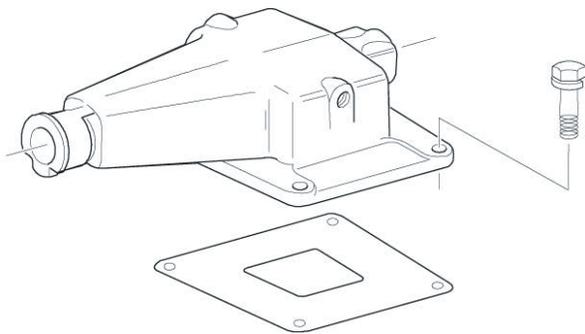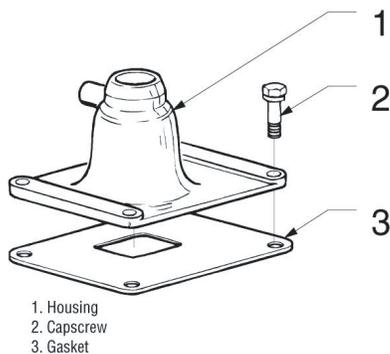

Procedure -

1. From the gear shift lever base/shift control housing, remove the four (4) retaining capscrews.
2. To break the gasket seal, lightly jar the gear shift/shift control housing.
3. Remove the gear shift lever housing.

CAUTION

Make sure the detent springs do not fall into the transmission.

4. Remove detent springs as needed.
5. Remove the gasket and clean the area the replacement gasket will contact.

How to Install the Gear Shift Lever/Remote Shift Control

Special Instructions

Remote control housings are installed the same way as gear shift levers.

For standard and forward shift bar housings, make sure the detent springs and balls are in the shift bar housing top bores.

Make sure the shift block and yoke notches are aligned in the neutral position.

Special Tools



- Typical service tools

Procedure -

1. Thoroughly clean mounting surface.
2. Position a new gear shift lever/shift control housing gasket on the gear shift lever mounting surface.
3. Install the detent springs.
4. Install the shift lever/shift control housing. Make sure the tip (finger) of the gear shift lever fits into the slots in the shift block.
5. Apply Eaton sealant #71205 or equivalent to the retaining capscrews.
6. Install the retaining capscrews, torque to 35-45 lb-ft (47.45-61.01 N•m).

Note: Make sure the capscrews are properly torqued.

Note: Make sure you can shift the transmission.

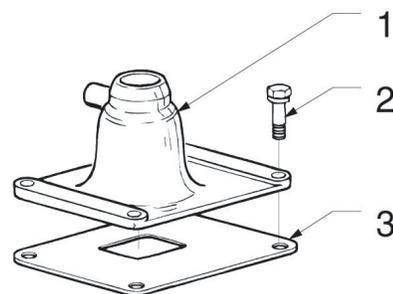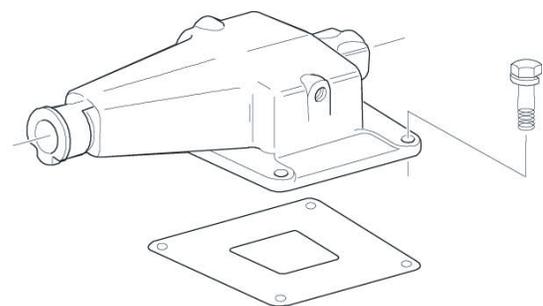

1. Housing
2. Capscrew
3. Gasket

In-Vehicle Service Procedure


How to Adjust the Remote Shift Control (LRC Type)

Special Instructions

The following is a typical adjustment procedure for an LRC type slave control. It is recommended that the OEM Chassis Service Manual be consulted first.

Special Tools


- Typical service tools

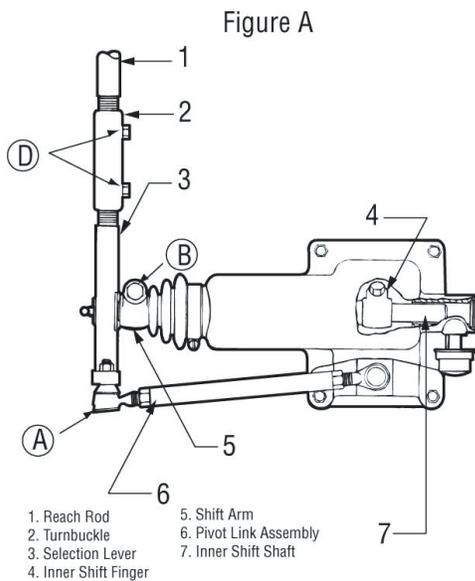

Procedure -

1. Move the gear shift lever forward or backward to the neutral position.
2. Move the gear shift lever sideways, toward reverse, until you feel resistance from the reverse plunger spring. DO NOT shift to reverse. The shift finger must remain in this position while you are making all the adjustments.
3. Remove the cotter pin, castle nut and ball joint A (see figure A) from the selection lever. Do not remove the ball joint from the pivot link.
4. Loosen the capscrew B (see figure A) and remove the shift arm from the inner shift shaft. Do not disconnect the selection lever from the shift arm.

Figure B

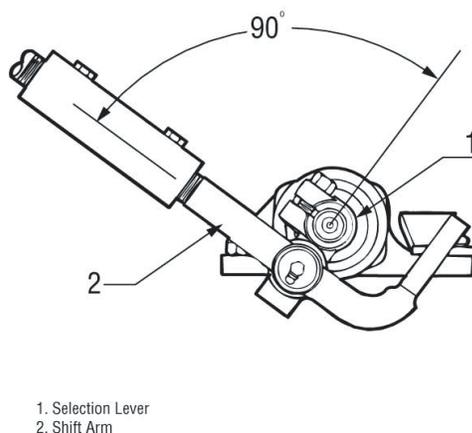


5. Turn the shift arm until it is at a right angle (90°) to the selection lever as viewed from the side (see figure B).

Note: Ideally, the shift arm should be adjusted 90° to the selection lever as described, but in some chassis configurations it may be necessary to index the shift arm in the vertical position. Indexing the shift lever is done to prevent shift lever jump out. This type of adjustment will cause an unequal amount of gear shift lever travel between neutral and a forward lever position as compared to neutral and a rearward lever position.

6. Install the shift arm on the splines of the inner shift shaft. You may have to move the shift arm 4° or 5° to align the splines of the two parts. Disregard any movement of the gear shift lever at this point. The gear shift lever will be adjusted later.
7. Tighten the capscrew B (see figure A) on the shift arm.
8. Connect the pivot link assembly ball joint to the selection lever. Secure it with the castle nut and cotter pin.
9. Loosen the jam nuts C (see figure C) on the pivot link.
10. Check to be sure the inner shift finger is still in place.
11. Rotate the pivot link until the curved end of the selection lever is parallel with the shift arm as viewed from the rear (see figure C).
12. Tighten the pivot link jam nuts C (see figure C).
13. Loosen both capscrews on the turnbuckle D (see figure A).
14. Check to be sure inner shift finger is still in place.
15. Rotate the turnbuckle to obtain the proper forward-backward neutral position of the gear shift lever in the cab.
16. Tighten one turnbuckle D capscrew (see figure A).
17. Move the gear shift lever to the desired position.
18. Turn the second turnbuckle D capscrew.
19. Check for linkage obstructions in all gear positions.

Figure C

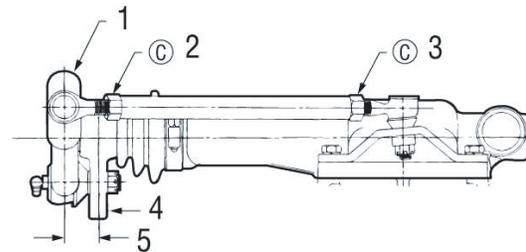

1. Selection Lever
2. (L.H. Thread)
3. (R.H. Thread)
4. Shift Arm
5. Parallel

In-Vehicle Service Procedure

Neutral Switch Operation and Testing

Special Instructions

The neutral switch is a normally closed switch. An electrical current flows through it when the transmission shifter is in the neutral position. When the transmission shifter is in gear, the switch is open and no current flows through it. Likewise, the switch is open when the ball is depressed. The switch is actuated by the air valve shaft.

Special Tools

- Typical service tools
- Volt/Ohm meter

Procedure -

1. Disconnect the wiring from the switch.
2. Connect an ohm meter to check for continuity or a small reading.
3. Place the transmission shift lever in the neutral position. The ohm meter should register continuity or a small reading. If it does, go to the next step. If it does not, remove the switch and replace it.
4. Shift the transmission into all gear positions. The ohm meter should read open or infinity. If it does not, remove the switch. Then, depress the switch ball and check for continuity. The ohm meter should read open or infinity when the ball is depressed.
5. Look into the neutral switch hole and verify that the air valve shaft moves as the transmission is shifted from neutral into gear.
 - a. If it does, replace the switch.
 - b. If not, remove the shift bar housing and check the air valve and shift rails for excessive wear. Also, check the slave valve plunger and spring for free movement.

How to Remove the Neutral Switch

Special Instructions


None

Special Tools

- Typical service tools

Procedure -

1. Remove 2 screws retaining wire terminals.
2. Remove the switch using a 7/8" deep well socket or box end wrench.

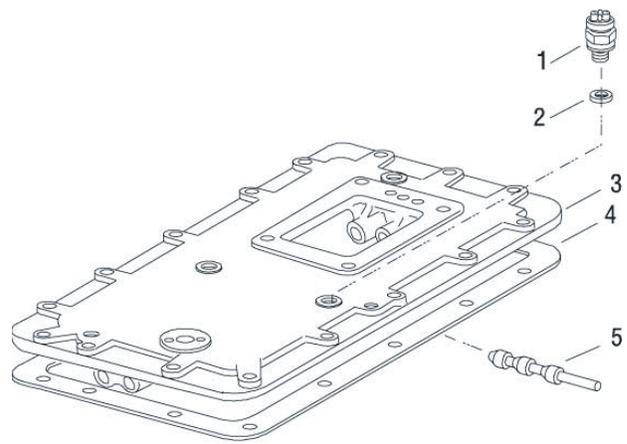

1. Neutral Light Switch
2. Gasket
3. Shift Bar Housing
4. Gasket
5. Air Valve Shaft

In-Vehicle Service Procedure


How to Install the Neutral Switch

Special Instructions

None

Special Tools

- Typical service tools

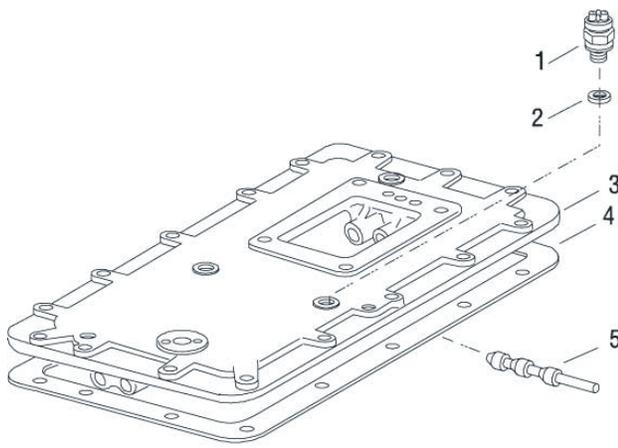

1. Neutral Light Switch
2. Gasket
3. Shift Bar Housing
4. Gasket
5. Air Valve Shaft

Procedure -

1. Install a new gasket.
2. Install the neutral switch, torque to 15-20 lb-ft (20.34-27.12 N•m).
3. Connect the wiring to the switch.

Reverse Switch Operation and Testing

Special Instructions

The reverse switch is a normally open ball switch. When the transmission is shifted into reverse, a ramp on the reverse yoke bar contacts and raises a pin. The pin depresses the ball on the switch, which closes the switch contact, allowing current to flow through the switch and light up the vehicle's backup lights.

Special Tools

- Typical service tools
- Volt/Ohm meter

Procedure -

1. Disconnect the wiring from the switch.
2. Connect an ohm meter to check for continuity.
3. Place the transmission shift lever in any position except reverse. If the switch is working properly, the ohm meter should read open or infinity. If it is not, remove the switch and recheck it for continuity. Replace as necessary.
4. Place the transmission shift lever in the reverse position. If the switch is working properly, the ohm meter should register continuity, or a small reading. If it does not, remove the switch and recheck it for continuity. Replace it as necessary. Also, check for sticking or excessive wear of the reverse pin.

In-Vehicle Service Procedure


How to Remove the Reverse Switch

Special Instructions

None

Special Tools

- Typical service tools

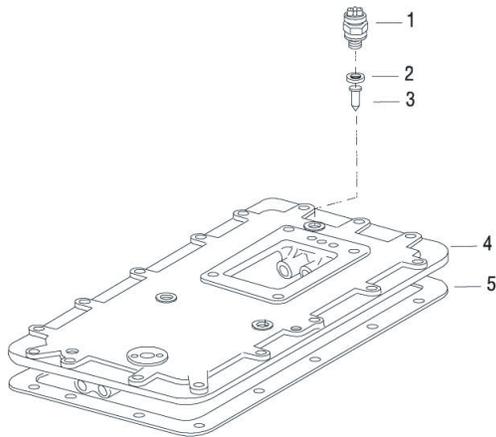

1. Reverse Light Switch
2. Gasket
3. Pin
4. Shift Bar Housing
5. Gasket

Procedure -

1. Remove 2 screws retaining wire terminals.
2. Remove the switch using a 7/8" deep well socket or box end wrench.

How to Install the Reverse Switch

Special Instructions


None

Special Tools

- Typical service tools

Procedure -

1. Insert the reverse pin in the reverse switch bore.
2. Install new gasket on switch.
3. Install the reverse switch, torque to 15-20 lb-ft (20.34-27.12 N•m).
4. Connect the wiring to the switch.

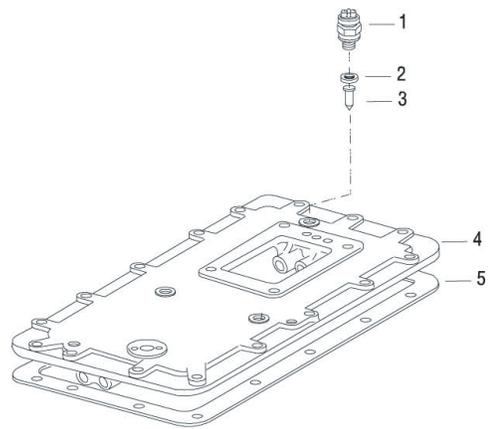

1. Reverse Light Switch
2. Gasket
3. Pin
4. Shift Bar Housing
5. Gasket

In-Vehicle Service Procedure

How to Remove the Shift Bar Housing

Special Instructions

Before removing the shift bar housing, the air lines must be disconnected.

For models equipped with an oil pump and/or cooler assemblies, make sure to disconnect the oil line connected to the shift bar housing.

There are three (3) sizes of capscrews. The 1 1/2" capscrews are used with the lifting eyes. The 1 1/4" are used on all other locations except the left front corner at the roll pin location. This capscrew is 1 3/4".

Be careful when removing the shift bar housing to prevent damaging the oil tube with the shift yokes.


Special Tools

- Typical service tools



Procedure -

1. From the shift bar housing, remove the two retaining cap-screws securing the oil cooler. Remove oil cooler and set aside.

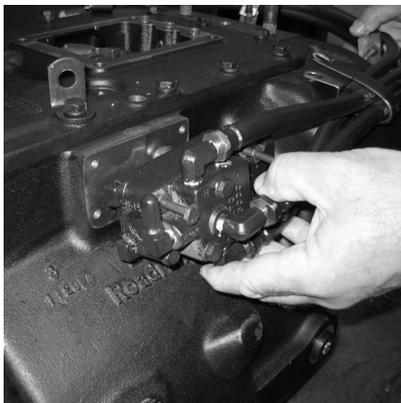

2. Remove slave valve.

3. Remove interlock parts (pin, spring, and sleeve).




4. From the shift bar housing rim, remove the retaining cap-screws.
5. To break the gasket seal, jar the shift bar housing.



6. Remove the shift bar housing.
7. Inspect the roll pin, replace if damaged.
8. Remove the gasket and clean all mounting surfaces of gasket material.



9. If the three (3) sets of tension springs and balls from the housing top bores are loose, tilt the assembly and remove them.

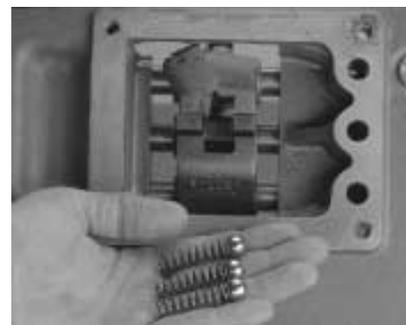

In-Vehicle Service Procedure

How to Install the Shift Bar Housing

Special Instructions


There are three (3) sizes of capscrews. The 1 1/2" capscrews are used with the lifting eyes. The 1 1/4" are used on all other locations except the left front corner at the roll pin. This capscrew is 1 3/4".

Be careful when removing the shift bar housing to prevent damaging the oil tube with the shift yokes.

The slave valve and interlock parts must be removed prior to installing the shift bar housing.

Special Tools

- Typical service tools

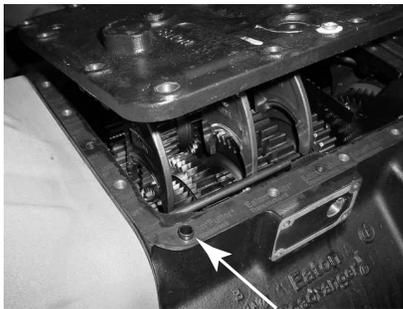

Procedure -

1. Place the shift bar housing and shift blocks in the neutral position.
2. Place the mainshaft sliding clutches in the neutral position.
3. Position a new shift bar housing gasket on the shift bar housing mounting surface.

Note: The slave valve and interlock assembly must remain off, until the shift bar housing is installed, to avoid damaging the interlock pin.

4. As you install the shift bar housing, make sure the yokes fit into the corresponding sliding clutch slots and the housing aligns with the roll pin.


5. Apply Eaton® Sealant #71205 or equivalent to the retaining cap screws. Torque the cap screws to 35-45 lb-ft (47.45-61.01 N•m).

In-Vehicle Service Procedure

6. Install interlock parts (pin, spring and sleeve).



7. Install slave valve. Apply Loctite 242 to capscrew threads and torque to 8-12 lb-ft (10-85-16-30 N•m).

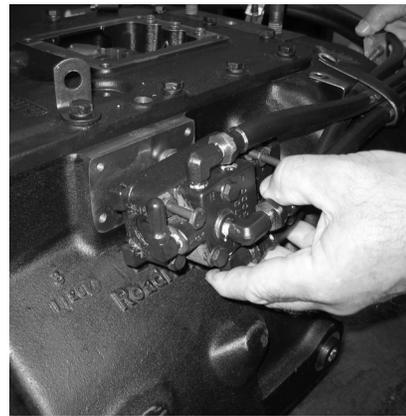

In-Vehicle Service Procedures

How to Remove the Oil Seal - Mechanical Speedometer


Special Instructions

Prior to replacing the seal, carefully inspect the transmission to make sure the oil leakage is coming from the seal. Pay particular attention to the speedometer parts, the rear bearing cover gasket surfaces, rear countershaft bearing covers, and shift bar housing.

For additional information on rear seal service, refer to the Seal Maintenance Service Brochure TRSM0912.

Special Tools

- See Tool Information (see Table 5 and 6)
- Brass drift
- Item T1: Output yoke puller
- Item T15: Slide hammer

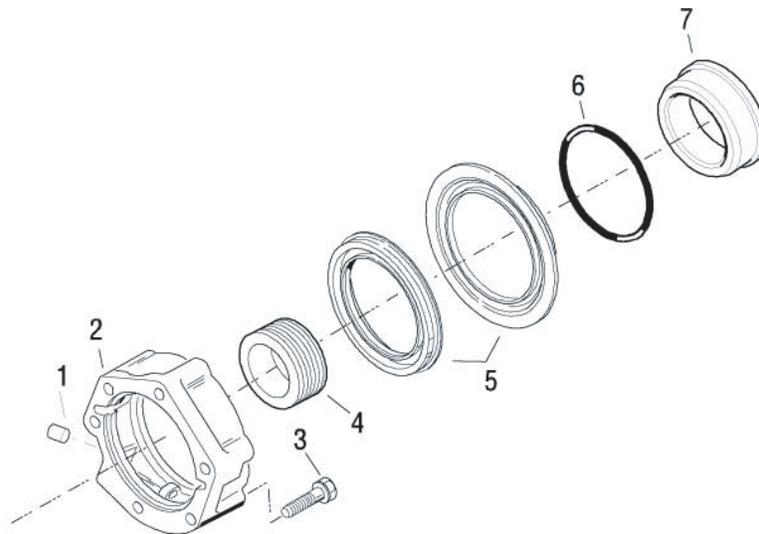

- 1. Bushing
- 2. Rear Bearing Cover Assembly
- 3. Capscrew
- 4. Speedometer Drive Gear

- 5. Oil Seal with Slinger
- 6. O-Ring
- 7. Speedometer Spacer Assembly

Procedure -

1. Disconnect the driveshaft and U-joint from the output yoke according to the OEM or driveshaft manufacturer's instructions.
2. Shift the transmission into 1st gear or low gear (Low Range) to prevent the output yoke from turning when you loosen the output shaft nut.
3. Remove the output shaft nut using a 70 mm or 2 3/4" socket. See "How to Remove Output Yoke/Companion Flange".
4. Remove the output yoke. If necessary, use an output yoke puller.



5. Remove the seal sleeve.
6. Use a slide hammer with a hook attachment to remove the seal. Or remove output bearing cover and drive seal out from front side.

Note: The seal will be damaged during removal and must be replaced.

7. Remove seal slinger from the output yoke using a brass drift and hammer.
8. Inspect all parts of the seal surface for wear, scratches, burrs, or other damage.

Note: Replace the seal surface if it is worn or damaged. Do not attempt to salvage the seal mating surface with crocus cloth, filing, etc.



In-Vehicle Service Procedures

How to Install the Oil Seal - Mechanical Speedometer

Special Instructions



To prevent oil leaks, do not touch the seal lip, and make sure the seal driver is clean.

Special Tools

- See Tool Information (see Table 8)
- Oil seal driver
- Oil seal slinger driver



Procedure -

1. The seal will be damaged during removal and must be replaced.
2. Place a seal on the oil seal driver, and drive the new seal into the rear bearing cover.
3. Install the new slinger on the output yoke using a slinger driver.
4. Install the output yoke over the output shaft. The yoke should slide on when the splines are lined up. If it does not, clean the splines with solvent, and oil them lightly.
5. Install the output nut and torque to 650-700 lb-ft (881.28-949.07 N•m).
6. Connect the driveshaft and U-joint according to the OEM or driveshaft manufacturer's instructions.

How to Remove the Oil Seal - Magnetic Speedometer


Special Instructions

Prior to replacing the seal, carefully inspect the transmission to make sure the oil leakage is coming from the seal. Pay particular attention to the speedometer parts, the rear bearing cover gasket surfaces, rear countershaft bearing covers, and shift bar housing.

For additional information on rear seal service, refer to the Rear Seal Maintenance Service Brochure TRSM0912.

Special Tools

- See Tool Information (see Table 6 Special Tools)
- Brass drift
- Item T1: Output yoke puller
- Item T15: Slide hammer

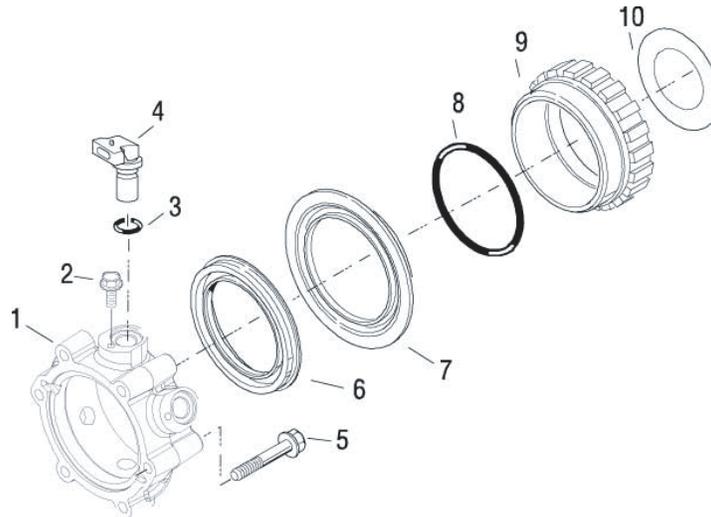

- 1. Rear Bearing Cover
- 2. Sensor Retaining Capscrew
- 3. O-Ring
- 4. Speedometer Sensor
- 5. Capscrew

- 6. Oil Seal
- 7. Slinger
- 8. O-Ring
- 9. Speedometer Spacer Assembly
- 10. Slinger

In-Vehicle Service Procedures



Procedure -

1. Disconnect the driveshaft and U-joint from the output yoke according to the OEM or driveshaft manufacturer's instructions.
2. Shift the transmission into 1st gear or low gear (Low Range) to prevent the output yoke from turning when you loosen the output shaft nut.
3. Remove the output shaft nut using a 70 mm or 2 3/4" socket.
4. Remove the output yoke. If necessary, use an output yoke puller. See "How to Remove the Output Yoke/Companion Flange."
5. Remove the speedometer sensors from the rear bearing cover.
Note: If the sensor is a thread in type, note the number of threads expose so the sensor can be reinstalled to the same depth. If the sensor is a push in type, remove the hold down capscrew and pull the sensor out of the bore.
6. Remove the speedometer rotor/seal sleeve and the o-ring.
7. Pry the seal out using a large screwdriver or prybar in the metal groove of the seal.
Note: The seal will be damaged during removal and must be replaced.

8. Remove seal slinger from the speedometer rotor/seal sleeve using a brass drift and hammer.
9. Inspect all parts of the seal surface for wear, scratches, burrs, or other damage.

Note: Replace the seal surface if it is worn or damaged. Do not attempt to salvage the seal mating surface with crocus cloth, filing, etc.



In-Vehicle Service Procedures

How to Install the Oil Seal - Magnetic Speedometer

Special Instructions



To prevent oil leaks, do not touch the seal lip, and make sure the seal driver is clean.

Special Tools

- See Tool Information (see Table 8)
- Oil seal driver
- Oil seal slinger driver



Procedure -

1. Place a seal on the oil seal driver, and drive the new seal into the rear bearing cover. The seal is fully installed when the flange on the seal is flush with the shoulder in the bore.

2. Install the new slinger on speedometer rotor/seal sleeve using a slinger driver.

3. If previously removed, install the o-ring over the output shaft.

Note: To avoid creating oil leaks, make sure the speedometer rotor/seal sleeve is free from contaminants.

4. Install the speedometer rotor/seal sleeve over the output shaft, and install the speedometer sensors.
5. Install the output yoke over the output shaft. The yoke should slide on an stop before contacting the speedometer rotor. As the output shaft nut is installed, the output yoke will contact the speedometer rotor.
6. Install the output nut and torque to 650-700 lb-ft (881.28-949.07 N•m).
7. Connect the driveshaft and U-joint according to the OEM or driveshaft manufacturer's instructions.

In-Vehicle Service Procedures

How to Remove the Output Yoke/Companion Flange and Nut

Special Instructions



You must remove the shift bar housing in order to lock the transmission.

For proper cleaning and maintenance, see TRSM0912 - Rear Seal Maintenance Guide.

After removal of the output yoke/companion flange, temporarily replace the output shaft nut to protect the output shaft threads during auxiliary section disassembly.

Special Tools

- See Tool Information
- A large breaker bar or air impact wrench

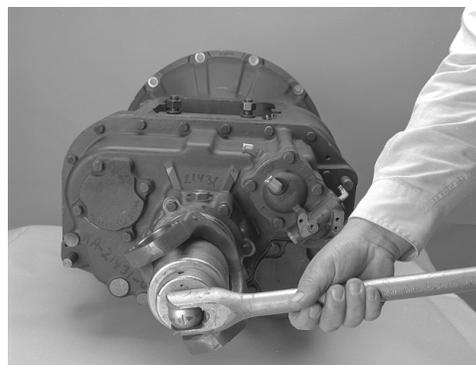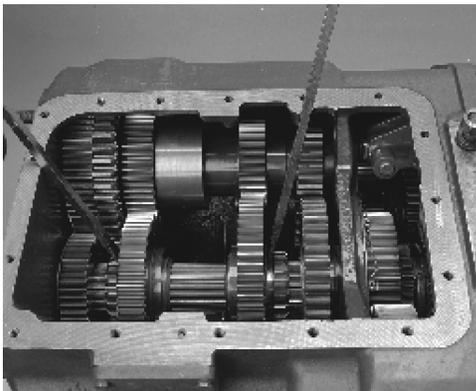

Procedure -

1. Engage two (2) mainshaft sliding clutches into two (2) mainshaft gears to lock the transmission, or use a yoke holding tool if available.
2. Use a large breaker bar or air impact wrench to remove the output shaft nut.

3. Remove the output yoke. Use the output yoke puller (Tool ref. ID T1).



In-Vehicle Service Procedures

How to Install the Output Yoke/Companion Flange and Nut



Special Instructions

You must remove the shift bar housing in order to lock the transmission.

For proper cleaning and maintenance, see TCSM0912 - Seal Maintenance Guide.

Special Tools

- See Tool Information
- Torque wrench with 0-700 Lb•ft capacity

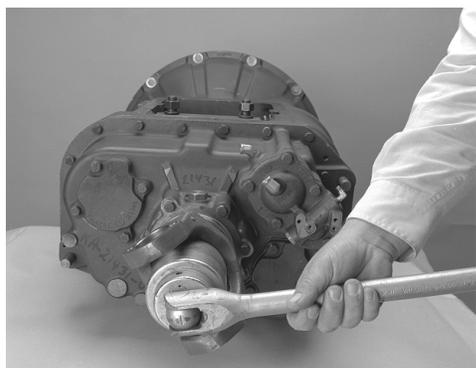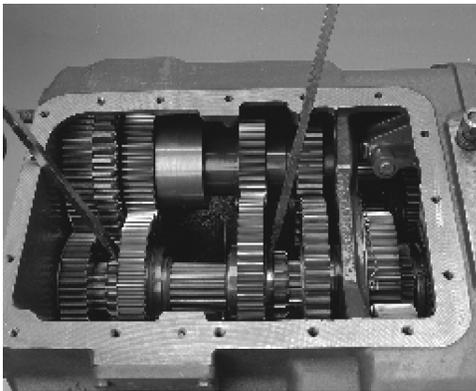

Procedure -

1. Engage two (2) mainshaft sliding clutches into two (2) mainshaft gears to lock the transmission or use a yoke holding tool if available.
2. Install the speedometer drive gear rotor or replacement spacer on the output shaft inside the rear bearing cover.
3. If the slinger on the yoke is damaged, replace using a Slinger/Seal kit.
4. Install the output yoke over the output shaft. The yoke should slide on and stop before contacting the speedometer rotor. As the output shaft nut is installed, the output yoke will contact the speedometer rotor.

In-Vehicle Service Procedures

5. Install the output shaft nut, tighten to 650-700 Lb-ft of torque.
6. Make sure the output shaft nut is properly torqued and unlock the transmission, or remove the holding tool.



In-Vehicle Service Procedures

How to Remove the Output Yoke / Flange and Retaining Capscrews

Special Instructions


None

Special Tools

- Typical service tools

Procedure -

1. Remove drive shaft from transmission. Reference OEM removal guidelines.
2. Remove the end yoke retaining capscrews and washer from auxiliary mainshaft.
3. Remove the end yoke/flange.

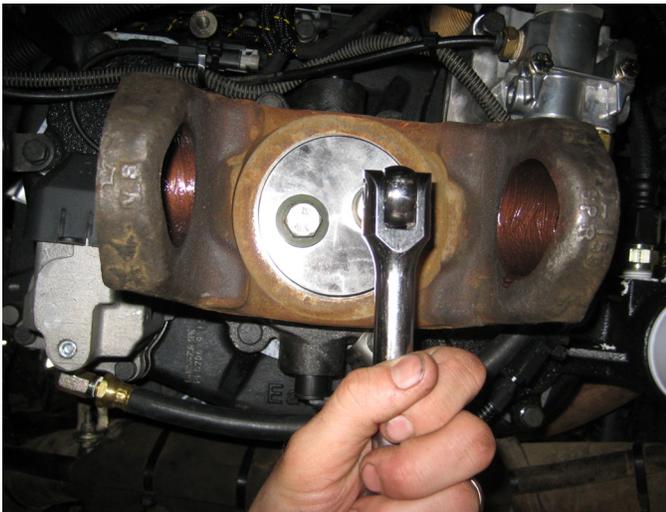

How to Install the Output Yoke / Flange and Retaining Capscrews

Special Instructions

For proper cleaning and maintenance, see TCSM0912 Seal Maintenance Guide.

Special Tools

- Typical service tools

Procedure -

1. Install end yoke, retaining washer, and capscrews. Apply Eaton/Fuller #71205 liquid thread sealant to capscrews and then snug each capscrew to 35 lbs. ft. [47 N·m.]
2. Fully tighten both retaining capscrews to specified torque rating 74-81 lbs. ft. [100-110 N·m.]

Note: This fastening design employs Spirallock™ threads. A conventional metric thread pitch tap cannot be used for thread restoration on this product.

WARNING

Use only Eaton/Fuller #71205 liquid thread sealant or liquid equivalent on the yoke retaining capscrews. Do not use any type of thread locking tape on the end yoke retaining capscrews. This may cause the capscrews threads to strip and cause the end yoke to loosen.

3. Reinstall driveshaft per OEM guidelines.



In-Vehicle Service Procedures


How to Remove the Auxiliary Section in Chassis

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T2: Auxiliary section hanger
- Item T14: Auxiliary section removal adapter plate
- A hoist with lifting chain

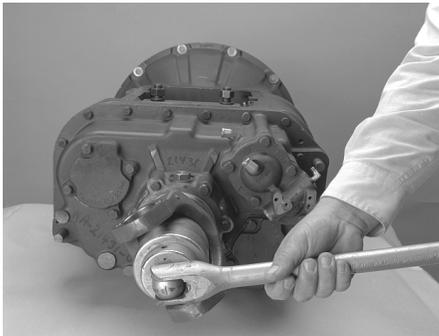

Procedure -

1. Drain the transmission oil.
2. Disconnect the driveshaft and U-joint from the output yoke.
3. If the auxiliary section is to be disassembled, remove the output nut. To prevent the output shaft from rotating while removing the nut, engage the transmission into two gears or use a yoke holding tool.
4. Disconnect the vehicle air supply line from the filter regulator assembly.
5. Mark the locations and disconnect the large rubber air lines placing them aside.
6. Label and remove the small air lines.
7. Remove the four (4) capscrews and the auxiliary countershaft rear bearing cover, gasket, and rear bearing shim.
8. Install the auxiliary countershaft retaining straps with 2-3/8" NC x 1" and 1-3/8" NC x 1-1/2" clean capscrews.
Note: Do not use an air gun. Tighten by hand until the capscrews are snug.
9. Drive the two dowel pins forward, and remove them.
10. Remove all but one capscrew that secure the auxiliary section to the main section. Leave one capscrew to secure the housing until it is ready to be removed.

Note: Capscrews are different lengths. Note their locations for reassembly purposes.

⚠ WARNING

Use the proper equipment with safety chains attached to remove the auxiliary section. The auxiliary section can slide rearward and could fall, causing you serious injury and/or damage to the auxiliary section.

11. Attach a chain and lifting device to the auxiliary section hanger, or attach the support jack to the auxiliary section (as shown in the pictures to the left).
12. With the support device in position, remove the remaining capscrew. If necessary, 3 capscrews can be installed into the three threaded holes in the auxiliary section flange. When threaded in they will push the auxiliary section rearward. Clean the holes of rust, paint, and other debris by threading a 3/8-16 tap into each hole. Thread each capscrew in evenly to prevent damage to the auxiliary housing.

⚠ CAUTION

The weight of the auxiliary section must be supported during removal to avoid damage to internal transmission parts.

13. Support the weight of the auxiliary section with a lifting device or support jack and move the auxiliary section rearward until it is free from the front section of the transmission.



In-Vehicle Service Procedures


How to Install the Auxiliary Section in Chassis

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T3: Countershaft support tools
- Item T14: Auxiliary section removal adapter plate
- A hoist with lifting chain

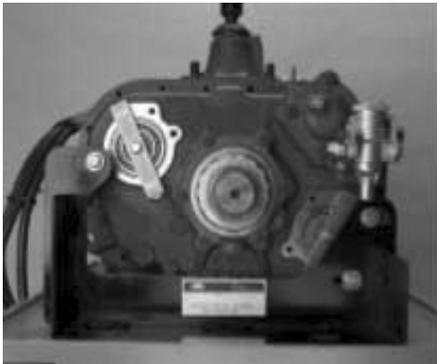

Procedure -

1. Install the countershaft support tools on the auxiliary section countershafts to center and hold the countershafts in position. Install a 3/8"-16 X 2 1/2" long capscrew into countershaft center.
2. Install output yoke and nut, torque to 650-700 lb-ft (881.28-949.07 Nm).

Note: To prevent the output shaft from rotating while installing the nut, place a clean shop rag in the gear mesh, or use a yoke holding tool.

Note: Due to chassis interference, it may not be possible to install the yoke at this step. However, the output shaft must be drawn fully into position to prevent it from sagging when the auxiliary section is installed in the chassis. If the chassis causes interference, the yoke can be temporarily installed to draw up the output shaft and then removed before the auxiliary section is installed.

3. Use crocus cloth or a wire wheel to clean rust and paint from the dowel pins before installing them.

CAUTION


If the dowel pins are not installed in the main case to the proper depth, the auxiliary section will not properly align with the main case and bearing or synchronizer failure may occur.

4. Install the dowel pins into the main case so that 3/8"-1/2" of the shoulder is exposed or pin is flush with front of case ear.
5. Clean all rust and paint from the dowel pin holes in the auxiliary section housing, and lightly grease the dowel pins on the main case and the dowel pin holes on the auxiliary section housing.
6. Make sure the auxiliary section is in low range. If not, blow shop air (max 100 PSI) into the low range supply port to shift the range synchronizer to low. If necessary, make sure the deep reduction clutch is engaged into gear.
7. Position the gasket onto the main case mounting surface.
8. Mount the auxiliary section on the lifting device or jack.
9. Tighten the center capscrew on the countershaft support tools to draw the countershafts into a level position. Do not overtighten the capscrews. The output yoke and shaft must be able to rotate.
10. Position the auxiliary section in line with the main case, and slide the housing onto the dowel pins. Mesh the countershafts with the auxiliary drive gear. Rotate the output yoke and shaft slightly to help the gears mesh and slide the auxiliary section forward until it is flush with the main section.

CAUTION

The auxiliary section should slide into place fairly easily. DO NOT force it on or pull it into place with the capscrews. Excessive force may damage the transmission. If excessive force is necessary, the gearing is likely out of time.

11. If the auxiliary section does not install fully, slide it back and check the following:
 - a. The output yoke and nut should be installed to pull back and center the auxiliary mainshaft assembly.
 - b. The countershaft support tool center capscrew should be snug to level the countershafts.
 - c. The dowel pins and auxiliary housing mating holes should be clean and well oiled.
 - d. The internal gearing on the auxiliary section must have been properly timed during reassembly.
12. Apply Eaton® Fuller® thread sealant #71205 or equivalent to the all the retaining capscrew threads. Install the capscrews to secure the auxiliary section to the main case. Torque the capscrews to 40-45 Lb-ft (54-61 Nm).

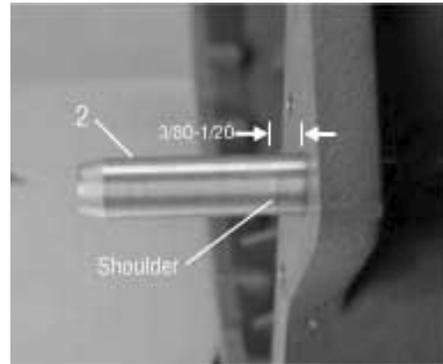

In-Vehicle Service Procedures

13. If the countershaft, countershaft bearings, or auxiliary housing have been replaced, or if the countershafts, bearings, or shims were not marked and reassembled in the same location, the bearing endplay must be checked and set by shimming. Shim the countershaft bearings using "Shim Procedure without a Shim Tool".
14. If shimming is not required, remove the support tools, and install the proper shim, gasket, and countershaft bearing cover. Secure the bearing covers with the capscrews. Install sealer. Tighten the capscrews to 40-45 Lb-ft (54-61 Nm).
15. Connect all removed air hoses and lines. Use Eaton® Fuller® thread sealant #71205 or equivalent as necessary.
16. Connect the driveshaft and U-joint, and refill the transmission with the recommended lubricant. For lubrication instructions refer to the "Lubrication" section.

How to Remove the Combination Cylinder Assembly

Special Instructions

None

Special Tools

- Typical service tools

Procedure -

1. Drain lube.
2. At the combination cylinder cover, remove the 5 capscrews with washers.
3. Remove the cylinder cover and gasket.




4. If necessary, remove the insert valve retaining nut from the cylinder cover. Remove the insert valve from the bore.



5. Remove the 15/16" nut on the range yoke bar.
6. Remove the 3/4" nut on the reduction yoke bar.



In-Vehicle Service Procedures

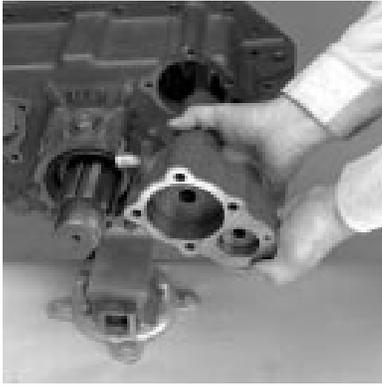

7. Remove the cylinder housing and gasket.



8. Remove the range and reduction pistons from the cylinder bores.



9. If necessary, remove the O-rings from the range cylinder bore and the reduction cylinder bore.

10. If necessary, remove the O-rings from the range piston I.D. and O.D. and the reduction piston O.D.



How to Install the Combination Cylinder Assembly

Special Instructions

Apply Eaton lubricant #71206 or equivalent to all shift cylinder assembly and spool valve O-rings so a film covers the entire surface.

Apply Eaton rust preventative #71213 or equivalent to all shift cylinder walls and yoke bars, cover the entire yoke bar surface that comes in contact with the shift cylinder O-ring.

Special Tools

- Typical service tools

Procedure -

1. Lightly lubricate O-rings with Eaton® Fuller® Silicone lubricant P/N 71206 or equivalent.
2. Install O-rings into range and deep reduction shift cylinders.




3. Install O-rings onto range and reduction pistons.



4. Install gasket and shift cylinder.



In-Vehicle Service Procedures

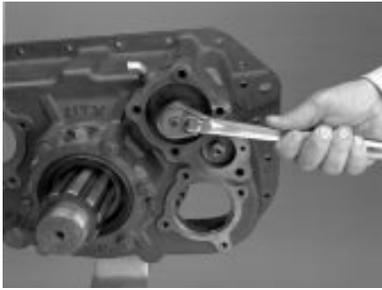

5. Install range piston with flat side to rear. Install range piston nut and torque to 70-85 Lb•ft.



6. Install deep reduction piston with flat side to rear. Install nut and torque to 50-65 Lb•ft.

Note: If reusing existing nut, make sure nylon locking material is in good shape, if not, use new nut.



7. Lightly lubricate insert valve O-rings with Eaton® Fuller® Silicone lubricant P/N 71206 or equivalent. Install insert valve with flat side to the inside. Install insert valve retaining nut and torque to 40-50 Lb•ft.



8. Install gasket and cover. Apply Eaton® Fuller® thread sealant P/N 71205 or equivalent to capscrew threads. Install capscrews and torque to 35-45 Lb•ft.

How to Disassemble the Gear Shift Lever


Special Instructions

If total disassembly is needed the Roadranger valve must be removed first.

Release the spring one coil at a time.

Special Tools

- Vise with brass jaws or wood blocks

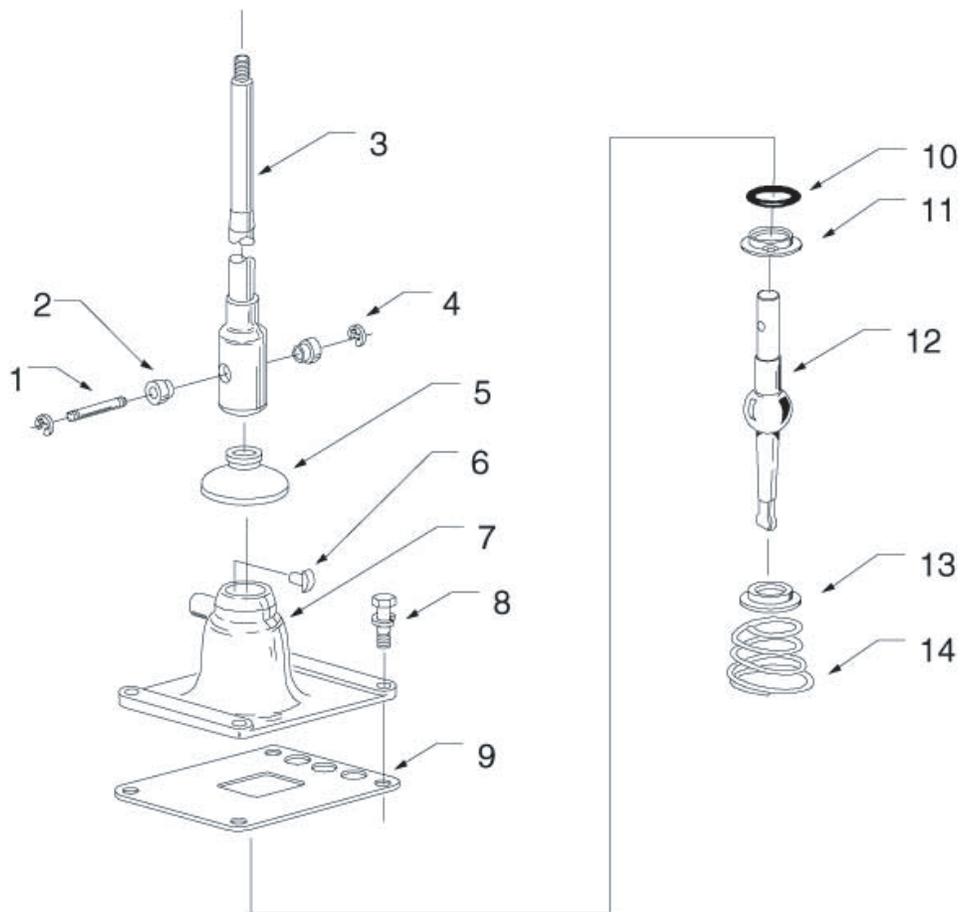

1. Pin
2. Bushing
3. Upper Lever
4. Snap Ring
5. Rubber Boot
6. Spade Pin
7. Housing

8. Capscrew
9. Gasket
10. O-Ring
11. Washer
12. Lower Lever
13. Stepped Washer
14. Tension Spring

Transmission Overhaul Procedures-Bench Service

Procedure -

1. On a non-isolated shift lever, remove the Roadranger valve using the “How to Remove the Roadranger valve” instructions in In-Vehicle Service Procedures. If the shift lever is equipped with a lever isolator, remove the snap ring, bushing, and cross pin to disconnect and remove the upper lever.
2. Slide the rubber boot up and off the shift lever shaft.
3. With housing bottom facing up, secure the assembly in a vise.
4. Use large screwdriver to twist between the spring and housing, forcing the spring from under the housing lugs one coil at a time.
5. From inside the housing tower, remove the tension spring, washer, and gear shift lever.
6. In models so equipped, from the housing bore, remove the nut and washer.
7. From the housing tower spade pin bore, remove and inspect the spade pin, discard if damaged.
8. From the housing tower inside groove, inspect the O-ring, discard if damaged.



How to Assemble the Gear Shift Lever

Special Instructions


Inspect tension spring and washer for wear.

Apply Eaton rust preventative lubricant #71212 or equivalent to the shift lever pivot ball. A rust preventative lubricant film should cover all surfaces between and including the pivot ball.

Seat the tension spring one coil at a time.

Special Tools



- Vise with brass jaws or wood blocks
- Item T4: Tension Spring Driver

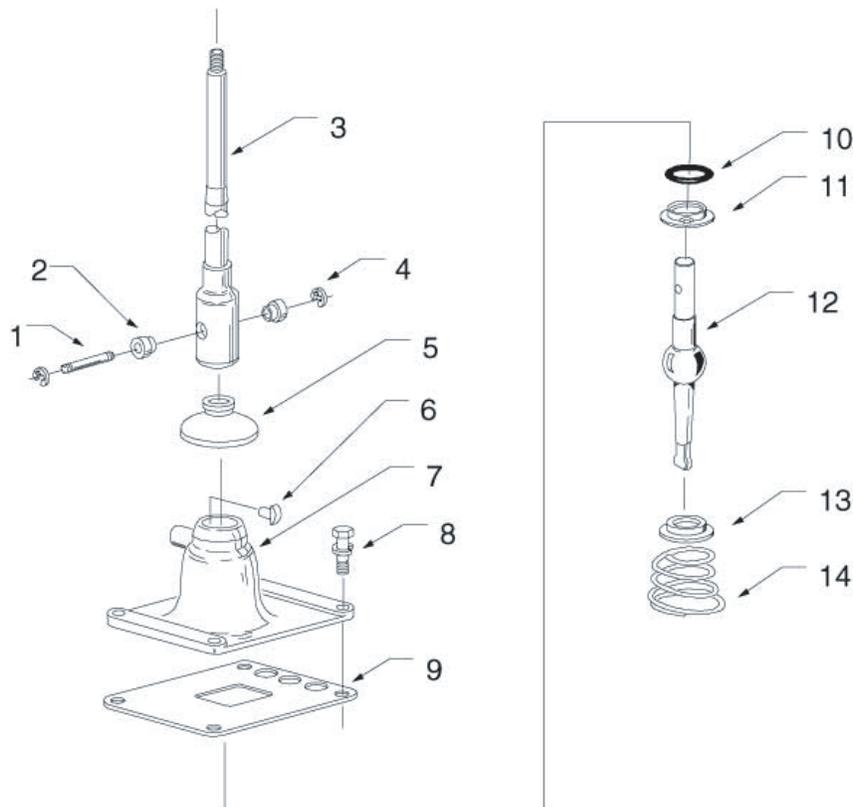

1. Pin
2. Bushing
3. Upper Lever
4. Snap Ring
5. Rubber Boot
6. Spade Pin
7. Housing

8. Capscrew
9. Gasket
10. O-Ring
11. Washer
12. Lower Lever
13. Stepped Washer
14. Tension Spring

Transmission Overhaul Procedures-Bench Service

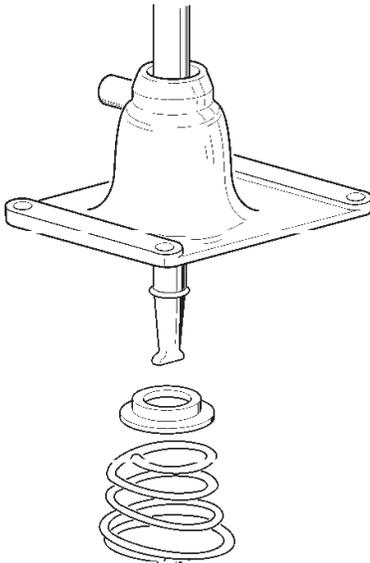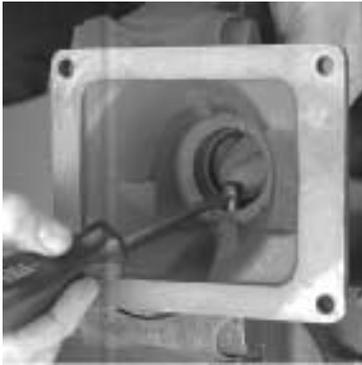

Procedure -

1. With housing bottom facing up, secure the assembly in a vise.
2. If the spade pin is damaged, replace and install the spade pin in housing tower bore.
3. In models so equipped, install the nut and washer in the housing bore.
4. If the O-ring is damaged, replace it and lubricate the O-ring with Eaton/Fuller lubricant #71206 or equivalent. Install the O-ring in the housing tower inside groove.
5. Align the lever ball slot with the spade pin and position the gear shift lever in the housing tower.
6. With dished-side up, install the washer over the ball.
7. Use a tension spring driver to install the tension spring under the housing lugs.
8. Remove the assembly from the vise.
9. Install a rubber boot over the gear shift lever and against the housing.

Note: Make sure the gear shift lever can move.

How to Remove the Shift Bar Housing

Special Instructions

Before removing the shift bar housing, the air lines must be disconnected.

For models equipped with an oil pump and/or cooler assemblies, make sure to disconnect the oil line connected to the shift bar housing.

There are three (3) sizes of capscrews. The 1 1/2" capscrews are used with the lifting eyes. The 1 1/4" are used on all other locations except the left front corner at the roll pin location. This capscrew is 1 3/4".

Be careful when removing the shift bar housing to prevent damaging the oil tube with the shift yokes.

Special Tools

- Typical service tools

Procedure -

1. From the shift bar housing, remove the two shift bar retaining capscrews securing the oil cooler. Remove oil cooler and set aside.



2. Remove slave valve.



Transmission Overhaul Procedures-Bench Service




3. Remove interlock parts (pin, spring, and sleeve).



4. From the shift bar housing rim, remove the retaining cap-screws.
5. To break the gasket seal, jar the shift bar housing.



6. Remove the shift bar housing.
7. Inspect the roll pin, replace if damaged.
8. Remove the gasket and clean all mounting surfaces of gasket material.

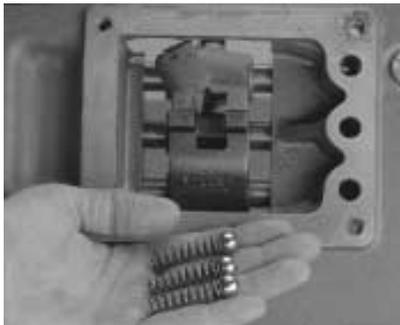

9. If the three (3) sets of tension springs and balls from the housing top bores are loose, tilt the assembly and remove them.

How to Install the Shift Bar Housing

Special Instructions

There are three (3) sizes of capscrews. The 1 1/2" capscrews are used with the lifting eyes. The 1 1/4" are used on all other locations except the left front corner at the roll pin location. This capscrew is 1 3/4".

Be careful when removing the shift bar housing to prevent damaging the oil tube with the shift yokes.

The slave valve and interlock parts must be removed prior to installing the shift bar housing.

Special Tools

- Typical service tools


Procedure -

1. Place the shift bar housing and shift blocks in the neutral position.
2. Place the mainshaft sliding clutches in the neutral position.
3. Position a new shift bar housing gasket on the shift bar housing mounting surface.

Note: The slave valve and interlock assembly must remain off, until the shift bar housing is installed, to avoid damaging the interlock pin.

4. As you install the shift bar housing, make sure the yokes fit into the corresponding sliding clutch slots and the housing aligns with the roll pin.


5. Apply Eaton® Fuller® Sealant #71205 or equivalent to the retaining capscrew threads.

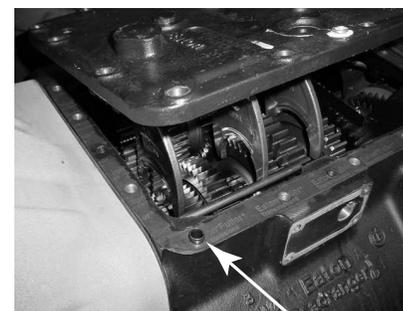

Transmission Overhaul Procedures-Bench Service



6. Install interlock parts (pin, spring and sleeve).

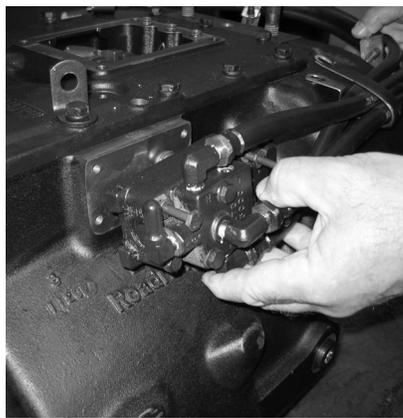

7. Install slave valve and tighten to specifications.

How to Disassemble the Standard Shift Bar Housing

Special Instructions

The shift bar housing must be removed from the transmission.

During disassembly, lay all parts on a clean bench in order of removal to facilitate assembly.

Shift bars not being removed must be kept in the neutral position or the interlocking parts lock the bars.

Start with the bottom shift bar.

Cut the lockwire and remove the lockscrews from each bar just before their removal.

Special Tools


- Typical service tools

Procedure -


1. If the three (3) sets of tension springs and balls from housing bores have not been removed, place the shift bar housing on its side to remove them.




2. Remove the oil trough retaining capscrews and oil trough. (Some models do not have an oil trough.)
3. With the housing rear to the right, lay the assembly on a flat surface.

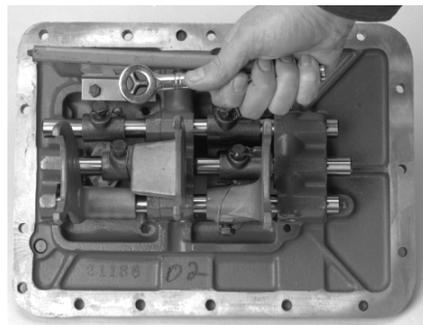


Transmission Overhaul Procedures-Bench Service

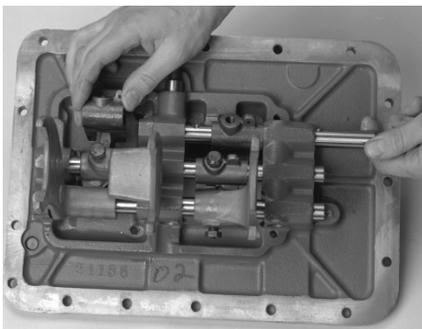


4. While removing the top yoke bar to the right, remove the two (2) shift blocks.

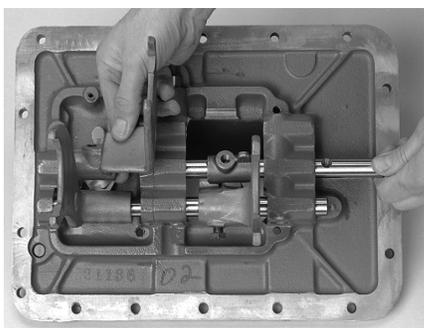

5. From the middle yoke bar, remove the shift yoke and shift block. As the neutral notch in the bar clears the rear boss, remove the small interlock pin from the notch bore.

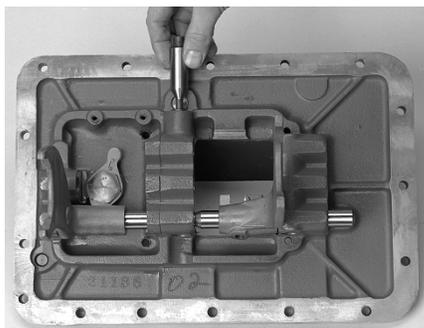


6. Remove the actuating plunger from the center top bore boss.

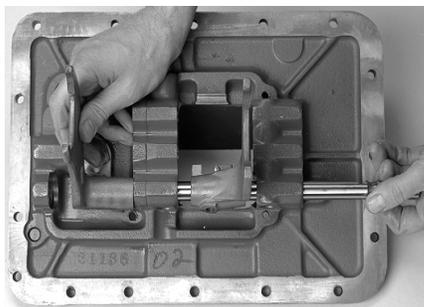

7. From the bottom yoke bar, remove the two (2) shift yokes.

Transmission Overhaul Procedures-Bench Service


8. As the shift bar clears the last boss, two (2) 3/4" interlock balls drop from the bottom rear boss bore.

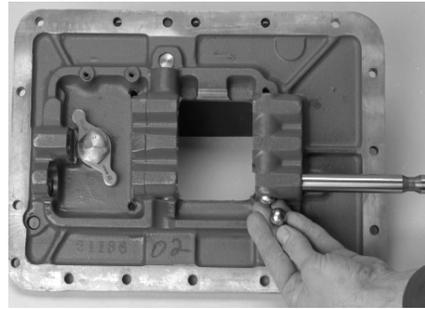

9. If damaged, from the 1st and reverse shift yoke, remove the plug, spring, and plunger.



10. Inspect the yoke or block parts; replace the worn parts.

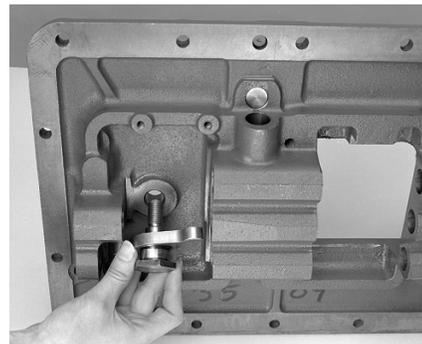

Transmission Overhaul Procedures-Bench Service

How to Assemble the Standard Shift Bar Housing

Special Instructions

Inspect shift blocks and shift yokes for wear.



Apply Eaton® sealant #71208 or equivalent to the shift bar housing plugs which are used to plug oil cooler provision holes. The sealant should be applied so at least 5 complete threads are covered.

Apply Eaton® lockwire #1819 or equivalent to all shift bar housing assembly set screws in both blocks and yokes. The wire should anchor the capscrew at least 2 complete 360° turns. The lockwire ends should be trimmed and bent out of the way of any part interference.

Keep yoke bars in neutral while assembling.

Special Tools

- Vise with brass jaws or wood blocks

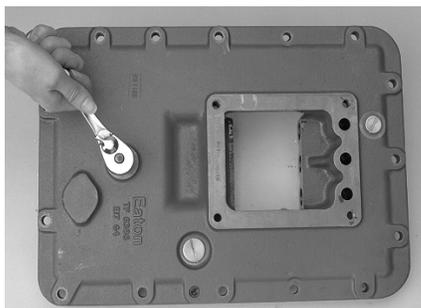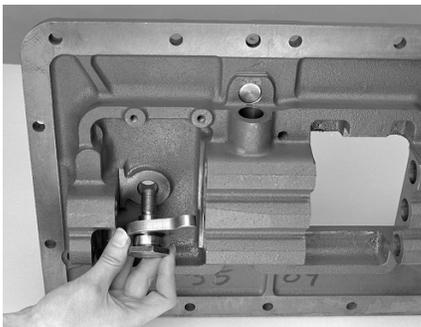

Procedure -


1. *Assemble the yoke actuator assembly:*
2. From the shift bar housing bottom, install the actuator pin and yoke actuator.
3. On the shift bar housing top, install the washer and nut.

Transmission Overhaul Procedures-Bench Service


4. Assemble the 1st and reverse shift yoke assembly:
 - Install the plunger in the 1st and reverse shift yoke bore, plunger shank to the outside.
 - Install the spring into the bore over the plunger shank.
 - Install the plug and tighten to compress the spring.
 - After plug bottoms out, back the plug out 1 to 1-1/2 turns.
 - Complete the block assembly process by staking the plug through the small hole in block.




5. With the housing rear to the right, lay the assembly on a flat surface.
6. Start installation of the bottom shift bar, as the bar passes the bosses, install the two (2) bottom shift yoke assemblies.
7. Install the shift yoke lockscrew, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.

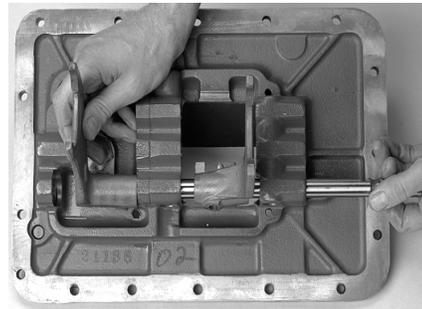


8. Place the actuating plunger in the top center bore.
9. Place one 3/4" interlock ball in the interlock bore, against the bottom bar.

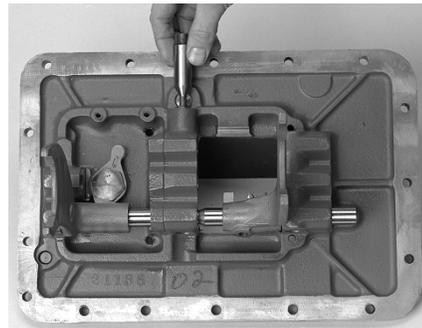


10. Holding the middle bar notched-end, start installation. As the bar passes the rear boss, position the shift block.
11. As the bar passes the center boss, position the shift yoke on bar, long hub to the housing front.
12. Just prior to inserting notched-end of bar in rear boss, install the small interlock pin vertically in the neutral notch bore.
13. Install the shift block and shift yoke lockscrews, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.
14. Place one 3/4" interlock ball in the interlock bore, against the middle bar.

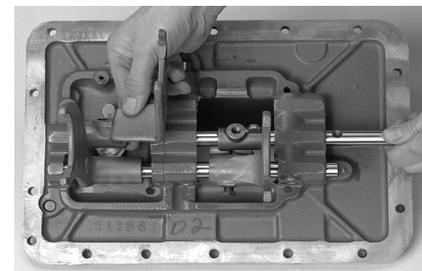

Transmission Overhaul Procedures-Bench Service

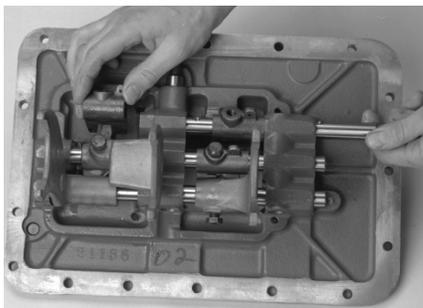

15. Holding the top bar notched-end, start installation. As the bar passes the rear boss, position the shift block.
16. As the bar passes the center boss, position the shift yoke on the bar, long hub to the housing rear.

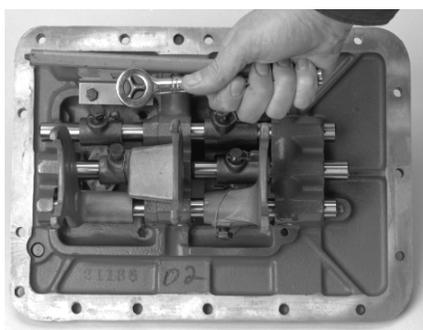

17. Install the shift block and shift yoke lockscREWS, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.
18. Install the oil trough. Torque the retaining capscREWS to 8-12 lb-ft (10.85-16.30 N•m). (Some models do not have an oil trough.)



19. Install the three (3) tension balls, one in each housing top bore. Install the three (3) detent springs, one over each tension ball.

Note: Make sure interlocking system is working - should not shift into 2 gears at the same time.

Note: Make sure all lockscREWS are lockwired.

How to Disassemble the Forward Shift Bar Housing

Special Instructions

The shift bar housing must be removed from the transmission.

During disassembly, lay all parts on a clean bench in order of removal to facilitate assembly.

Shift bars not being removed must be kept in the neutral position or the interlocking parts lock the bars.

Start with the bottom shift bar.


Cut the lockwire and remove the lockscrews from each bar just before their removal.

Special Tools

- Typical service tools

Procedure -


1. If the three (3) sets of tension springs and balls from housing bores have not been removed, place the shift bar housing on its side to remove them.

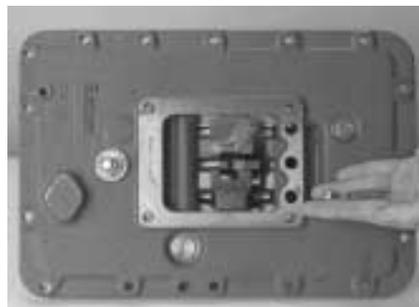

2. Remove the oil trough retaining capscrews and oil trough. (Some models do not have an oil trough.)
3. With the housing rear to the right, lay the assembly on a flat surface.




Transmission Overhaul Procedures-Bench Service

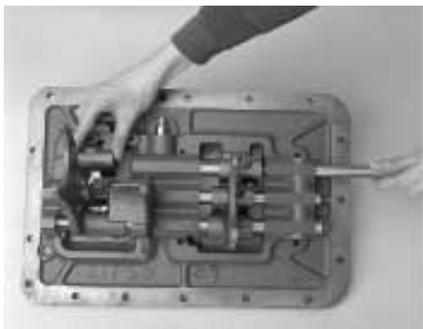

4. While removing the top yoke bar to the right, remove the two (2) shift blocks.



5. From the middle yoke bar, remove the shift yoke and shift block. As the neutral notch in the bar clears the rear boss, remove the small interlock pin from the notch bore.

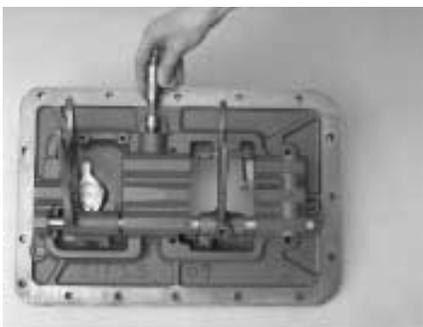


6. Remove the actuating plunger from the center top bore boss.



7. From the bottom yoke bar, remove the two (2) shift yokes.

Transmission Overhaul Procedures-Bench Service


8. As the shift bar clears the last boss, two (2) 3/4" interlock balls drop from the bottom rear boss bore.

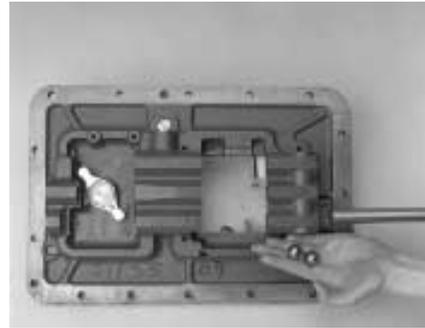

9. If damaged, from the 1st and reverse shift yoke, remove the plug, spring, and plunger.



10. Inspect the yoke or block parts, replace the worn parts.

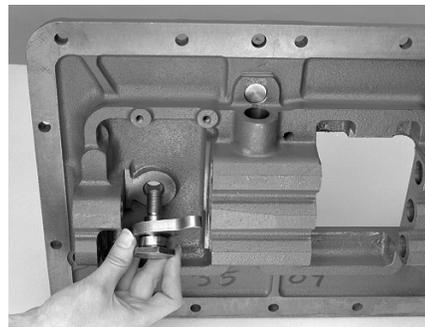

Transmission Overhaul Procedures-Bench Service

How to Assemble the Forward Shift Bar Housing

Special Instructions

Inspect shift blocks and shift yokes for wear.


Apply Eaton® sealant #71208 or equivalent to the shift bar housing plugs which are used to plug oil cooler provision holes. The sealant should be applied so at least 5 complete threads are covered.

Apply Eaton® lockwire #1819 or equivalent to all shift bar housing assembly set screws in both blocks and yokes. The wire should anchor the capscrew at least 2 complete 360° turns. The lockwire ends should be trimmed and bent out of the way of any part.

Keep yoke bars in neutral while assembling.

Special Tools

- Vise with brass jaws or wood blocks

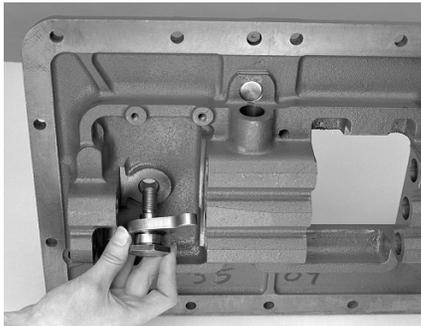

Procedure -

1. *Assemble the yoke actuator assembly:*
2. From the shift bar housing bottom, install the actuator pin and yoke actuator.
3. On the shift bar housing top, install the washer and nut.

Transmission Overhaul Procedures-Bench Service


4. Assemble the 1st and reverse shift yoke assembly:
 - Install the plunger in the 1st and reverse shift yoke bore, plunger shank to the outside.
 - Install the spring into the bore over the plunger shank.
 - Install the plug and tighten to compress the spring.
 - After plug bottoms out, back the plug out 1 to 1-1/2 turns.
 - Complete the block assembly process by staking the plug through the small hole in block.



5. With the housing rear to the right, lay the assembly on a flat surface.
6. Start installation of the bottom shift bar, as the bar passes the bosses, install the two (2) bottom shift yoke assemblies.




7. Install the shift yoke lockscrew, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.
8. Place the actuating plunger in the top center bore.
9. Place one 3/4" interlock ball in the interlock bore, against the bottom bar.

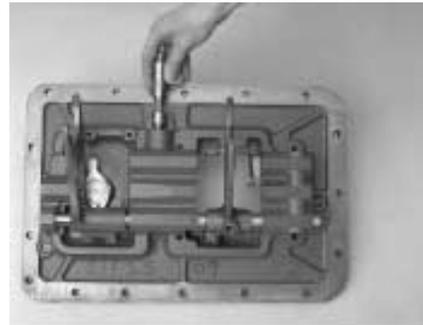

10. Holding the middle bar notched-end, start installation. As the bar passes the rear boss, position the shift block.
11. As the bar passes the center boss, position the shift yoke on bar, long hub to the housing front.
12. Just prior to inserting notched-end of bar in rear boss, install the small interlock pin vertically in the neutral notch bore.
13. Install the shift block and shift yoke lockscrews, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.
14. Place one 3/4" interlock ball in the interlock bore, against the middle bar.




Transmission Overhaul Procedures-Bench Service

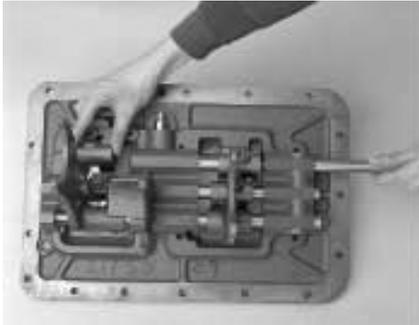

15. Holding the top bar notched-end, start installation. As the bar passes the rear boss, position the shift block.
16. As the bar passes the center boss, position the shift yoke on bar, long hub to the housing rear.



17. Install the shift block and shift yoke lock screws, torque to 35-45 lb-ft (47.45-61.01 N•m). Lockwire securely.
18. Install the oil trough, torque the retaining capscrews to 8-12 lb-ft (10.85-16.30 N•m). (Some models do not have an oil trough.)

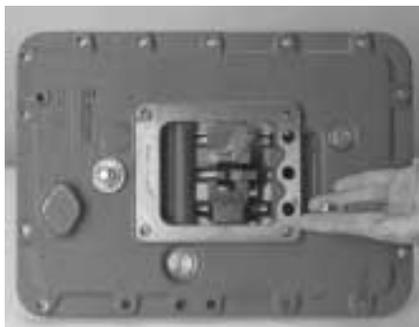

19. Install the three (3) tension balls, one in each housing top bore. Install the three (3) detent springs, one over each tension ball.

Note: Make sure interlocking system is working - should not shift into 2 gears at the same time.

Note: Make sure all lock screws are lockwired.

How to Remove the Input Shaft Assembly (without main case disassembly)

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T21: Bearing puller
- Soft bar and maul

Procedure -

1. From the front bearing cover, remove the six (6) retaining capscrews and cover. Remove any remaining gasket material from the case and cover.



2. If present, remove and discard the rubber seal ring on the input shaft. The ring is used only to seal the transmission during shipment.




3. From the input shaft groove, remove the bearing retaining snap ring.



Transmission Overhaul Procedures-Bench Service



4. Use a soft bar and maul to drive the input shaft toward the case rear as far as possible. Pull the input shaft forward.

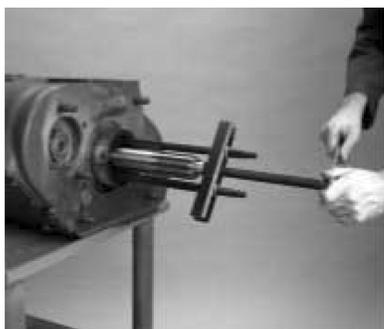

5. Install the bearing puller tool and remove the input bearing from the case and input shaft or use pry bars or screwdrivers to complete removal of the bearing.
6. From the drive gear front, remove drive gear spacer.



7. Remove the drive gear internal snap ring.



8. Pull the input shaft forward and out of the drive gear.
9. Inspect the bushing in the input shaft pocket, replace if damaged.

How to Install the Input Shaft Assembly (without main case disassembly)

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T12: Input bearing driver
- Toolmaker's dye

Procedure -

1. If necessary, install the bushing in the back of the input shaft.
2. From the front, engage the input shaft spline teeth into the main drive gear.


Note: The current design input shaft spline teeth have noticeable clearance to the main drive gear internal spline teeth. This is normal.

3. Install the snap ring in the main drive gear inside groove.

4. Install the spacer washer over the input shaft. With the bearing external snap ring to the outside, position the bearing on the input shaft.



Transmission Overhaul Procedures-Bench Service

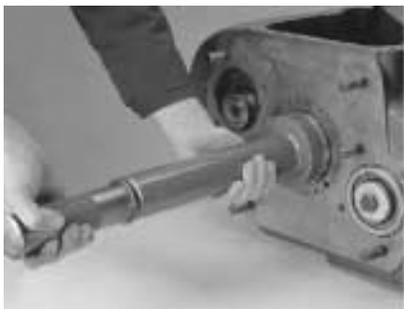

5. Install the input shaft bearing over the input shaft. Use a flanged-end bearing driver which contacts both the bearing inner race and outer race. Drive the bearing until it contacts the front case.



6. Install the input shaft retaining snap ring.
Note: Do not replace the small rubber lip seal. It is used only to prevent leakage during shipping.



7. Install the front bearing cover. Apply Loctite 242 to cap screw threads and torque to 35-45 lb-ft (47.45-61.01 N•m).

How to Remove the Auxiliary Section with Tapered Bearings

Special Instructions

There can be different capscrew lengths, note their location.

Auxiliary sections can be removed either with the transmission in the horizontal position or the vertical position.

Auxiliary countershaft retaining straps may be installed to hold the countershafts in place. You can make retaining straps from 3" x 1" bar stock. The auxiliary section can be removed without straps, use caution.

Special Tools

- See Tool Information (see Table 6)
- Item T2: Auxiliary section hanger bracket for horizontal removal
- A steel bar longer than the width of the output yoke for vertical removal
- A hoist with a lifting chain
- Auxiliary countershaft retaining straps


Procedure -

1. **To remove the auxiliary section in the horizontal position.** Remove the four (4) capscrews and the auxiliary countershaft rear bearing cover, gasket, and rear bearing shim.




2. Install the auxiliary countershaft retaining straps with 2 - 3/8" NC x 1" and 1 - 3/8" NC x 1 - 1/2" clean capscrews.

Note: Do not use an air gun. Tighten by hand until the capscrews are snug.

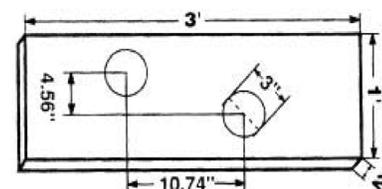

Transmission Overhaul Procedures-Bench Service

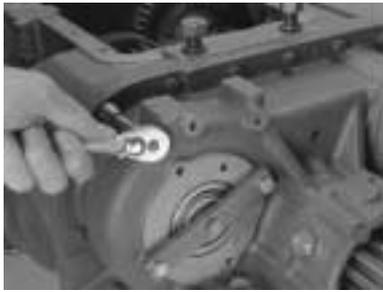

3. From the auxiliary section housing, remove the retaining cap screws that attach the front section to the auxiliary section.
4. Insert the two (2) longest cap screws in the housing flange tapped holes. Tighten evenly to move the auxiliary section away from the front box. Go far enough to break the gasket seal.
5. Remove the cap screws from the tapped holes.



6. Attach an auxiliary section hanger bracket to the auxiliary section top.
7. Attach a lifting chain to the auxiliary section hanger bracket.
8. Move assembly to the rear until auxiliary section is free.
9. Remove the gasket and clean all mounting surfaces of gasket material.




Procedure -

1. **To remove the auxiliary section in the vertical position.** With blocks under the clutch housing to prevent input shaft damage, place transmission in the vertical position, clutch housing down.
2. Remove the four (4) cap screws and the auxiliary countershaft rear bearing cover, gasket, and rear bearing shim. Clean the gasket surface area.
3. Install the auxiliary countershaft retaining straps with 2 - 3/8" NC x 1" and 1 - 3/8" NC x 2 - 1/2" clean cap screws.

Note: Do not use an air gun. Tighten by hand until the cap screws are snug.

4. From the auxiliary section housing, remove the retaining cap screws that attach the front box to the auxiliary section.
5. Install a steel bar through the yoke.
6. Attach a lifting chain to the steel bar.
7. Lift assembly from the front section.

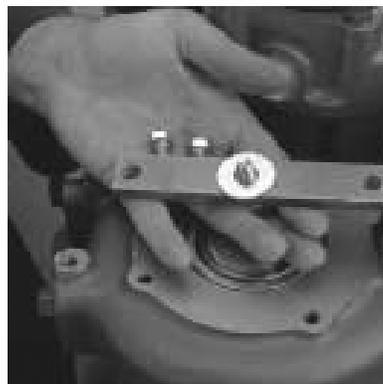

How to Remove the Combination Cylinder Assembly

Special Instructions

None

Special Tools

- Typical service tools

Procedure -

1. Drain lube.
2. At the combination cylinder cover, remove the 5 capscrews with washers.
3. Remove the cylinder cover and gasket.



4. If necessary, remove the insert valve retaining nut from the cylinder cover. Remove the insert valve from the bore.



5. Remove the 15/16" nut on the range yoke bar.
6. Remove the 3/4" nut on the reduction yoke bar.



Transmission Overhaul Procedures-Bench Service



7. Remove the cylinder housing and gasket.



8. Remove the range and reduction pistons from the cylinder bores.



9. If necessary, remove the O-rings from the range cylinder bore and the reduction cylinder bore.
10. If necessary, remove the O-rings from the range piston I.D. and O.D. and the reduction piston O.D.



How to Remove the Auxiliary Countershaft Assembly

Special Instructions


For ease of disassembly, mount the auxiliary section upright in a vise.

Both countershafts are removed the same.


As the countershaft strap is removed, the countershaft can fall.

Special Tools

- See Tool Information (see Table 6)
- Vise with brass jaws or wood blocks
- Item T11: Bearing Puller
- Soft bar and maul

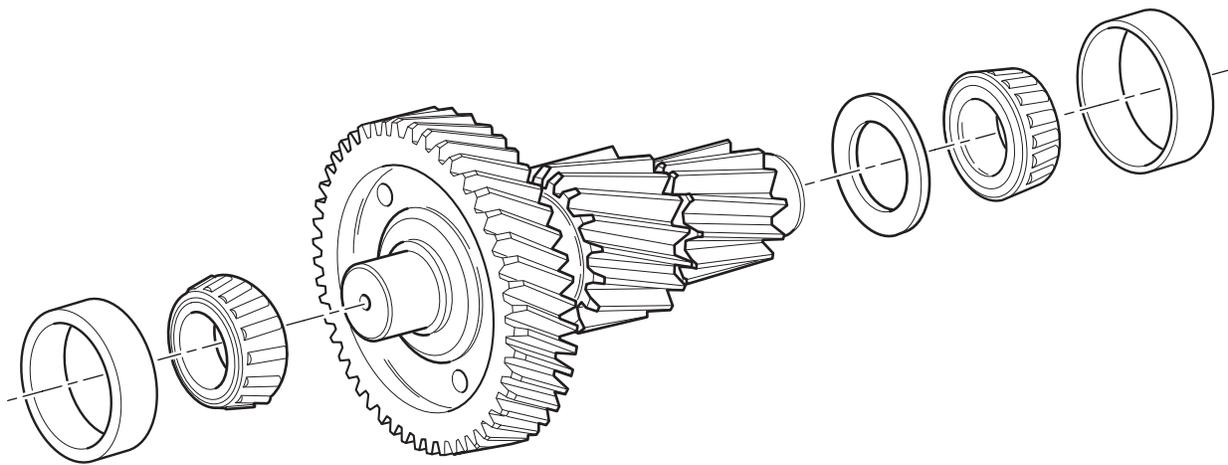

Transmission Overhaul Procedures-Bench Service

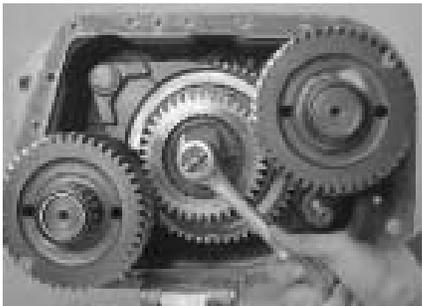

Procedure -


1. To hold the auxiliary countershafts from turning, place a shop rag or equivalent between the splitter gear and one countershaft.
2. From the output shaft, loosen 1 1/2" nut. Do not remove yet.



3. Install countershaft retaining strap.



4. Use a soft bar and maul to drive the output shaft forward far enough to partially unseat the bearing.

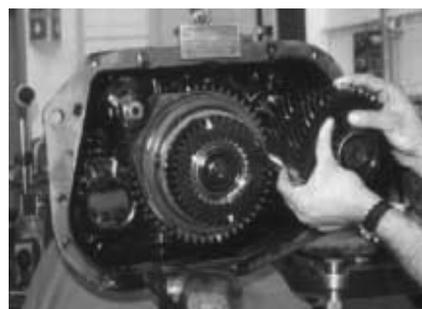

5. Support the auxiliary countershaft while removing the auxiliary countershaft retaining strap.
6. Remove the auxiliary countershaft.

Transmission Overhaul Procedures-Bench Service

7. Remove the auxiliary countershaft bearing race from bore.



8. If necessary, secure the countershaft assemblies in a vise and remove both the front and rear bearings with a bearing separator and jaw pullers.



Transmission Overhaul Procedures-Bench Service

How to Disassemble the Output Shaft Assembly

Special Instructions

When using the soft bar and maul on the output shaft, be careful not to damage the threads.

When removing the rear bearing cover, the rear bearing cone drops from the housing bore.

Special Tools

- Vise with brass jaws or wood blocks
- Press
- Soft bar and maul



Procedure -

1. Remove the range yoke assembly and synchronizer. Remove the range yoke assembly from the synchronizer sliding clutch.
2. Use a 1 1/2" socket or wrench to remove the auxiliary mainshaft nut.
3. Remove the washer and dowel pin from the auxiliary mainshaft.

Transmission Overhaul Procedures-Bench Service

4. Remove the low range gear and coupler assembly.



5. From front with a punch and hammer, drive the two coupler pins from the coupler. Align the coupler splines with the washer splines and remove the range coupler from the LO range gear.



6. If necessary, remove the bushings from inside the coupler.



7. Remove the splined washer from inside the LO range gear.



Transmission Overhaul Procedures-Bench Service



8. Remove the sliding clutch and the reduction yoke assembly from the auxiliary housing.



9. Use a soft bar and maul to completely drive the output shaft forward and through the rear bearing assembly.



10. Remove the bearing inner spacer from the output shaft.



11. Use the reduction gear front face as a base, press the output shaft through the bearing and gear. This frees the bearing, reduction gear, washer, and the splined washer.

Transmission Overhaul Procedures-Bench Service

12. Remove the flat washer, reduction gear, and the stepped washer from the shaft.



13. Remove the rear bearing cover retaining capscrews, rear bearing cover, and the gasket from the auxiliary housing. The rear bearing cone drops from the housing bore when the cover is removed. If necessary, replace the oil seal on the rear bearing cover.



14. Remove the complete bearing race from the bearing bore.



Transmission Overhaul Procedures-Bench Service



How to Disassemble the Synchronizer Assembly

Special Instructions

Place the synchronizer assembly on a clean, flat surface. Cover the synchronizer assembly with a shop rag to prevent losing the three (3) springs under pressure from the HI range synchronizer pin locations.

Special Tools

- Typical service tools

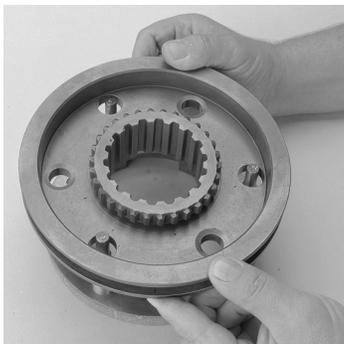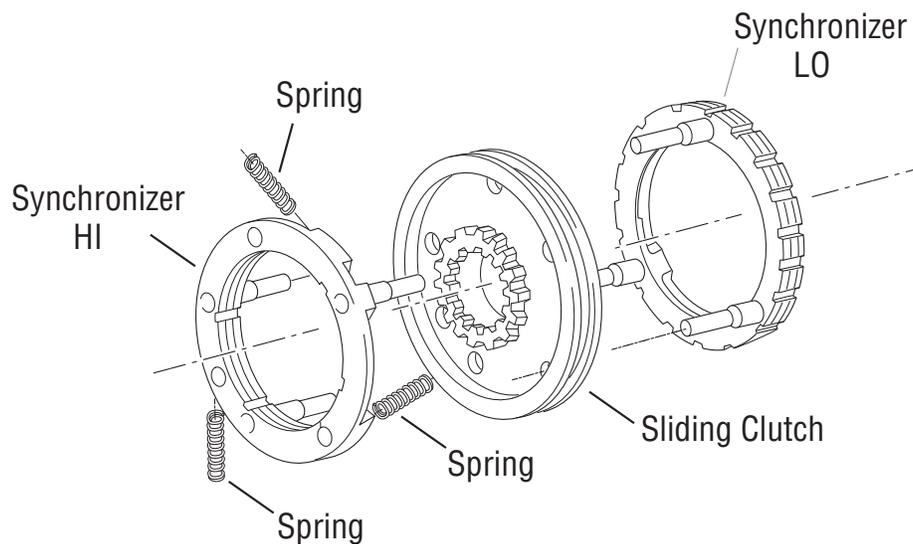

Procedure -

1. Place the larger LO range synchronizer ring on the bench.
2. Cover the synchronizer with a shop rag to contain the springs.
3. Grab both sides of the HI range synchronizer and pull.
4. From the synchronizer ring LO range pins, remove the sliding clutch.

How to Assemble the Synchronizer Assembly

Special Instructions


Assembly should be done on a clean, flat surface slightly lower than your waist.

Pins on the LO range synchronizer must line up with the chamfered holes on the sliding clutch bottom.

When compressing the HI range synchronizer springs cover with a shop rag. In the event compression is not achieved the first time, this prevents the springs from leaving the bench area.


Special Tools

- Typical service tools

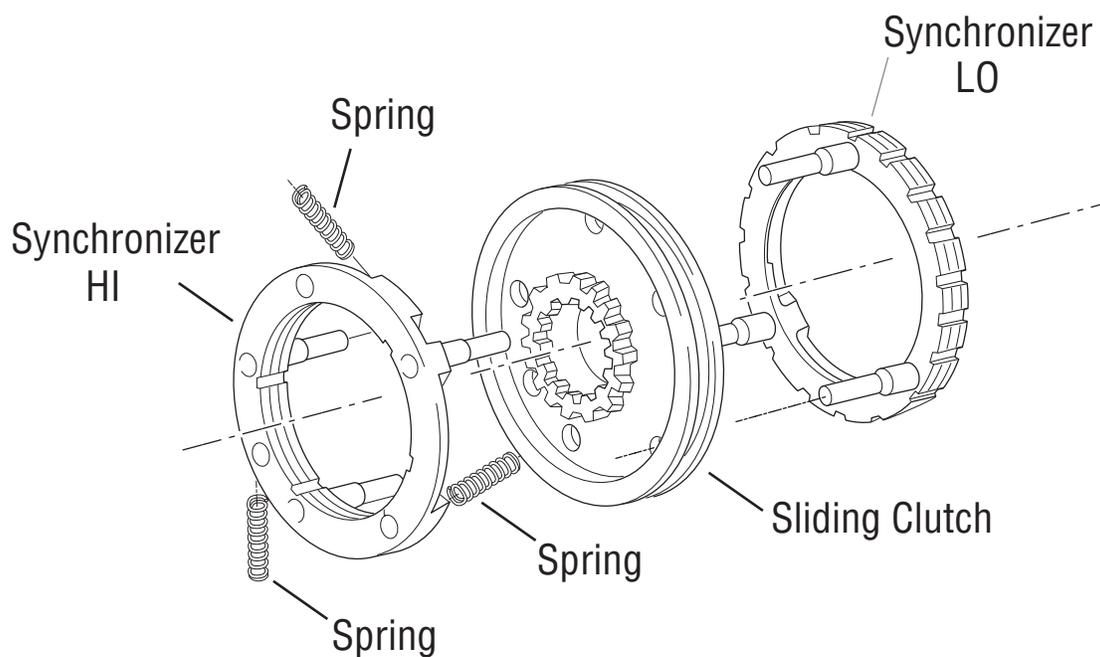


Transmission Overhaul Procedures-Bench Service


Procedure -

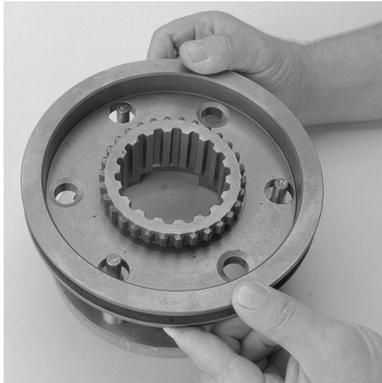


1. On the bench place the larger LO range synchronizer ring face down with pins up.
2. With the sliding clutch recessed side up, place the sliding clutch on the LO range synchronizer pins.

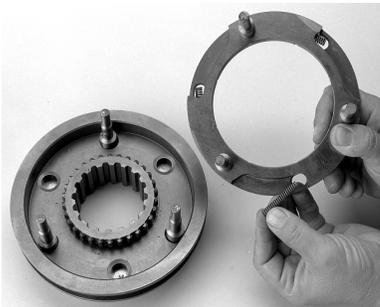

3. In the HI range synchronizer bores, install the three (3) springs.

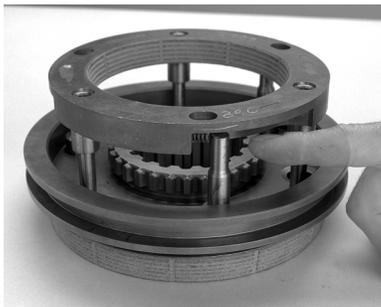

4. Place the HI range synchronizer ring over the LO range synchronizer ring. Rotate the HI range synchronizer until the springs are seated against the pins.

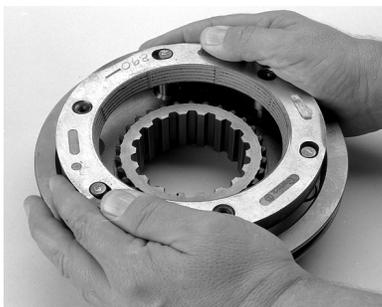

5. Cover the assembly with a shop rag.
6. Apply downward pressure to the HI range synchronizer ring while twisting counterclockwise. This compresses the springs to fully seat HI range on the LO range synchronizer. This should be done with a rapid twist and push motion.

Note: Make sure there are three springs and they are fully compressed.

Note: Make sure you can move the sliding clutch from HI to LO range and back.

How to Assemble the Output Shaft Assembly

Special Instructions

Make sure the magnetic plugs are installed in the auxiliary housing.

When heating the bearings, do not heat above 275°F (136°C).

Special Tools

- See Tool Information (see Table 6)
- Toolmakers's dye
- Heat lamp or hot plate and oil
- Oil seal installation tool

Procedure -

1. From auxiliary mainshaft front, assemble deep reduction clutch over splines.



2. Mark, with toolmaker's dye, two opposing teeth on the low range gear.



Transmission Overhaul Procedures-Bench Service



3. Assemble low range gear to coupler and install bushings if removed.



4. Install splined washer in low range gear



5. Assemble gear over coupler.



6. Rotate splined washer to align pins and drive pins through lock washer.

Note: Make sure pins are installed below coupler thrust surface.

Transmission Overhaul Procedures-Bench Service

7. Slide low gear assembly on auxiliary mainshaft front.



8. Install dowel pin.



9. Place retainer washer in position.



10. If reusing nut, apply a thread locking compound to the threads. New nuts should have a pre-applied locking compound. Torque the nut to 180-210 Lbf-ft.



Transmission Overhaul Procedures-Bench Service



11. Assemble mainshaft assembly into transmission rear. Splines on mainshaft end must slide into range synchronizer. Marked teeth on low a range gear must be aligned with marked teeth on countershafts.



12. Install O-ring or gasket onto deep reduction yoke end. NOTE: Early versions used P/N 21338 gasket with P/N 21337 piston. Current designs use a P/N 4301348 O-ring with P/N 43013320 piston. The proper gasket or O-ring must be installed with the respective piston.



13. Install deep reduction yoke into slot on deep reduction sliding clutch. Make sure positioning is correct.



14. Install stepped washer over auxiliary mainshaft with stepped side up.

Transmission Overhaul Procedures-Bench Service

15. Mark, with toolmaker's dye, two opposing teeth on the reduction gear.



16. Install reduction gear over auxiliary mainshaft. Line up marked teeth.



17. Apply grease to reduction gear rear thrust surface.



18. Install large flat washer.



19. Select front tapered output bearing (bearing with longer rollers). Heat and install.



Transmission Overhaul Procedures-Bench Service



20. Install inner bearing spacer.
21. If not previously installed, install dowel pins. Confirm installation to proper distance.
22. Position gasket and install auxiliary housing.
23. Install bearing cup.



24. Heat rear tapered bearing and install over outputshaft.
25. Position a new gasket on the rear bearing cover mounting surface.



26. Apply Eaton/Fuller Sealant #71205 or equivalent to the retaining capscrews.
27. Install the bearing cover and capscrews. Tighten to 35-45 Lb•ft.

How to Install the Combination Cylinder Assembly

Special Instructions

Apply Eaton lubricant #71206 or equivalent to all shift cylinder assembly and spool valve O-rings so a film covers the entire surface.

Apply Eaton rust preventative #71213 or equivalent to all shift cylinder walls and yoke bars, cover the entire yoke bar surface that comes in contact with the shift cylinder O-ring.

Special Tools

- Typical service tools

Procedure -

1. Lightly lubricate O-rings with Eaton® Fuller® Silicone lubricant P/N 71206 or equivalent.
2. Install O-rings into range and reduction shift cylinders.




3. Install O-rings onto range and reduction pistons.



4. Install gasket and shift cylinder.



Transmission Overhaul Procedures-Bench Service

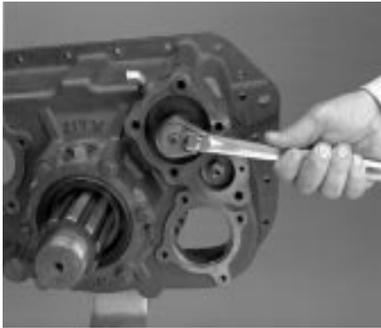

5. Install range piston with flat side to rear. Install range piston nut and torque to 70-85 Lb•ft.



6. Install deep reduction piston with flat side to rear. Install nut and torque to 50-65 Lb•ft.

Note: If reusing existing nut, make sure nylon locking material is in good shape, if not, replace nut.



7. Lightly lubricate insert valve O-rings with Eaton® Fuller® Silicone lubricant P/N 71206 or equivalent. Install insert valve with flat side to the inside. Install insert valve retaining nut and torque to 40- 50 Lb•ft.




8. Install gasket and cover. Apply Eaton® Fuller® thread sealant P/N 71205 or equivalent to capscrew threads. Install capscrews and torque to 35-45 Lb•ft.

How to Install the Auxiliary Countershaft Assembly

Special Instructions

To make auxiliary section assembly easier, you can make an auxiliary section fixture out of a 2" x 12" piece of wood.

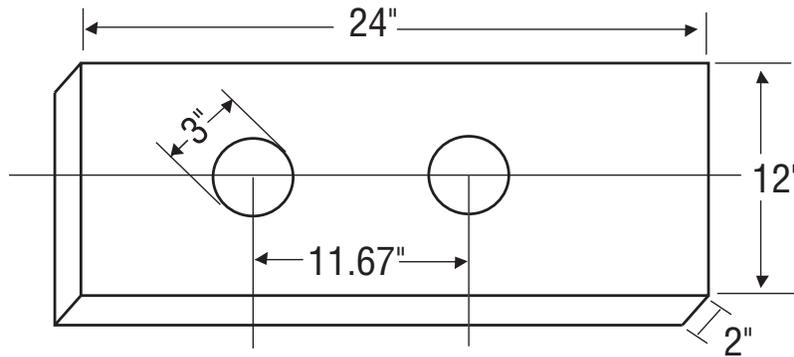


This fixture is designed to ease the assembly of the auxiliary gearing. Set the auxiliary countershaft rear bearings in the 3" holes.

Set the assembled auxiliary mainshaft between the countershafts with the timing marks aligned.

Special Tools

- Auxiliary countershaft retaining straps
- Toolmaker's dye

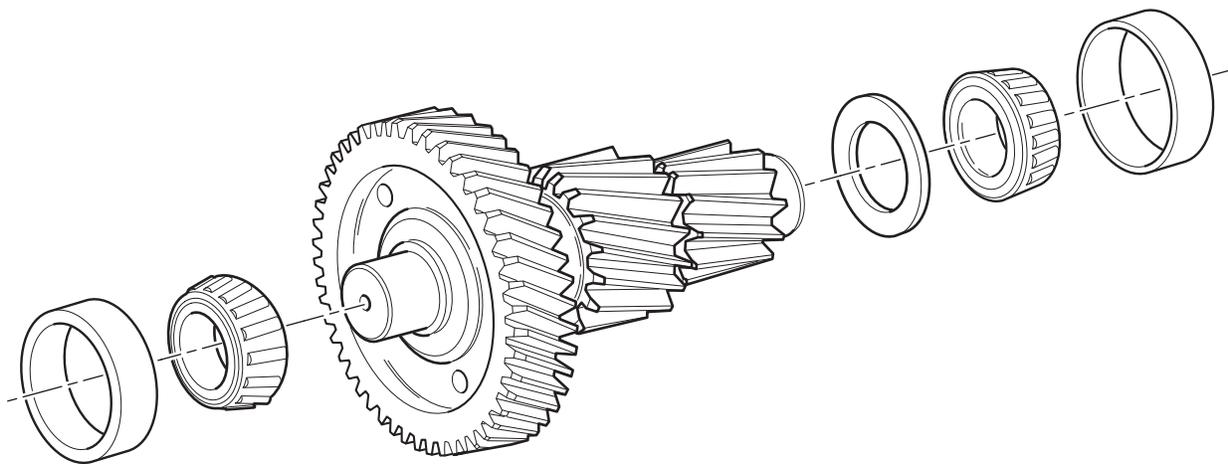


Transmission Overhaul Procedures-Bench Service



Procedure -

1. Place the front section in a vertical position.

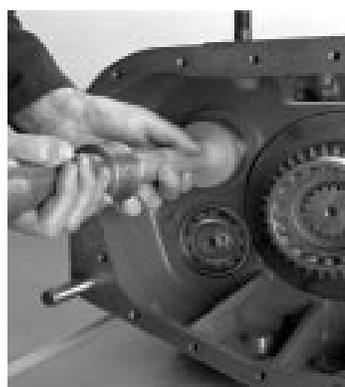

2. Install the auxiliary countershaft bearing cups into their respective bores in front section.



3. Mark, with toolmaker's dye, two opposing teeth on the auxiliary drive gear.

Transmission Overhaul Procedures-Bench Service

4. For timing purposes, identify and mark with toolmaker's dye the two teeth on each countershaft that are identified with a "O". Use a straight edge to line up the marked teeth with the teeth on the remaining two countershaft gears, paint these teeth.



5. Install both countershaft assemblies. Match the timing marks on the auxiliary drive gear with the timing marks on the countershafts.

Note: If assembling auxiliary section on a bench using fixture, position the auxiliary countershaft with timing marks facing inward. Follow the remaining steps.



Transmission Overhaul Procedures-Bench Service



6. Install the assembled outputshaft (see Outputshaft Assembly) between the countershafts and match the timing marks.
7. Install range and reduction yokes.
8. Place the auxiliary housing over the countershaft assemblies and the outputshaft assembly.
9. Make sure the outputshaft bearing spacer is on the outputshaft.
10. Heat the rear output bearing cone and install the bearing, tapered side down, on the shaft.
11. Position a new gasket on the rear bearing cover mounting surface.
12. Position the rear bearing cover.
13. Apply Eaton/Fuller Sealant #71205 or equivalent to the retaining capscrews.
14. Install the six (6) retaining capscrews in the non-chamfered hole, tighten to 35-45 Lb•ft of torque.
15. Install the bearing races.
16. Install each auxiliary countershaft retaining strap with 2 - 3/8" NC x 1" and 1 - 3/8" NC x 21/2" clean capscrews.

Note: Do not use an air gun. Tighten by hand until the capscrews are snug.

How to Remove the Clutch Housing

Special Instructions

Removal of the clutch housing is done in the horizontal position.

The clutch release mechanism must be removed.

Special Tools

- Typical service tools

Procedure -


1. From inside the clutch housing, remove the nuts and washers.
2. From inside the clutch housing, remove the bolts.
3. Jar clutch the housing to break the gasket seal.




4. Pull the clutch housing from the studs and transmission case.



Transmission Overhaul Procedures-Bench Service

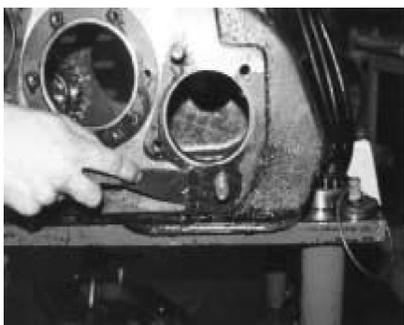

5. Remove the gasket and clean all mounting surfaces of gasket material.

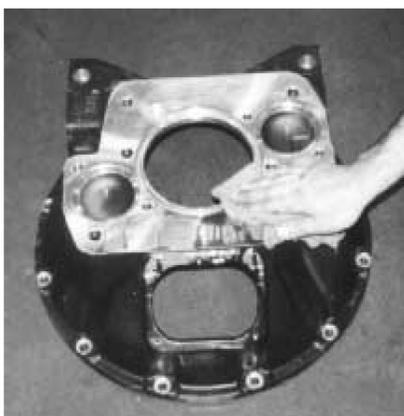


How to Remove the Auxiliary Drive Gear Assembly

Special Instructions

Before removing the auxiliary drive gear, the auxiliary section must be removed.

Special Tools


- Large pair of snap ring pliers
- Brass maul
- Crow's foot

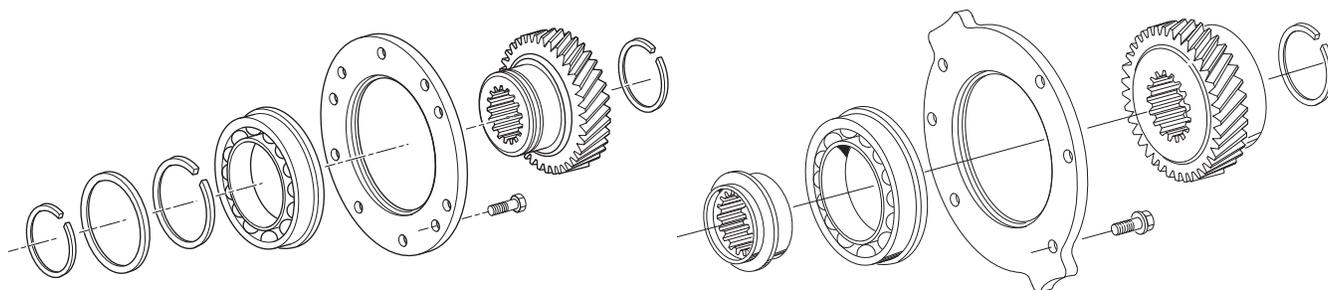


Standard Torque Capacity Models

Procedure -


1. Remove the mainshaft rear groove snap ring.
2. Remove the six (6) auxiliary bearing retainer ring capscrews and bearing retainer ring.

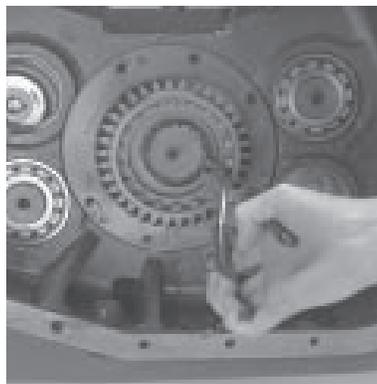


Transmission Overhaul Procedures-Bench Service

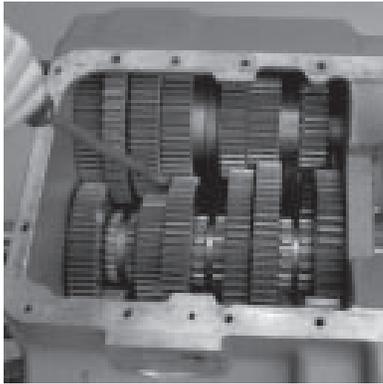

3. Insert a prybar into the main case gearing and use it to slide the mainshaft assembly rearward to move the auxiliary drive gear bearing from its bore.

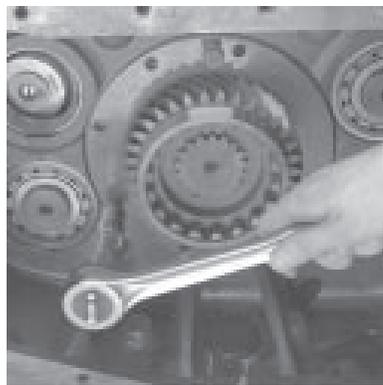


4. If it does not move easily, it may be necessary to install three cap screws in the threaded holes on the retainer plate. Tighten the three screws evenly to force the auxiliary drive gear assembly from the case. The three threaded holes are only found on earlier models.

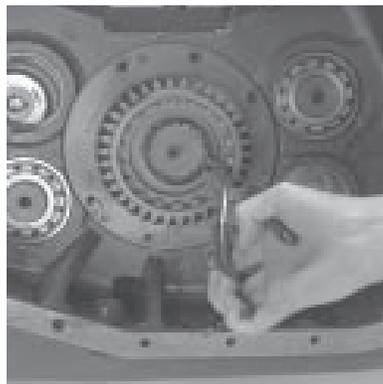

High Torque Capacity Models

Procedure -


1. Remove the mainshaft rear groove snap ring.

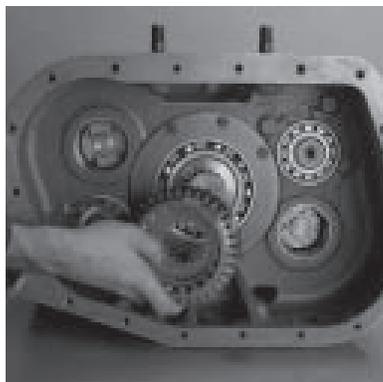


2. Slide the auxiliary drive gear off the mainshaft.

Transmission Overhaul Procedures-Bench Service


3. Remove six capscrews from auxiliary drive gear bearing retainer and remove the retainer plate.

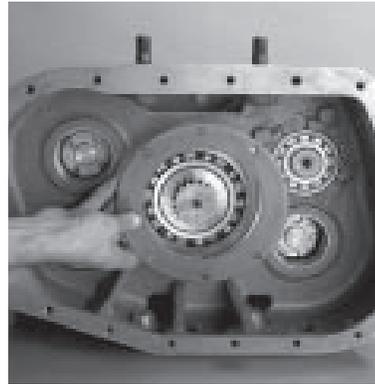

4. Insert prybar into main case gearing, use to slide mainshaft assembly rearward to move mainshaft rear bearing slightly rearward.

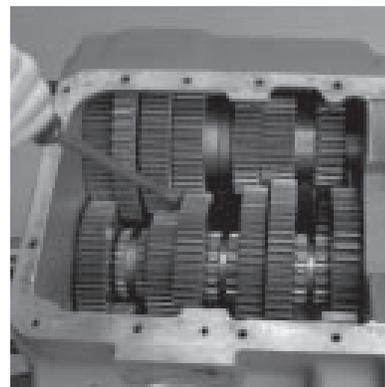

5. Use a rolling head prybar (crow's foot) to work the mainshaft rear bearing from its bore.

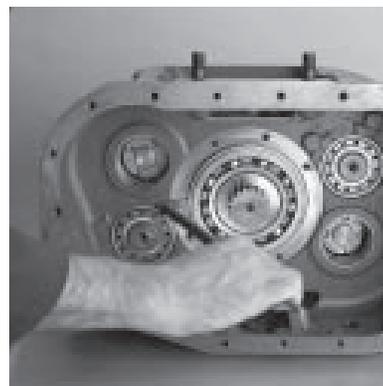

6. If the bearing must be replaced, press the inner spacer from the mainshaft rear bearing.

Transmission Overhaul Procedures-Bench Service

How to Disassemble the Upper Reverse Idler Gear Assembly

Special Instructions


Before the upper reverse idler gear assembly can be removed, mainshaft reverse gear must be positioned forward against the next gear.

While removing the reverse idler shaft, the thrust washer can drop to the transmission case bottom.

The mainshaft reverse gear must be moved in order to remove the upper reverse idler gear.

Special Tools


- Typical service tools
- Jaw pullers or impact puller
- Soft bar and maul

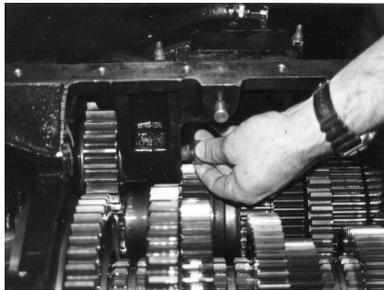

Procedure -

1. Remove retaining bolt from the Idler Shaft.


Note: If Idler Shaft spins in case bore, slightly heat bolt with torch to release loctite adhesive.

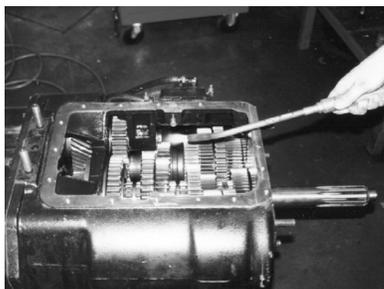


2. The mainshaft reverse gear must be moved in order to remove the upper reverse idler gear. Remove reverse gear snap ring and slide reverse gear forward over clutch.
3. Remove the loosened bolt and remove washer. Reinstall bolt 3-4 threads.

Transmission Overhaul Procedures-Bench Service

4. Install an impact puller, 1/2"-13 threaded end, and remove the shaft from case bore.

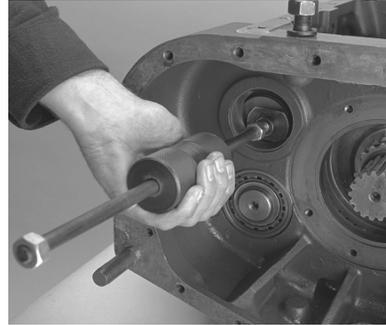

5. As the idler shaft and idler plate are removed, remove the thrust washers and gear.

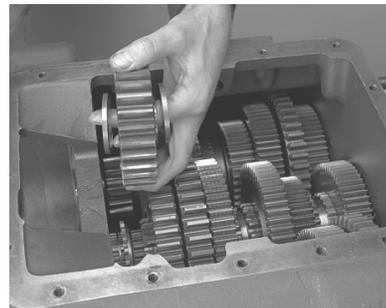

6. Inspect the reverse gear assembly, remove the inner race and needle bearing, if damaged.



Transmission Overhaul Procedures-Bench Service

How to Disassemble the Lower Reverse Idler Gear Assembly

Special Instructions

Before the lower reverse idler gear assembly can be removed the mainshaft and countershaft assemblies must be removed.

While removing the reverse idler shaft, the thrust washer can drop to the transmission case bottom.

Special Tools

- Typical service tools
- Jaw pullers or impact puller
- Soft bar and maul



Procedure -

1. Remove retaining bolt from the Idler Shaft.
Note: If Idler Shaft spins in case bore, slightly heat bolt with torch to release loctite adhesive.
2. Remove the loosened bolt and remove washer. Reinstall bolt 3-4 threads.
3. Install an impact puller, 1/2"-13 threaded end, and remove the shaft from case bore.
4. As the idler shaft and idler plate are removed, remove the thrust washers and gear.
5. Inspect the reverse gear assembly, remove the inner race and needle bearing, if damaged.



How to Remove the Upper and Lower Countershaft Bearings

Special Instructions

The following instructions are used to remove the upper and lower countershaft bearings. To remove the mainshaft assembly, only the upper countershaft bearings need to be removed.

Performing the following instructions will damage the bearings and should be not be done unless bearing replacement is planned.

The bearing inner race remains pressed on the countershaft after removal of the front bearings.

Special Tools

- Soft bar and maul
- Item T8: Countershaft Pusher
- Item T9: Bearing Puller

Procedure -

1. To keep the mainshaft pilot from falling out of the input shaft pocket, temporarily install the auxiliary drive gear on the mainshaft.
2. From each countershaft rear groove, remove the snap ring.
3. Remove six capscrews from front bearing cover and remove front bearing cover.



CAUTION

Damage will likely occur to this bearing during removal. It is strongly recommended that this bearing is discarded.

4. From inside the case, use a soft bar and maul to drive the countershaft rear bearings rearward off the shaft.



Transmission Overhaul Procedures-Bench Service



5. From the front of each countershaft, remove the capscrew and front retainer plate.
6. Use the soft bar and maul to drive each countershaft to the rear as far as possible. This partially unseats the front bearings.
7. Return to the case rear, and drive each countershaft forward as far as possible. This exposes the external snap ring.



8. Use the appropriate bearing puller T9 or prybars to remove the countershaft front bearings.

How to Remove the Mainshaft Assembly

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T15: Mainshaft hook

Procedure -

1. Secure the upper countershaft to the side and away from the mainshaft. Optional: Insert prybar between upper countershaft and main drive gear as shown.



2. Insert the mainshaft hook tool or rope around the mainshaft.

Note: Keep the upper countershaft forward against the case front wall.



Be careful when removing the mainshaft assembly. The sliding clutch on the front and the reverse gear on the back can slip off the shaft.

3. Pull the mainshaft to the rear to free the pilot from the input shaft pocket.



4. Tilt the mainshaft front up and lift the assembly from the case.



Transmission Overhaul Procedures-Bench Service

How to Remove the Countershaft Assemblies

Special Instructions

Except for the PTO gears, the upper and lower countershaft assemblies are the same. Mark the countershafts as UPPER or LOWER as you remove them.

The mainshaft and main drive gear must be removed before removing the countershaft assemblies.

Special Tools

- Typical service tools



Procedure -

1. Mark the countershafts as UPPER or LOWER as you remove them.

Note: The mainshaft and main drive gear must be removed before removing the countershaft assemblies.

2. Remove the rear snap ring from the rear upper countershaft bearing.

3. From inside the case, use a long soft bar to drive the upper countershaft rear bearing rearward off the shaft.

Note: Damage will likely occur to this bearing during removal. It is strongly recommended that this bearing is discarded.

4. Remove the cap screw and the retainer from the upper countershaft front.

5. Slide the lower countershaft forward. This will move the front bearing forward to expose the external snap ring.

Transmission Overhaul Procedures-Bench Service

6. Use the appropriate bearing puller (Tool ID T6) or two prybars to remove the lower front bearing from its bore.
7. Move the upper countershaft to the rear until the front bearing journal clears the front case bore.



8. Swing the front of the countershaft to the center of the case, and lift out the countershaft assembly.

Note: A large hook or piece of rope may help support the countershaft.

Note: Follow the same procedure for lower countershaft removal.



Transmission Overhaul Procedures-Bench Service

How to Disassemble the Countershaft Assemblies


Special Instructions

As you disassemble the countershafts, mark each part as belonging to the upper or lower countershaft and mark the gears for front or back orientation.

Except for the PTO gears, the left and right countershaft assemblies are identical and disassembled in the same manner.

Special Tools

- See Tool Information (see Table 6)
- Snap ring pliers
- Press

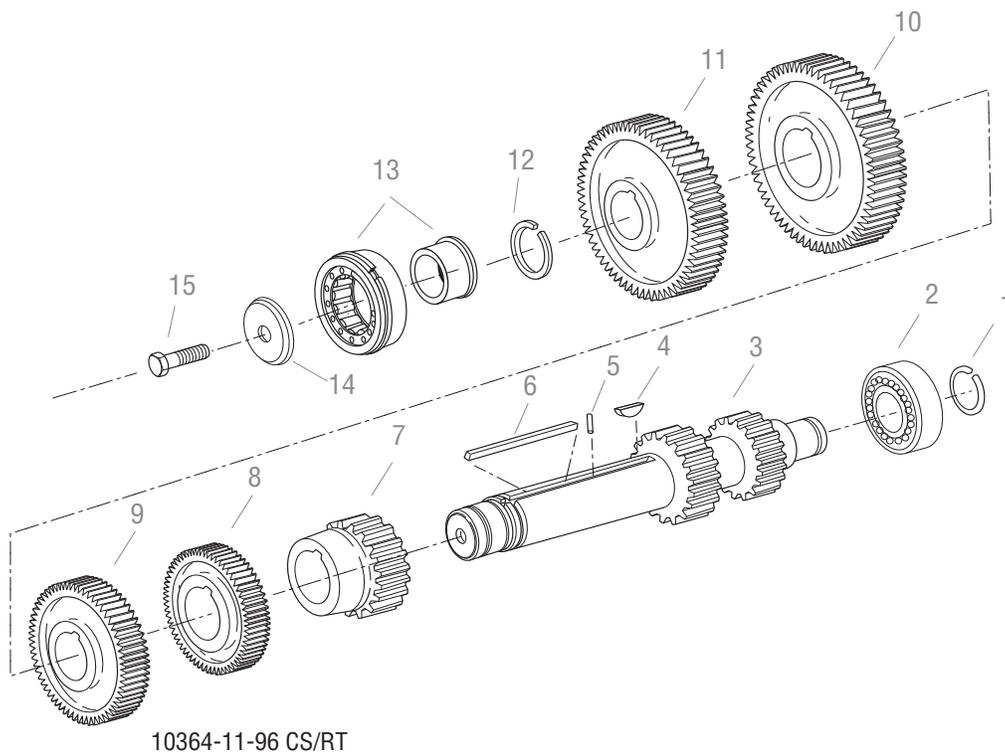

- | | |
|-------------------------------------|------------------|
| 1. Snap Ring | 8. Gear |
| 2. Bearing | 9. Gear |
| 3. Countershaft with Reverse and LO | 10. PTO Gear |
| 4. Key | 11. Drive Gear |
| 5. Roll Pin | 12. Snap Ring |
| 6. Key | 13. Bearing |
| 7. Gear | 14. Retainer Kit |
| | 15. Capscrew |


Transmission Overhaul Procedures-Bench Service

Procedure -

 CAUTION

NEVER USE THE PTO GEAR AS A PRESSING BASE. The narrow face width of this gear makes it very susceptible to breakage

1. Remove the front countershaft snap ring.
2. Place the countershaft in the press as shown. Using the rear face of 3rd/Overdrive speed gear as a base, press the drive gear, PTO gear, and 3rd/Overdrive speed gear from each countershaft. This removes the front bearing inner race from the countershaft.
3. Position the countershaft in the press as shown. Press the next two gears from the shaft.
4. Inspect the keys and roll pin. Remove and replace if damaged.

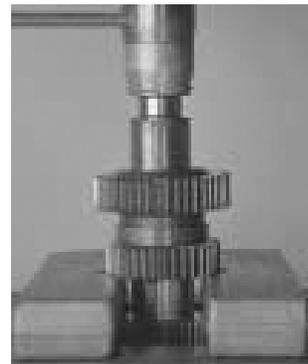

Transmission Overhaul Procedures-Bench Service

How to Remove the Input Shaft and Main Drive Gear

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T16: Bearing puller
- Soft bar and maul



Procedure -

1. From the front bearing cover, remove the six (6) retaining cap screws and cover. Remove any remaining gasket material from the case and cover.



2. If present, remove and discard the rubber seal ring on the input shaft. The ring is used only to seal the transmission during shipment.




3. From the input shaft groove, remove the bearing retaining snap ring.

Transmission Overhaul Procedures-Bench Service

4. Use a soft bar and maul to drive the input shaft toward the case rear as far as possible. Pull the input shaft forward.



5. Install the bearing puller tool and remove the input bearing from the case and input shaft or use pry bars or screwdrivers to complete removal of the bearing.
6. From the drive gear front, remove drive gear spacer.

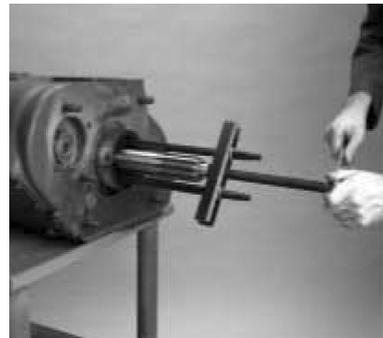

7. Remove the drive gear internal snap ring.



Transmission Overhaul Procedures-Bench Service



8. Pull the input shaft forward and out of the drive gear.
9. From inside the case, remove the drive gear.



10. Inspect the bushing in the input shaft pocket, replace if damaged.

How to Disassemble the Mainshaft Assembly

Special Instructions


Lay all parts on a clean bench in order of removal to facilitate assembly.

Special Tools

- Typical service tools

Procedure -

1. Lay the mainshaft on its side, and from the front, remove the 4th (or overdrive) and 5th sliding clutch.

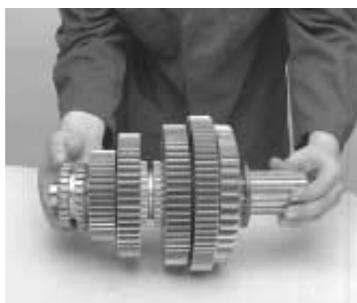

2. Place the mainshaft in a vertical position, pilot end down.
3. Remove snap ring (if applicable).



4. Remove key, washer, and reverse gear. Mark keyway location.

Note: When removing washer and reverse gear, note their orientation. Keep the washer with the reverse gear.

5. Remove the 1st and reverse sliding clutch.



Transmission Overhaul Procedures-Bench Service



6. Remove the offset washer and 1st gear.
7. Remove the flat washer and 2nd gear.



8. Remove the offset washer and sliding clutch.
9. Remove the offset washer and 3rd gear.
10. Remove the flat washer.



11. Remove the 4th or overdrive gear.
12. Remove the offset washer.

How to Disassemble the Mainshaft Assembly with Low Force Gearing

Special Instructions

The design of the mainshaft with Low Force Gearing is slightly different from the standard mainshaft. It still utilizes Non-Selective (Non-Adjustable) Tolerance Washers, but the 1st and reverse gears and sliding clutch have been redesigned. In this configuration, the 1st/reverse sliding clutch rides on a clutch hub, and the 1st and reverse gears have been redesigned to accommodate this change.


Lay all parts on a clean bench in order of removal to facilitate assembly.

Special Tools

- Typical service tools

Procedure -


1. Lay the mainshaft on its side, and from the front, remove the 4th (or overdrive) and 5th sliding clutch.

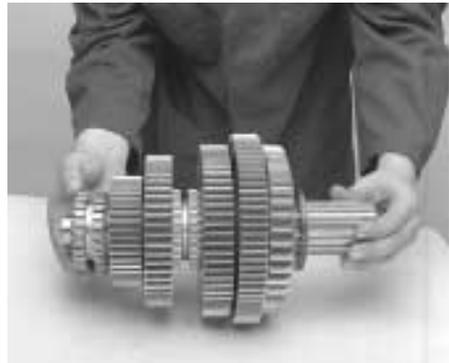

2. Place the mainshaft in a vertical position, pilot end down. Remove the reverse gear, clutch hub, and sliding clutch.



3. Remove the snap ring and key. Mark keyway location.

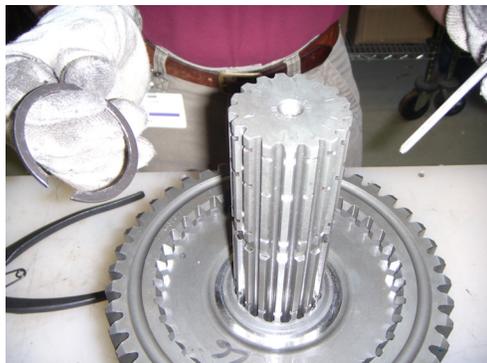

Transmission Overhaul Procedures-Bench Service



4. Remove the offset washer and 1st gear.



5. Remove the flat washer and 2nd gear.



6. Remove the offset washer and sliding clutch, and then remove the offset washer and 3rd gear.



7. Remove the flat washer, remove the 4th or overdrive gear, and remove the offset washer.

How to Assemble the Mainshaft Assembly with Selective (Adjustable) Thickness Tolerance Washers

Special Instructions

There are three distinct mainshaft washer and mainshaft key designs. They are (listed from oldest design to newest design):

- a. Six (6) sided mainshaft key with selective (adjustable) thickness tolerance washers.
- b. Three (3) sided mainshaft key with selective (adjustable) thickness tolerance washers.
- c. Three (3) sided mainshaft key with non-selective (non-adjustable) tolerance washers.

Note: Between 1993 and 1996, some models were produced with a mixture of selective thickness washers and non-selective tolerance washers on the same mainshaft.

Note: The proper mainshaft key must always be used with the proper design mainshaft washers. If necessary, refer to the parts manual for your specific model to confirm the proper parts.

Note: Previous design levels can be updated to the current design.

Each mainshaft gear must have its inside snap ring installed before placement on the mainshaft. Do not install reverse gear inside snap ring at this time.

Gear tolerance washers are internally splined and locked to the mainshaft by the key. Gear spacers are externally splined to engage with gear hub clutching teeth. There is one tolerance washer and one spacer for each mainshaft gear.

Axial clearance (end-play) limits are 0.006"-0.015" for all mainshaft gears.

If the axial clearance is less than the minimum 0.006" tolerance, the tolerance washer should be replaced with a thinner tolerance washer. This will increase the axial clearance between the gears. If the axial clearance is greater than the maximum 0.015" tolerance, a thicker tolerance washer should be installed. This will decrease the axial clearance between the gears.


If necessary, refer to the parts manual for your specific transmission model to determine the correct position of each mainshaft gear.

The mainshaft you are using may have 3 grooves in certain gear positions. The middle groove is not used with the selective washer design.

Special Tools

- A piece of 5/32" air line, 1' long
- Vise with brass jaws

Transmission Overhaul Procedures-Bench Service

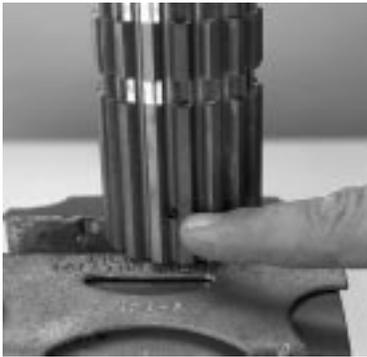

Procedure -

1. With mainshaft pilot-end down, secure the mainshaft in a vise equipped with brass jaws or wood blocks.
2. If previously removed, install the roll pin in keyway.



3. With the washer flat side up, position a gear tolerance washer (white) in the mainshaft 1st or bottom groove. Rotate the washer until the washer splines and mainshaft splines align.
4. Start at the mainshaft bottom and install a 1/8" or 5/32" diameter plastic line in the keyway to lock the washer in place. As limit washers and gears are installed, continue to push the plastic line up.



5. Against the 4th speed gear washer, position a spacer washer against the tolerance washer.




6. With clutching teeth down and engaged with the spacer external splines, position the proper gear on the mainshaft. If necessary, refer to the illustrated parts list to determine gear order.
7. With clutching teeth up and against this gear, install the next gear and spacer washer.

Transmission Overhaul Procedures-Bench Service

8. With the washer flat side down, position a tolerance washer against the spacer. Rotate the washer until the washer splines and mainshaft splines align.
9. Push the air line up to lock the washer on the mainshaft.



10. Insert two large screwdrivers between the two gears. Apply slight downward pressure to spread the gears evenly. Between the gear hub and mainshaft spacer, insert 0.006" feeler gauge and 0.015" feeler gauge. If out of tolerance, change the washer against the mainshaft spacer.

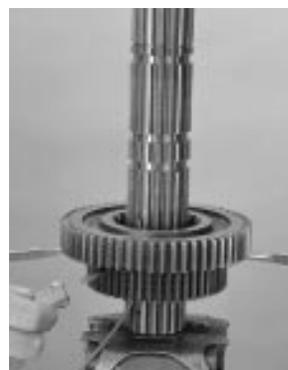

11. With the missing internal splines aligned with the plastic line, install a sliding clutch.



12. With the washer flat side up, position tolerance washer (white) in the next available groove. Rotate the washer until the washer splines and mainshaft splines align.
13. Push the air line up to lock the washer on the mainshaft.
14. Install a gear spacer.



Transmission Overhaul Procedures-Bench Service



15. With clutching teeth down, position the next gear on the mainshaft engaging with spacer external splines.



16. With clutching teeth up, install the next gear on shaft against the previously positioned gear.



17. Position another spacer against the previously positioned gear, engaging the spacer external splines with gear clutching teeth.

18. With washer flat side down, position the tolerance washer against the spacer. Rotate the washer until the washer splines and mainshaft splines align.

19. Push the air line up to lock the washer on the mainshaft.



20. Insert two large screwdrivers between the two gears. Apply slight downward pressure to spread the gears evenly. Between the gear hub and mainshaft spacer, insert 0.006" feeler gauge and 0.015" feeler gauge. If out of tolerance, change the washer against the mainshaft spacer. Refer to information before stepped procedures for further information.

Transmission Overhaul Procedures-Bench Service

21. Align the sliding clutch missing internal spline with the mainshaft key and install the reverse speed sliding clutch.
22. With the flat side up, place a washer (blue or white) in the next available groove. Rotate the washer until the washer splines and mainshaft splines align.
23. Push the air line up to lock the washer on the mainshaft.
24. Against the tolerance washer, position reverse speed gear spacer.



25. Install reverse gear on the mainshaft. Engage the gear clutching teeth with spacer external splines and sliding clutch. Move the reverse gear down against the 1st speed gear.



26. At this time remove the air line and insert the mainshaft key. Be careful not to move the gears while doing this procedure, the tolerance washers are unlocked and can rotate which would cause the gears to drop.



27. Remove the mainshaft from the vise.
28. On the shaft front, align the sliding clutch missing internal spline with the mainshaft key and install the front sliding clutch. Engage the sliding clutch external splines with the gear clutching teeth.



Transmission Overhaul Procedures-Bench Service

Washers for 6-Sided Key

| PART | SIZE | COLOR |
|-------|-------------|--------|
| 14711 | 0.248-0.250 | White |
| 14712 | 0.253-0.255 | Green |
| 14713 | 0.258-0.260 | Orange |
| 14714 | 0.263-0.265 | Purple |
| 14715 | 0.268-0.270 | Yellow |
| 14716 | 0.273-0.275 | Black |

Washers for 3-Sided Key

| PART | SIZE | COLOR |
|---------|-------|-------------------|
| 4300830 | 0.244 | Blue-Light Blue |
| 4300382 | 0.249 | White-Light Blue |
| 4300383 | 0.254 | Green-Light Blue |
| 4300384 | 0.259 | Orange-Light Blue |
| 4300385 | 0.264 | Purple-Light Blue |
| 4300386 | 0.269 | Yellow-Light Blue |
| 4300387 | 0.274 | Black-Light Blue |

How to Assemble the Mainshaft Assembly with Non-Selective (Non-Adjustable) Tolerance Washers

Special Instructions

The proper mainshaft key must always be used with the proper design mainshaft washers. If necessary, refer to the parts manual for your specific model to confirm the proper parts.

Previous design levels can be updated to the current design.

Special Tools

- A piece of 5/32" air line, 1" long
- Vise with brass jaws

Procedure -

1. With mainshaft pilot-end down, secure the mainshaft in a vise equipped with brass jaws or wood blocks.
2. If previously removed, install the roll pin in keyway.



3. With mainshaft pilot-end down, install offset washer (flat surface up). Rotate the washer until the washer splines and mainshaft splines align.
4. Start at the mainshaft bottom and install a plastic line in the marked keyway to lock the washer in place.



5. With clutching teeth down, position the proper gear on the mainshaft. Refer to the illustrated parts list for correct gear.
6. Install the flat washer. Rotate the washer until the washer splines and mainshaft splines align.



Transmission Overhaul Procedures-Bench Service



7. With clutching teeth up and against the spacer, install the next gear.



8. Position the offset washer (flat surface down) against the gear. Rotate the washer until the washer splines and mainshaft splines align.



9. Push the air line up to lock the washers on the mainshaft.

10. With the missing internal splines aligned with the plastic line, install the proper sliding clutch.



11. Position the next offset washer in the next available groove. Rotate the washer until the washer splines and mainshaft splines align.

12. Push the air line up to lock the washer on the mainshaft.

13. With clutching teeth down, position the next proper gear on the mainshaft.

14. Position the flat washer against the gear. Rotate the washer until the washer splines and mainshaft splines align.

Transmission Overhaul Procedures-Bench Service

15. With clutching teeth up, install next gear on the shaft against previously installed gear.



16. Position the offset washer (flat surface down) against the gear. Rotate the washer until the washer splines and mainshaft splines align.

17. Push the air line up to lock the washer on the mainshaft.

18. With the missing internal splines aligned with the plastic line, install the reverse sliding clutch.

19. Install the reverse gear offset washer in the last groove.



20. From the mainshaft rear, install the mainshaft key into the spline with the air line. Pull the air line from the spline while installing the key.

21. Install the reverse gear spacer washer (with external spline teeth) over the mainshaft rear and against the offset washer.

Note: Some models, the reverse gear offset washer has a large chamfer machined in the backside. This special offset washer must be used in this position. The large chamfer faces rearward.

22. From the rear, install the reverse gear over the sliding clutch teeth.

23. Install the snap ring in the mainshaft groove.

Note: Some models do not use a snap ring at this position.

24. Remove the mainshaft from the vise and lay on its side.

25. Install the front sliding clutch into position.



Transmission Overhaul Procedures-Bench Service

How to Assemble the Mainshaft Assembly with Low Force Gearing

Special Instructions

The design of the mainshaft with Low Force Gearing is slightly different from the standard mainshaft. It still utilizes Non-Selective (Non-Adjustable) Tolerance Washers, but the 1st and reverse gears and sliding clutch have been redesigned. In this configuration, the 1st/reverse sliding clutch rides on a clutch hub and the 1st and reverse gears have been redesigned to accommodate this change.

The proper mainshaft key must always be used with the proper design mainshaft washers. If necessary, refer to the parts manual for your specific model to confirm the proper parts.

Special Tools

- A piece of 5/32" air line, 1" long
- Vise with brass jaws



Procedure -

1. With mainshaft pilot-end down, secure the mainshaft in a vise equipped with brass jaws or wood blocks.
2. If previously removed, install the roll pin in keyway.
3. With mainshaft pilot-end down, install offset washer (flat surface up). Rotate the washer until the washer splines and mainshaft splines align.
4. Start at the mainshaft bottom and install a plastic line in the marked keyway to lock the washer in place.
5. With clutching teeth down, position the 4th gear on the mainshaft.
6. Install the flat washer. Rotate the washer until the washer splines and mainshaft splines align.

Transmission Overhaul Procedures-Bench Service

7. With clutching teeth up and against the spacer, install the 3rd gear.
8. Position the offset washer (flat surface down) against the gear. Rotate the washer until the washer splines and mainshaft splines align.



9. Push the air line up to lock the washers on the mainshaft.
10. With the missing internal splines aligned with the plastic line, install the proper sliding clutch.



11. Position the next offset washer in the next available groove. Rotate the washer until the washer splines and mainshaft splines align.
12. Push the air line up to lock the washer on the mainshaft.
13. With clutching teeth down, position the 2nd gear on the mainshaft.



14. Position the flat washer against the gear. Rotate the washer until the washer splines and mainshaft splines align.



Transmission Overhaul Procedures-Bench Service



15. With clutching teeth up, install the 1st gear on the shaft against previously installed gear.



16. Position the offset washer (flat surface down) against the gear. Rotate the washer until the washer splines and mainshaft splines align.

17. From the mainshaft rear, install the mainshaft key into the spline with the air line. Pull the air line from the spline while installing the key.



18. Install the snap ring in the mainshaft groove.

19. Install the 1st/reverse sliding clutch.



20. Install the clutch hub with the bezel facing up.

21. Install the reverse gear.

22. Remove the mainshaft from the vise and lay on its side. Install the front sliding clutch into position.

How to Prepare the Main Case for Assembly

Thoroughly clean case of metal particles. Remove the gasket material from flange surfaces. Inspect flange surfaces for damage. Inspect bearing bores for damage or excessive wear. Replace as necessary.

If necessary, replace any damaged or worn clutch housing or rear support studs. Apply Eaton® Fuller® thread sealant #71205 or equivalent to any replacement studs before installing them.

Verify the three magnetic discs are firmly attached to the bottom of the main case. If they are not firmly attached, apply 3M scotch grip or equivalent adhesive to the bottom of the discs and attach them to the main case.

Transmission Overhaul Procedures-Bench Service

How to Assemble the Countershaft Assemblies

Special Instructions

Except for the PTO gears, the upper and lower countershaft assemblies are the same. To avoid confusion during installation, mark the upper countershaft (45-tooth PTO gear) with an "U". The lower countershaft has a 47-tooth PTO gear.

Special Tools

- Snap ring pliers
- Press



Procedure -

1. If previously removed, install the keys in each countershaft keyway.
2. Align smallest diameter gear keyway with the countershaft key, long hub to countershaft front, and press the gear on the countershaft.
3. Align 2nd smallest diameter gear keyway with the countershaft key, long hub against 1st speed gear, and press the gear on the countershaft.

Transmission Overhaul Procedures-Bench Service

4. Align 3rd smallest diameter gear keyway with the countershaft key, long hub to countershaft front, and press the gear on the countershaft.



5. Align PTO gear keyway with the countershaft key, bullet-nose of teeth facing up (shaft rear). Align drive gear keyway with the countershaft key, long hub against PTO gear, and press both gears on the countershaft.



6. On each countershaft front, install the drive gear retaining snap ring in groove.



7. Use a flanged-driver or the press to install the bearing inner race on the countershaft front against the drive gear.

Note: Make sure all gears are pressed into place.

Note: Make sure the bearing inner race is installed.



Transmission Overhaul Procedures-Bench Service

How to Assemble the Lower Reverse Idler Gear Assembly


Special Instructions

In 1996 Eaton® changed the reverse idler system design. In the nut design, the reverse idler bearing was lubricated through a hole in the main case reverse idler support boss and a oil passage through the idler shaft middle.

Special Tools

- See Tool Information (see Table 6)
- Item T18: Bearing race installer

Previous Design

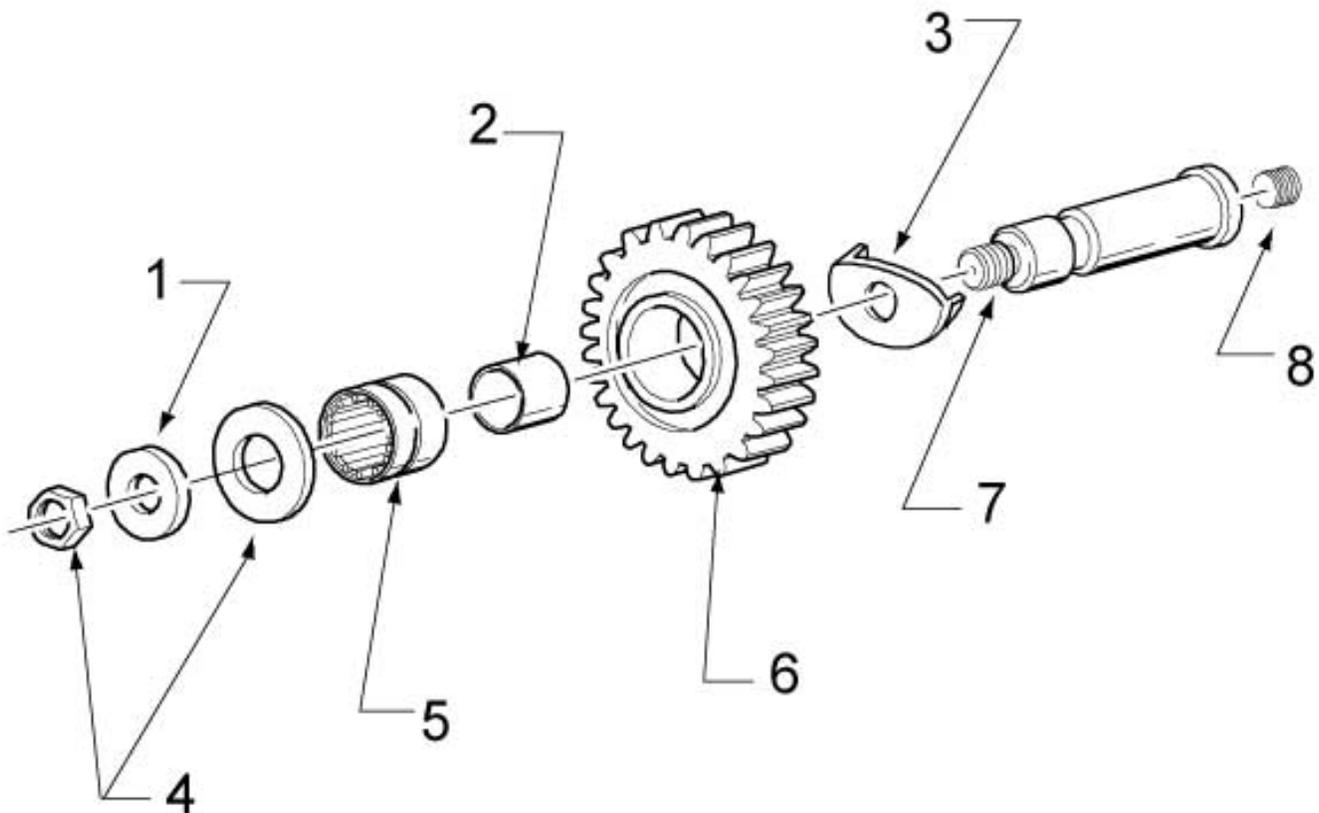


- | | |
|-------------------|------------------------|
| 1. Idler Plate | 5. Bearing |
| 2. Inner Race | 6. Reverse Idler Gear |
| 3. Washer | 7. Reverse Idler Shaft |
| 4. Nut and Washer | 8. Plug |

Transmission Overhaul Procedures-Bench Service

The capscrew design eliminates the case hole and idler shaft hole. The reverse idler bearing is supplied oil through the use of star design thrust washers. If the nut design parts are used with the capscrew design, where main case does not have the oil feed hole, the reverse idler bearing will fail.

Current Design

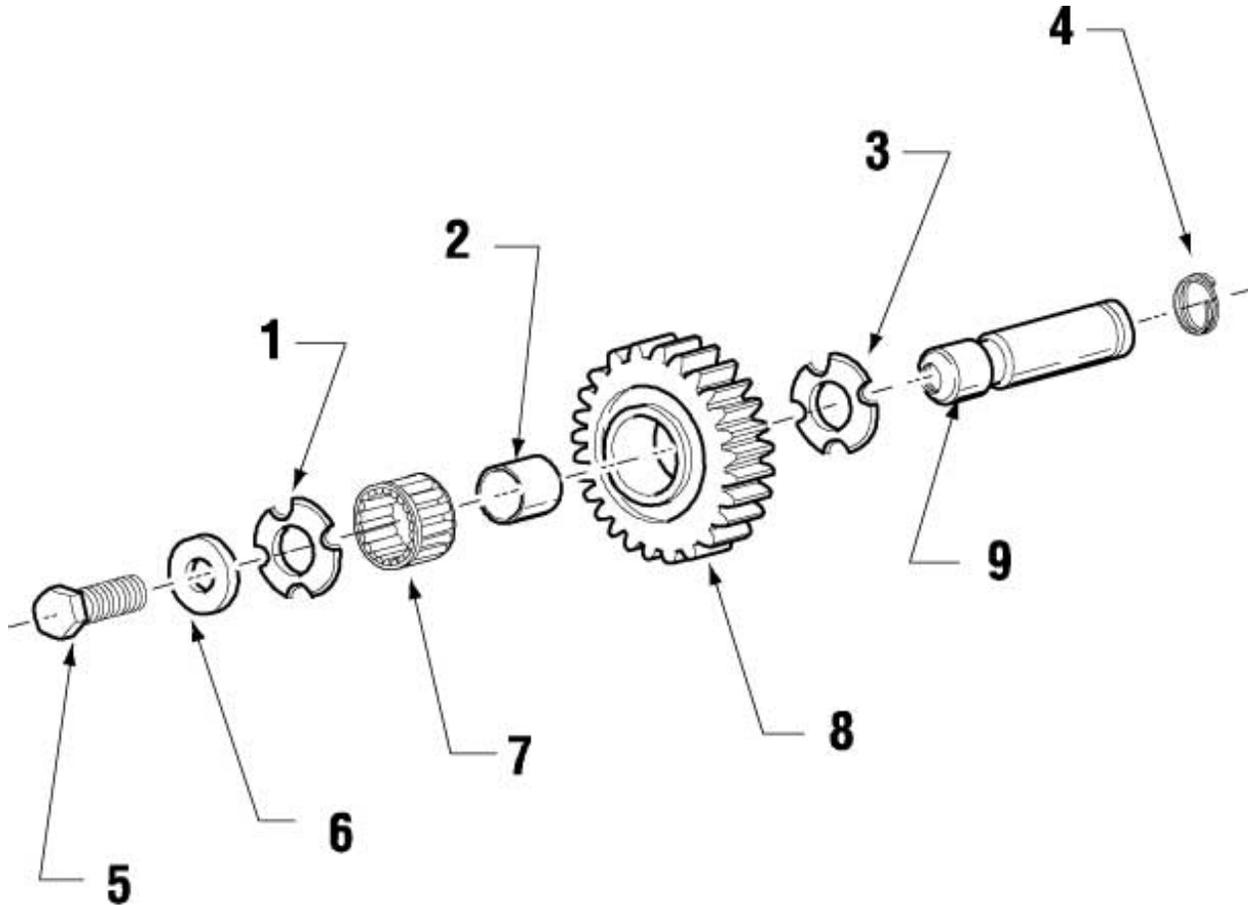


- | | |
|-------------------|------------------------|
| 1. Star Washer | 6. Idler Plate |
| 2. Inner Race | 7. Bearing |
| 3. Star Washer | 8. Reverse Idler Gear |
| 4. Retaining Ring | 9. Reverse Idler Shaft |
| 5. Capscrew | |

Procedure -

1. Position the reverse idler bearing and inner race into the reverse idler gear.




Transmission Overhaul Procedures-Bench Service

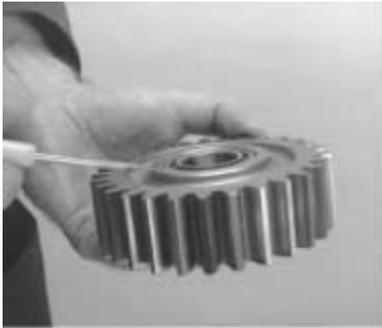


2. Position the gear in the case. The gear's long hub is positioned forward.



3. Place the rear thrust washer on the idler shaft.

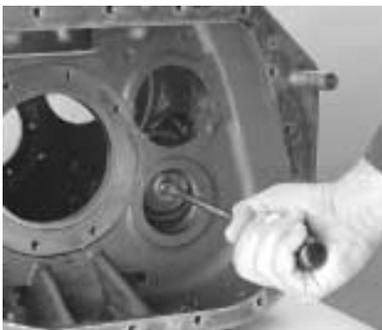

4. From the case rear, insert the idler shaft through the main case bearing bore and into the reverse idler gear bearing.
5. As the idler shaft slides into the gear, insert the front thrust washer into position. Continue sliding the idler shaft into the case support boss.
6. From the rear, gently tap the idler shaft forward until resistance is felt.

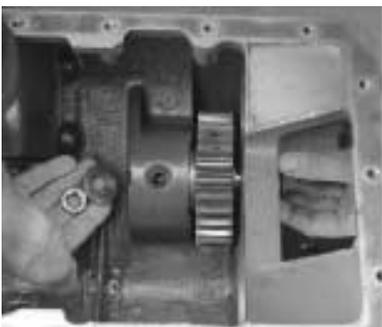

7. Install the flat washer over the shaft threaded portion.
8. Apply Eaton® Fuller® Sealant #71205 or equivalent. Install capscrew and torque to 67-75 lb-ft (90.84-101.69 N•m).
9. Using a bearing race driver, install the auxiliary countershaft bearing race into the lower reverse idler bore.

Note: The bearing races have a slip fit in their bores. They should slide or rotate easily into the case bore if they are not cocked.

How to Install Countershaft Assemblies

Special Instructions

Make sure the countershaft assemblies have been marked for proper position, 47- tooth PTO gear in the lower position.

Prior to installing the countershafts, the lower reverse idler gear assembly should be installed. In addition, if the transmission is equipped with an internal oil pump, this should also be installed.

Special Tools

- Toolmaker's dye

Procedure -

1. On the drive gear of each countershaft assembly, mark the tooth aligned with the gear keyway and stamped with an "O" for easy identification. A highly visible color of toolmaker's dye is recommended for making timing marks.

Note: Prior to installing the countershafts, the lower reverse idler gear assembly should be installed. In addition, if the transmission is equipped with an internal oil pump, this should also be installed.



2. Place the lower, 47-tooth PTO gear countershaft, into the main case with the shaft seated in the lower countershaft case bores.

Note: Use a large hook or piece of rope to support the countershaft if necessary.

3. Place the upper countershaft (with the 45 tooth PTO gear) into the main case with the shaft seated in the upper countershaft case bores.



Transmission Overhaul Procedures-Bench Service

How to Install the Lower Countershaft Bearings

Special Instructions


The lower reverse idler assembly should be installed before the lower countershaft.

The front bearing inner race must be pressed on the countershaft front.

The flanged-end driver must cover the bearing outer race for proper installation.

Special Tools

- See Tool Information (see Table 6)
- Item T7: Flanged-end bearing driver
- Item T8: Bearing driver
- Item T9: Countershaft support tool

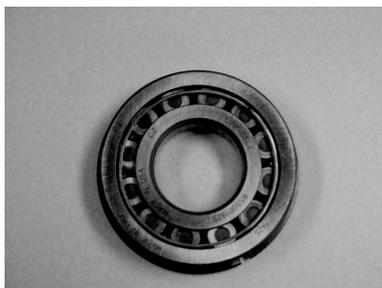

Procedure -

1. Move the countershaft to the rear and insert the countershaft support tool to center shaft in rear case bore.
2. Obtain a spare inner countershaft race.
3. Temporarily install the spare countershaft inner race inside the front roller bearing for installation.

Transmission Overhaul Procedures-Bench Service

4. Use a flanged-end driver to start the front bearing in case bore.
5. Use a screwdriver inserted in the countershaft capscrew bore to help center the countershaft.
6. Move the countershaft forward into the bearing.
7. Use a flanged-end bearing driver and maul to completely seat the front bearing in the case bore.

Note: Make sure to contact only the bearing and not the temporary race with the driver. The temporary race should fall out when installation is complete.

8. On the countershaft front, position the retainer plate with roll pin in hole at shaft end.
9. Install the front bearing retainer plate and capscrew. If the capscrew is being reused, apply Eaton® Fuller® thread sealant #71205 or equivalent. Torque the capscrew to 90-120 lb-ft (122.02-162.70 N•m).

Note: Earlier models may have a roll pin in the retainer. This roll pin is not required and was removed on units built after 1994.

10. From the rear, remove the countershaft support tool.
11. Install the rear countershaft bearing. Position the bearing so that the larger chamfer on the bearing inside diameter is installed towards the shaft. Use a bearing driver that contacts both the bearing inner race and outer race.

12. In the countershaft rear groove, install the rear snap ring.

Note: Make sure the front bearing capscrew is properly torqued.

Note: Make sure the rear snap ring is in place.



Transmission Overhaul Procedures-Bench Service


How to Install the Input Shaft and Main Drive Gear

Special Instructions

None

Special Tools

- See Tool Information (see Table 6)
- Item T10: Input bearing driver
- Toolmaker's dye

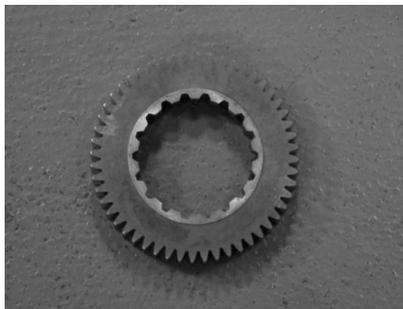

Procedure -


1. Use a highly visible toolmaker's dye and mark the main drive gear for timing purposes. To mark the gear, paint toolmaker's dye on any two adjacent teeth, and then paint the two adjacent teeth directly opposite the first two teeth.
2. If necessary, install the bushing in the back of the input shaft.
3. Temporarily position the upper countershaft up and away from the transmission center.
4. From inside the case, mesh the lower countershaft drive gear marked tooth with either set of main drive gear marked teeth.
5. From the front, engage the input shaft spline teeth into the main drive gear.
Note: The current design input shaft spline teeth have noticeable clearance to the main drive gear internal spline teeth. This is normal.
6. Install the snap ring in the main drive gear inside groove.

Transmission Overhaul Procedures-Bench Service

7. Install the spacer washer over the input shaft. With the bearing external snap ring to the outside, position the bearing on the input shaft.



8. Install the input shaft bearing over the input shaft. Use a flanged-end bearing driver which contacts both the bearing inner race and outer race. Drive the bearing until it contacts the front case.
9. Temporarily install the front bearing cover with two cap screws.
10. From inside the main case, drive the input shaft forward until it is fully seated.

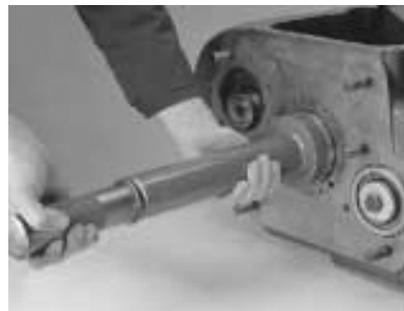

11. Install the input shaft retaining snap ring.

Note: Do not replace the small rubber lip seal. It is used only to prevent leakage during shipping.

12. Do not reinstall the input bearing cover at this time. Instead, pull the input shaft and bearing forward to allow for main-shaft installation.



Transmission Overhaul Procedures-Bench Service

How to Install the Mainshaft Assembly

Special Instructions

The lower countershaft bearings and the input shaft must be installed, but for higher torque ratings do not install the front bearing cover.

Check to make sure the lower countershaft drive gear marked tooth is in time with main drive gear set of marked teeth.

Special Tools

- A large hook or 3' piece of rope



Procedure -

1. Block the upper countershaft forward and as close to the case wall as possible.
2. With reverse gear forward against the next speed gear and mainshaft pilot end over the integral oil pump gear, lower the mainshaft assembly while pulling the shaft rear through the case bore.
3. Pull the input shaft forward until the drive gear is against the case.
4. After the mainshaft drops into the case, slide the countershaft back and the mainshaft should fall down between the countershafts.
5. Move the mainshaft pilot-end into the input shaft pilot bushing. Mesh the mainshaft gears with the corresponding countershaft assembly gears.
6. Position the upper reverse idler gear in case.

Note: At this time other components of the front section must be installed before the mainshaft installation can be completed, see the procedure “How to Install the Upper Countershaft Bearings”.

Transmission Overhaul Procedures-Bench Service

7. Mesh the reverse gear teeth with the reverse idler gear teeth and move the reverse gear to the rear as far as possible.
8. Align the reverse gear spacer external splines with the reverse gear and move the spacer into the reverse gear.
9. Install the reverse gear I.D. snap ring and move the reverse gear forward on the mainshaft and against the reverse gear limit washer.

10. Push the input shaft bearing back into the case bore.
11. Position a new gasket on the bearing cover mounting surface, make sure to align the gasket oil return hole with case oil return hole.
12. Position the front bearing cover, make sure to align the cover oil return hole with case oil return hole.
13. Secure the front bearing cover with six (6) capscrews, torque to 35–45 lb-ft (47.45-61.01 N•m).

Note: Make sure the drive gear is timed with the both countershafts.

Note: Make sure the front bearing cover capscrews are tighten properly.



Transmission Overhaul Procedures-Bench Service

How to Install the Upper Countershaft Bearings

Special Instructions

The front bearing inner race must be pressed on the countershaft front.

The flanged-end driver must cover the bearing outer race for proper installation.


Temporarily use the assembled auxiliary drive gear to hold the mainshaft in the input shaft pilot.

CAUTION: The upper countershaft bearings must be installed after the installation of the mainshaft.

Special Tools

- See Tool Information (see Table 6)
- Item T7: Flanged-end bearing driver
- Item T8: Bearing driver
- Item T9: Countershaft support tool

Figure 3

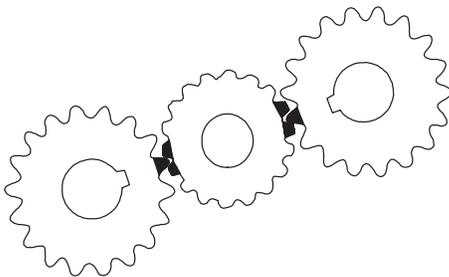


Procedure -


1. Make sure the lower countershaft and main drive gear timing marks are aligned.
2. Mesh the upper countershaft marked tooth with the two remaining main drive gear marked teeth.
3. Move the countershaft to the rear and insert the countershaft support tool to center shaft in rear case bore.

Transmission Overhaul Procedures-Bench Service

4. Obtain a spare inner countershaft race.

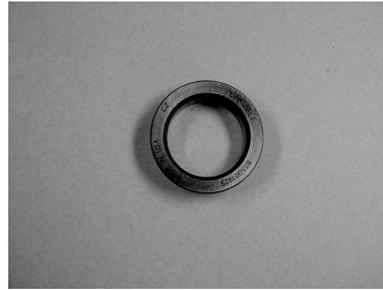

5. Temporarily install a spare countershaft inner race inside the front roller bearing for installation.

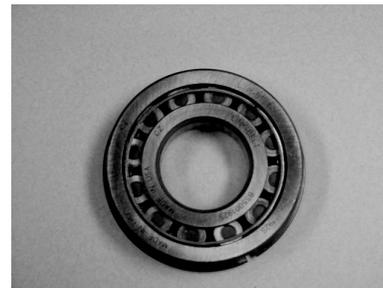

6. Use a flanged-end driver to start the front bearing in case bore.
7. Use a screwdriver inserted in the countershaft capscrew bore to help center the countershaft.
8. Move the countershaft forward into the bearing.
9. Use a flanged-end bearing driver and maul to completely seat the front bearing in the case bore.



Note: Make sure to contact only the bearing and not the temporary race with the driver. The temporary race should fall out when installation is complete.

10. On the countershaft front, position the retainer plate with roll pin in hole at shaft end.

11. Install the front bearing retainer plate and capscrew. If the capscrew is being reused, apply Eaton® Fuller® thread sealant #71205 or equivalent. Torque the capscrew to 90-120 lb-ft (122.02-162.70 N•m).



Note: Earlier models may have a roll pin in the retainer. This roll pin is not required and was removed on units built after 1994.

Transmission Overhaul Procedures-Bench Service



12. From the rear, remove the countershaft support tool.
13. Install the rear countershaft bearing. Position the bearing so that the larger chamfer on the bearing inside diameter is installed towards the shaft. Use a bearing driver that contacts both the bearing inner race and outer race.



14. In the countershaft rear groove, install the rear snap ring.
Note: Make sure the front bearing capscrew is properly torqued.
Note: Make sure the rear snap ring is in place.

How to Assemble the Upper Reverse Idler Gear Assembly


Special Instructions

In 1996 Eaton® changed the reverse idler system design. In the nut design, the reverse idler bearing was lubricated through a hole in the main case reverse idler support boss and a oil passage through the idler shaft middle.

Special Tools

- See Tool Information (see Table 6)
- Item T18: Bearing race installer

Previous Design

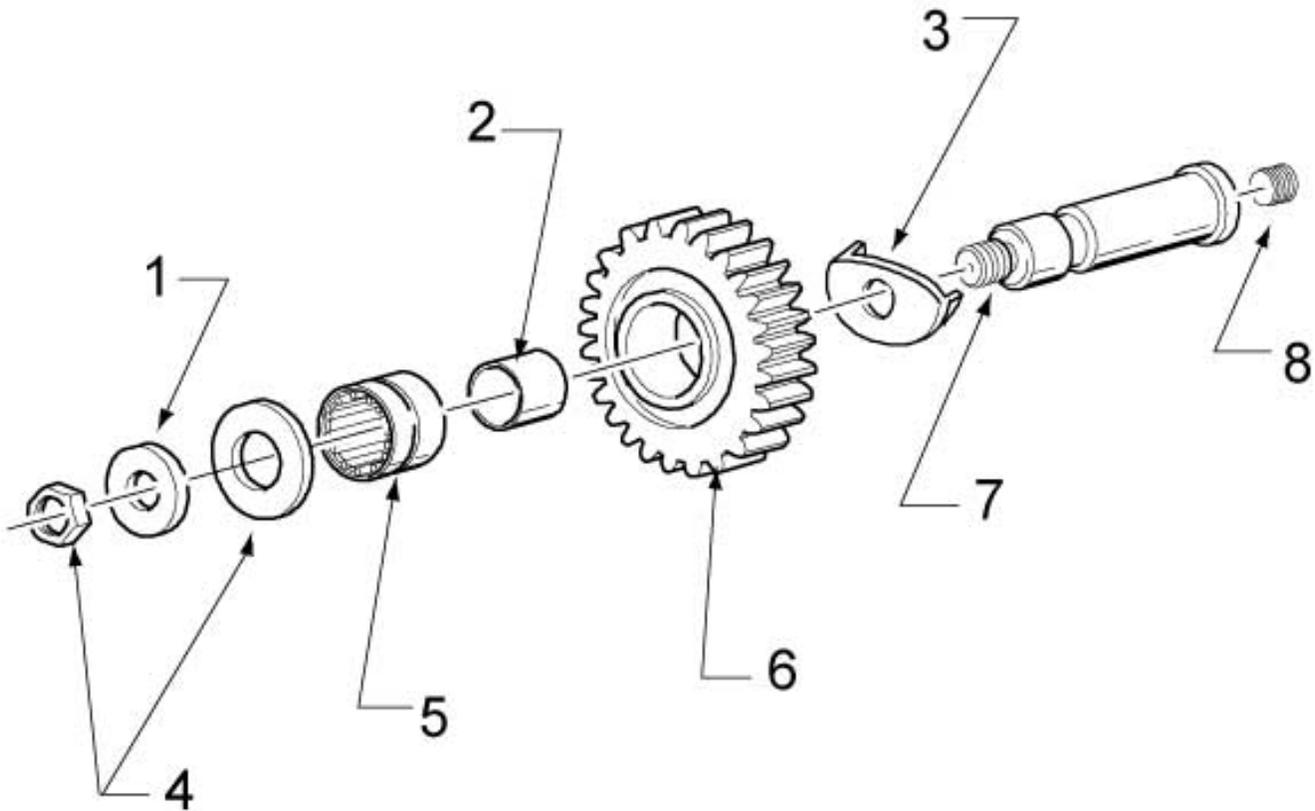


- | | |
|-------------------|------------------------|
| 1. Idler Plate | 5. Bearing |
| 2. Inner Race | 6. Reverse Idler Gear |
| 3. Washer | 7. Reverse Idler Shaft |
| 4. Nut and Washer | 8. Plug |

Transmission Overhaul Procedures-Bench Service

The capscrew design eliminates the case hole and idler shaft hole. The reverse idler bearing is supplied oil through the use of star design thrust washers. If the nut design parts are used with the capscrew design main case which does not have the oil feed hole, the reverse idler bearing will fail.

Current Design

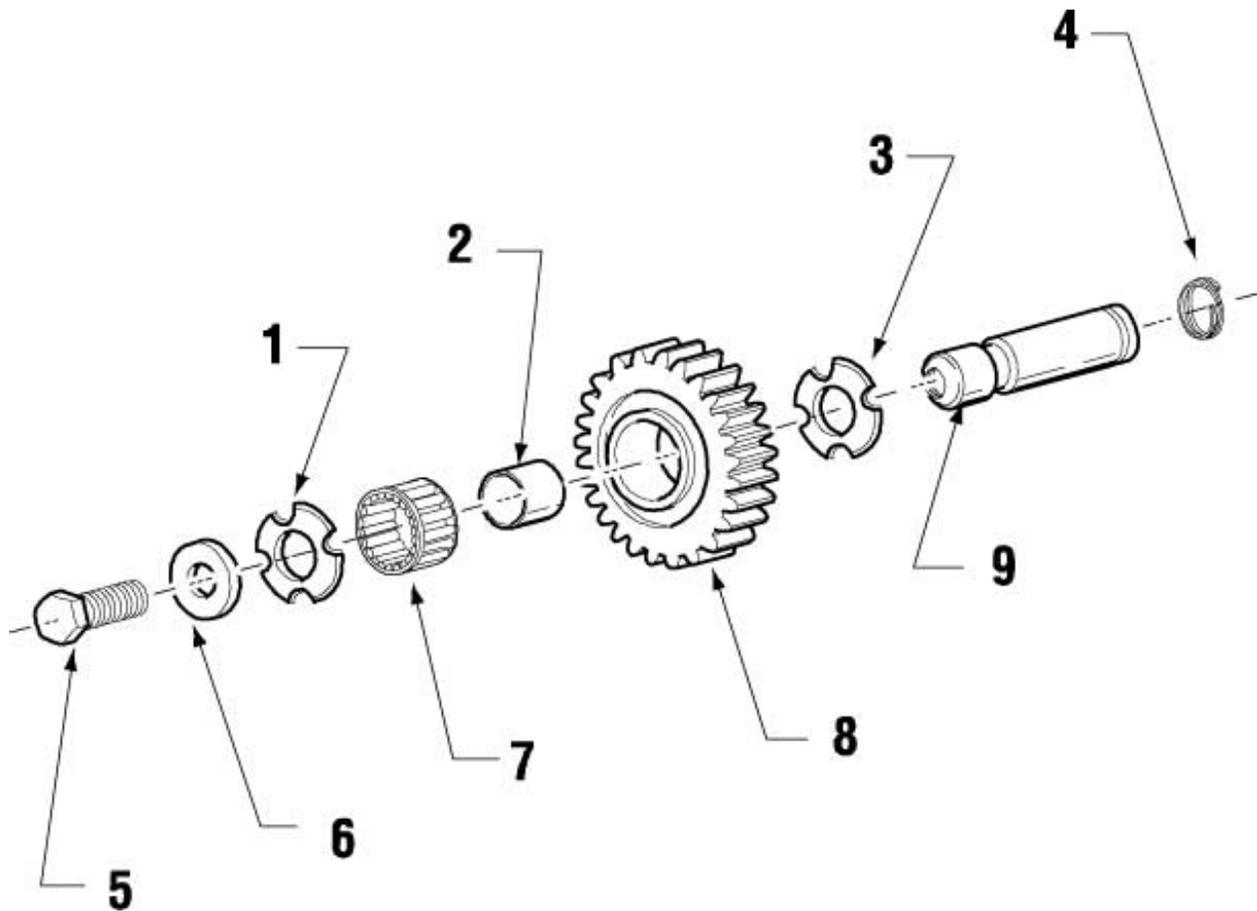


- 1. Star Washer
- 2. Inner Race
- 3. Star Washer
- 4. Retaining Ring
- 5. Capscrew
- 6. Idler Plate
- 7. Bearing
- 8. Reverse Idler Gear
- 9. Reverse Idler Shaft

Transmission Overhaul Procedures-Bench Service

Procedure -

1. Place the rear thrust washer on the idler shaft.
2. From the rear, insert the idler shaft through the main case bearing bore and into the reverse idler gear bearing.
3. As the idler shaft slides into the gear, insert the front thrust washer into position. Continue sliding the idler shaft into the case support boss.
4. From the rear, gently tap the idler shaft forward until resistance is felt.
5. Install the flat washer over the shaft threaded portion.
6. Inspect the reverse idler nut nylon locking material. Replace the capscrew, if necessary. Install the capscrew and torque to 67-75 lb-ft (90.84-101.69 N•m).
7. Using a bearing race driver, install the auxiliary countershaft bearing race into the lower reverse idler bore.

Note: The bearing races have a slip fit in their bores. They should slide or rotate easily into the case bore if they are not cocked.

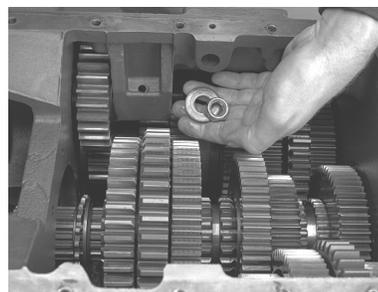

Transmission Overhaul Procedures-Bench Service



How to Install the Auxiliary Drive Gear Assembly

Special Instructions

Before installing the auxiliary drive gear, the mainshaft must also be completely installed.

Special Tools

- See Tool Information (see Table 6)
- Large pair of snap ring pliers
- Item T10: Flanged-end driver and maul

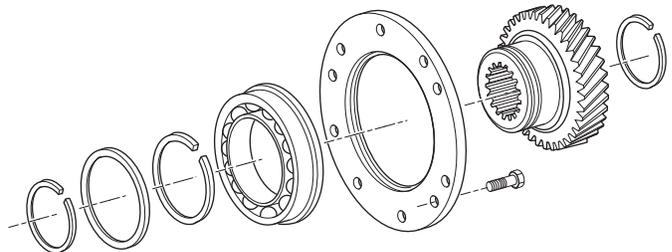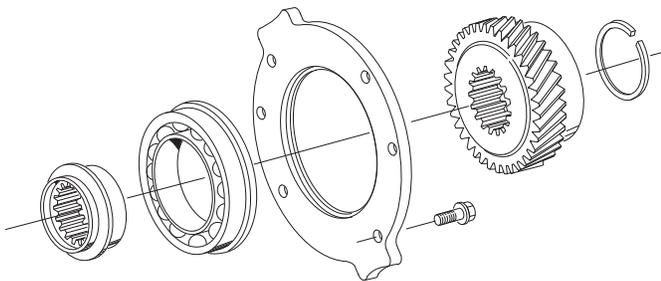

Standard Torque



High Torque

Procedure - Standard torque capacity models

1. Install the retainer ring on the front auxiliary drive gear, snap ring groove facing hub and away from gear teeth.

Transmission Overhaul Procedures-Bench Service

2. Start the front auxiliary drive gear bearing on the hub, bearing snap ring facing groove in retainer ring. Press the bearing fully into position.

Note: Once the bearing is fully installed, it is normal for clearance to exist between the auxiliary drive gear hub and the mainshaft rear bearing inside.




3. Install the snap ring in gear hub groove to retain the bearing.




4. Install the outer retainer ring, grooved side down (inset), with a flanged driver.



5. Install the auxiliary drive gear assembly on the mainshaft rear. Use a flanged-end driver to fully seat the assembly in the case bore.

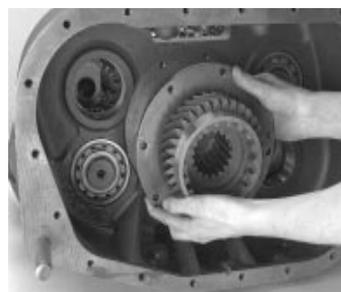


Transmission Overhaul Procedures-Bench Service

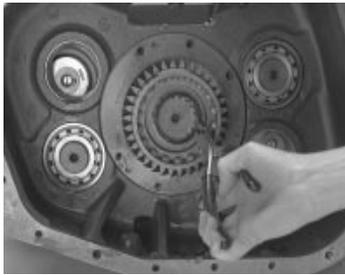


6. Apply Eaton®Fuller® thread sealant #71205 or equivalent to the capscrew threads, and install the six (6) capscrews. Torque the capscrews to 35- 45 Lb•ft. NOTE: On some previous designs, lock wire was used on the capscrews, lock wire as needed.
7. Install the snap ring in the mainshaft groove rear. The mainshaft may need to slide rearward.

Procedure - High torque capacity models (16908LL and 16915)

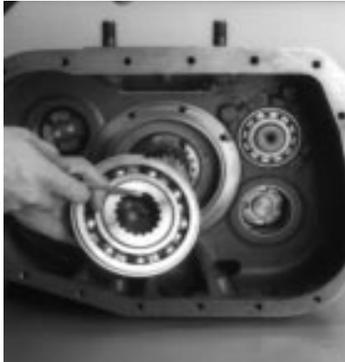

1. Press the inner sleeve into the rear mainshaft bearing.
2. Slide the bearing and sleeve assembly over mainshaft rear.

Note: The missing spline tooth is positioned over the mainshaft key. Use a flanged driver to fully seat the rear mainshaft bearing assembly.

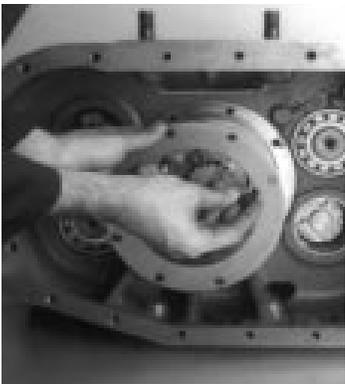

3. With the stepped side facing forward, install the rear mainshaft bearing retainer plate. Apply Eaton®Fuller® thread sealant #71205 or equivalent to the capscrew threads, and install the six (6) capscrews. Torque the capscrews to 35-45 Lb•ft.



4. Slide the auxiliary driver gear over the mainshaft splines. Install the rear snap ring in the mainshaft groove.

Note: For the snap ring to install fully, it may be necessary to slide the mainshaft assembly rearward. If the snap ring cannot be installed in the groove, the reverse gear spacer washer may be improperly positioned-the chamfer in the washer must face rearward.

How to Install the Clutch Housing

Special Instructions

Installation of the clutch housing is done in the horizontal position.

Special Tools

- Typical service tools, Torque wrench


Procedure -

1. Make sure maincase and clutch housing gasket surfaces are clean and free of debris.
2. Position a new gasket on the housing mounting surface.
3. Install the clutch housing on the front box, pilot it on the six studs and drive gear bearing cover.
4. Install the nuts with washers on the studs, tighten to 35 Lb-ft (47 N.m) + 90° CW rotation (or 175 Lb-ft (237 N.m) of torque) in cross-pattern.
5. Install the capscrews, tighten to 115 Lb-ft (156 N.m) of torque in cross pattern.

Note: Make sure all fasteners are properly torqued.



Recommended Clutch Housing Tightening Pattern

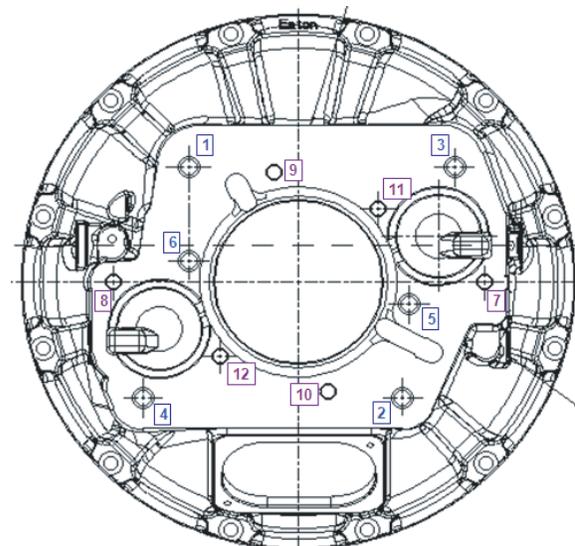

Transmission Overhaul Procedures-Bench Service


How to Disassemble the Integral Oil Pump without Auxiliary Oil Tube

Special Instructions

None


Special Tools

- Typical service tools
- A vise with brass jaws or wood blocks

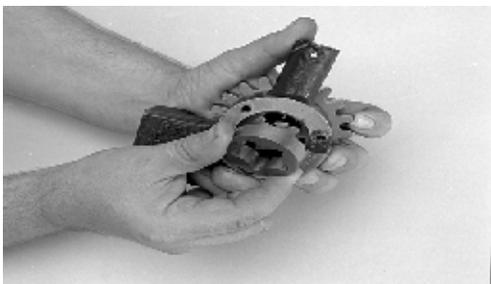

Procedure -

1. From the assembly, remove the outer oil pump element.

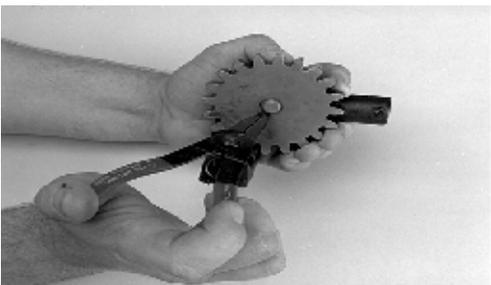

2. From the drive shaft, remove the drive gear retaining snap ring.

3. From the pump drive shaft, remove the drive gear.




4. From the drive shaft keyway, remove the key.

Transmission Overhaul Procedures-Bench Service

5. From the drive shaft, remove the element snap ring.



6. From the drive shaft, remove the internal oil pump element.

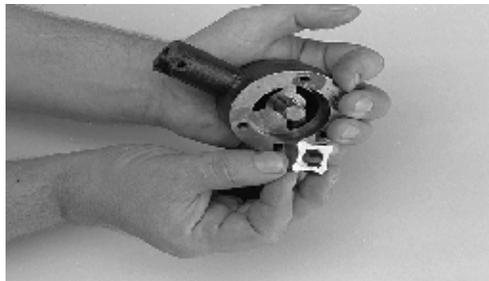


7. From the drive shaft keyways, remove the two (2) keys.



8. From the integral oil pump housing, remove the drive shaft.


9. If damaged, from the drive shaft, remove the rear drive gear retention snap ring.

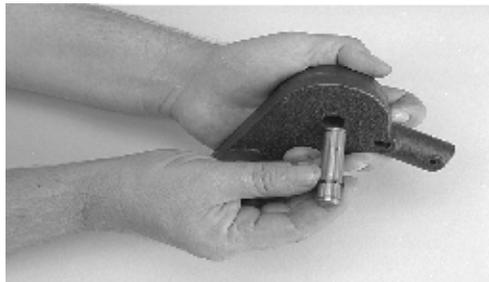

Transmission Overhaul Procedures-Bench Service



10. From the pump housing, remove the relief valve roll pin.

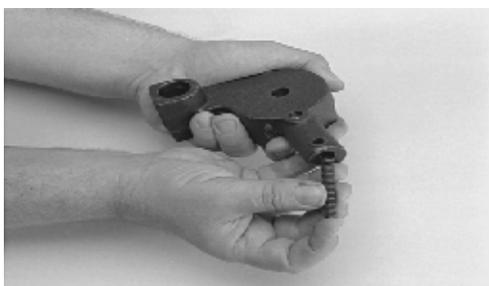

11. From the relief valve housing bore, remove the relief valve spring.



12. From the housing bore, remove the relief valve.

13. Inspect all parts for damage, replace damaged parts.

How to Assemble the Integral Oil Pump without Auxiliary Oil Tube

Special Instructions


When installing the drive shaft keys, the round key goes in the round keyway and the square key in the square keyway.

Special Tools

- A vise with brass jaws or wood blocks

Procedure -

1. Install the relief valve in the integral oil pump housing.

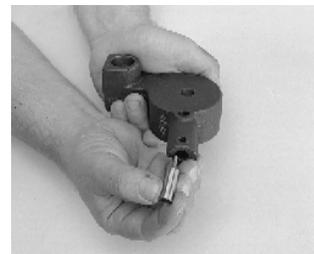

2. Install the relief valve spring in oil pump housing.



3. Secure the oil pump housing in a vise.
4. Depress the relief valve spring and drive the relief valve retention roll pin into the roll pin bore.




Transmission Overhaul Procedures-Bench Service



5. If removed, replace the drive shaft snap ring on the pump drive shaft.
6. Insert the drive shaft through the pump housing bore.



7. Install the two (2) keys on the drive shaft.

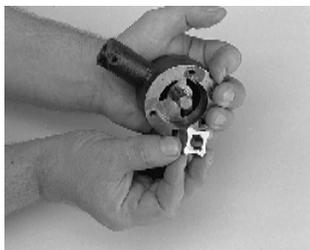

8. Align the inner element keyways with the drive shaft keys and install the integral oil pump inner element.




9. Install the inner element retention snap ring in drive shaft snap ring groove.

Transmission Overhaul Procedures-Bench Service

10. Install drive gear key in drive shaft keyway.



11. Align drive gear keyway with drive shaft key and install the drive gear on the drive shaft.

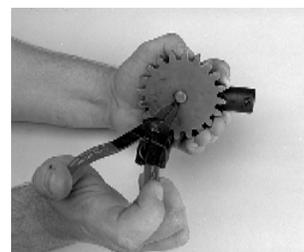

12. Install the outer drive gear retention snap ring in drive shaft groove.



13. Install the outer integral oil pump element over the inner element.

Transmission Overhaul Procedures-Bench Service




How to Remove the Integral Oil Pump

Special Instructions

None

Special Tools

- Typical service tools

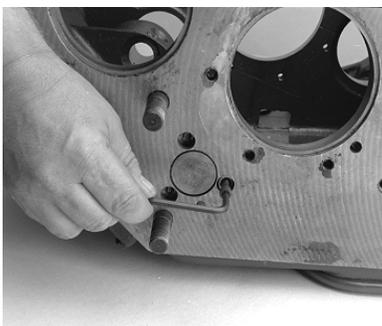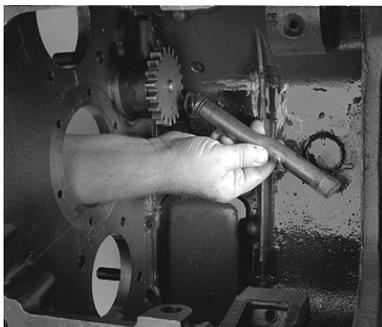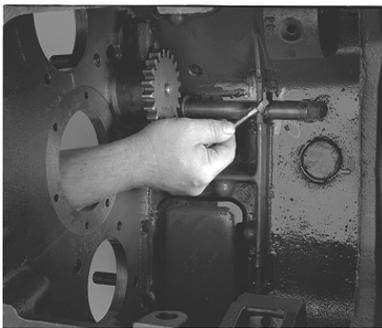


Procedure -


1. Remove the capscrews holding the suction tube in position.
2. Straighten tube lock on suction tube.
3. Remove suction tube from oil pump. If necessary, remove O-ring from suction tube.
4. Remove three (3) allen head capscrews and washers that retain the integral oil pump to the case.

Transmission Overhaul Procedures-Bench Service


5. Remove the integral oil pump assembly from inside the case.

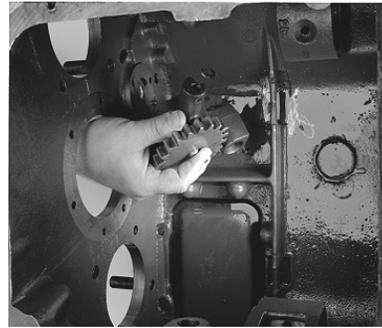

6. Remove the integral oil pump retainer plate from inside the case.

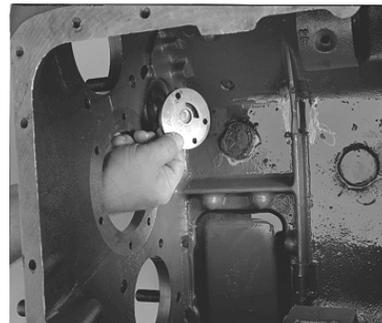

7. If necessary, the front case plug can be removed from the case. To remove, insert a bar from inside the case and tap the plug out.
8. Inspect the plug O-ring, replace if damaged.

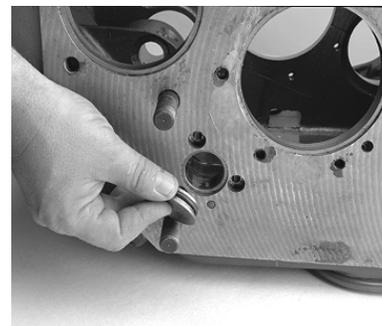

Transmission Overhaul Procedures-Bench Service




How to Install the Integral Oil Pump

Special Instructions

None

Special Tools

- Typical service tools

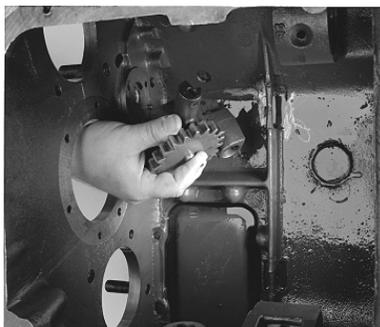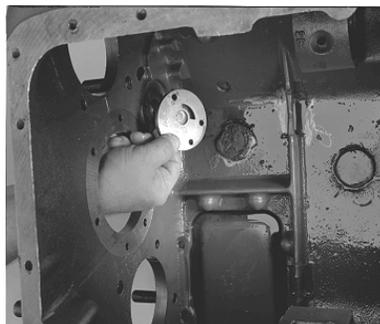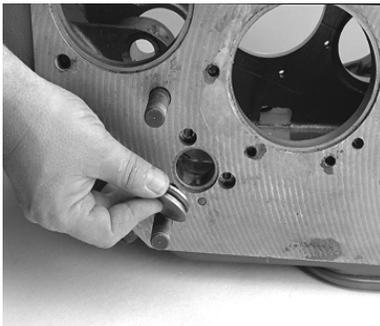


Procedure -

1. If removed, replace the front case plug O-ring. Lubricate the groove of the plug, install the O-ring onto the plug, and then lubricate the outer diameter of the O-ring.
2. Seat the front case plug in the case bore by hand. Do not install the pump plug using any type of impact tool (i.e. hammer, maul, etc.).
3. With the retainer bore facing the case rear, install the integral oil pump over the alignment pin inside the case.
4. Align oil pump with retainer and alignment pin and install the integral oil pump assembly.


Transmission Overhaul Procedures-Bench Service

5. Install three (3) allen head capscrews and washers through the case front and into the pump housing. Tighten the capscrews to 8-12 Lb•ft of torque.
6. Replace the O- ring on the suction tube.
7. Install the suction tube under the case rib and into the integral oil pump.

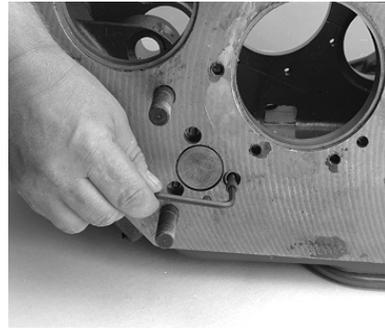

8. Bend the suction tube lock over the case rib.
9. Install the capscrews to hold the oil tube in position. Tighten the capscrews to 35-45 Lb•ft of torque (if applicable).

Note: Make sure the integral oil pump drive gear can turn.

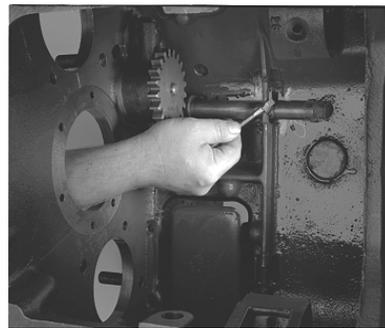

Transmission Overhaul Procedures-Bench Service

How to Install the Auxiliary Section with Tapered Bearings

Special Instructions

There are different capscrew lengths, install in the correct location.

Auxiliary sections can be installed either with the transmission in the horizontal position or the vertical position.

To install in the vertical position, the clutch housing must be installed.

Special Tools

- See Tool Information (see Table 6)
- Item T2: Auxiliary section hanger bracket for horizontal removal
- A steel bar longer than the width of the output yoke for vertical removal
- A hoist with a lifting chain



Procedure -

1. **To install the auxiliary section in the horizontal position:**
Position a new gasket on the transmission mounting surface.
2. Attach an auxiliary section hanger bracket to the auxiliary section top.
3. Attach a lifting chain to the auxiliary section hanger bracket.
4. Position the auxiliary section on the two (2) dowel pins.
5. Slide the auxiliary section on until the hanger bracket contacts the front section back.
6. Remove the auxiliary section hanger bracket.
7. Slide the auxiliary section the rest of the way into position.
8. Apply Eaton/Fuller Sealant #71205 or equivalent to the retaining capscrews.
9. Install the retaining capscrews, tighten to 35-45 Lb-ft of torque.
10. To finish installation, see "The Shimming Procedure for Tapered Bearings".



Transmission Overhaul Procedures-Bench Service

Procedure -

1. **To install the auxiliary section in the vertical position:**
With blocks under the clutch housing to prevent input shaft damage, place the transmission in the vertical position, clutch housing down.
2. Position a new gasket on the transmission mounting surface.
3. Install a steel bar through the yoke.
4. Attach a lifting chain to the steel bar.
5. Position the auxiliary section over the two (2) dowel pins.
6. Slide the auxiliary section down the dowels.
7. Apply Eaton/Fuller Sealant #71205 or equivalent to the retaining capscrews.
8. Install the retaining capscrews, tighten to 35-45 Lb-ft of torque.
9. Remove the steel bar and chain.
10. To finish installation, see "The Shimming Procedure for Tapered Bearings".

Note: Make sure capscrews are properly torqued.

Note: Make sure the input shaft rotates.



Transmission Overhaul Procedures-Bench Service

Shim Procedure without a Shim Tool for Tapered Bearings

Special Instructions

The shim procedure can be done in the horizontal or vertical position. The procedure is done the same.

CAUTION

Use genuine Eaton® replacement gaskets for the auxiliary housing and countershaft bearing cover. Do not omit the gaskets. Bearing endplay is influenced by the compressed thickness of the gasket (.011-.012" or .28-.30 mm).

The bearing endplay must be checked and adjusted any time a countershaft, bearing, or housing is replaced. If, during reassembly, the same countershaft, bearings, housing, and shims are reused and kept in the same location, it is not necessary to reset bearing endplay.

The following procedure is used to adjust the endplay for the auxiliary countershaft tapered bearings. By correctly following this procedure, each countershaft will have .001"-.005" (.03-.12 mm) endplay.

Shims must be aligned properly or else the rear bearing cover may be damaged when final torque is applied.



Procedure -

1. The auxiliary countershaft bearing covers or countershaft straps and shims should be removed. Make sure all old gasket material is cleaned from the gasket mounting surfaces on the countershaft bearing covers and the auxiliary housing.
2. Verify that the auxiliary section is in gear. When the output shaft is rotated, the countershafts must also rotate. If not shift the auxiliary into gear by applying shop air to the high range air port on range cylinder to shift into gear.
3. Make sure a 0.100 countershaft rear bearing shim is installed. Be sure the countershaft rear bearing races are seated in the bearing bores.
4. Install two (2) clean 3/8 " x 1" capscrews without washers directly across from each other in each bearing cover. Tapped holes in auxiliary case must be free of thread adhesive.
5. Evenly tighten the capscrews to 7 Lb-in of torque. Do not install the countershaft rear bearing cover gasket. The gap between the bearing cover and the housing surface should be even from side to side.



Transmission Overhaul Procedures-Bench Service

Note: 7 Lb-in is slightly more than finger tight. Do not over-tighten the capscrews. If the capscrews are too tight, the bearing cover will become distorted.

6. Rotate the output shaft 4 times clockwise and 4 times counterclockwise. The rotation will seat and align the rollers in each tapered bearing. Re-torque the capscrews to 7 Lb-in. If the countershafts do not rotate, the range sliding clutch or deep reduction sliding clutch is in neutral. Apply shop compressed air to shift cylinders to shift the sliding clutches into gear.
7. Use a feeler gauge, as close to each capscrew location as possible, and measure the gap between the countershaft rear bearing cover and the auxiliary housing gasket surface. Measure and record the gap at two capscrew locations.
8. Average the two feeler gauge measurements by adding the measurements together and dividing by 2 as shown in Example.

Shim Chart

| |
|---|
| Gap 1 = .060 ; Gap 2 = .050 |
| Total Gap = .060 + .050 = .110 |
| Average = $.110/2 = .055$ |
| Select yellow shim as indicated in the shim chart at the end of this selection. |

9. Locate the feeler gauge average measurement in the shim chart to determine the required shim and color code.

Note: The oil pump shim is used when an auxiliary oil pump or PTO is mounted on the countershaft. The oil pump shims have a smaller outside diameter.

10. Remove the countershaft rear bearing cover and gauging shim.
11. Place the selected shim on the rear countershaft bearing race.
12. Position a new gasket on countershaft rear bearing cover mounting surface.
13. Position the countershaft rear bearing cover over the new gasket.



Transmission Overhaul Procedures-Bench Service



14. Apply Eaton® Fuller® thread sealant #71205 or equivalent to the auxiliary countershaft rear bearing cover capscrews and auxiliary countershaft rear bearing cover.

15. Install the auxiliary countershaft rear bearing cover and secure it with the capscrews. Make sure the shim is in the proper location and is not pinched between the cover and the housing. Tighten the capscrews to 40-45 Lb-ft (54-61 Nm).

Note: Use a thick grease to hold the shim in position when installing the cover.

16. Repeat this procedure for the remaining countershaft.

Note: Make sure capscrews are properly torqued.

Note: Make sure the input shaft rotates.

Shim Table

| Feeler Gauge Average Gap | Shim Thickness | Standard Shim Part Number | Oil Pump Shim Part Number | Color Code |
|--------------------------|----------------|---------------------------|---------------------------|------------|
| .072-.075 | .033-.034 | 4302345 | 4302346 | Gold |
| .69-.0715 | .036-.037 | 21452 | 21472 | Red |
| .066-.0685 | .039-.040 | 21453 | 21473 | Pink |
| .063-.0655 | .042-.043 | 21454 | 21474 | Brown |
| .060-.0625 | .045-.046 | 21455 | 21475 | Tan |
| .057-.0595 | .048-.049 | 21456 | 21476 | Orange |
| .054-.0565 | .051-.052 | 21457 | 21477 | Yellow |
| .051-.0535 | .054-.055 | 21458 | 21478 | Green |
| .048-.0505 | .057-.058 | 21459 | 21479 | Light Blue |
| .045-.0475 | .060-.061 | 21460 | 21480 | Lavender |
| .042-.0445 | .063-.064 | 21461 | 21481 | White |
| .039-.0415 | .066-.067 | 21684 | 21686 | Black |
| .036-.0385 | .069-.070 | 21685 | 21687 | Silver |

Copyright Eaton, 2013

Eaton hereby grant their customers, vendors, or distributors permission to freely copy, reproduce and/or distribute this document in printed format. It may be copied only in its entirety without any changes or modifications. THIS INFORMATION IS NOT INTENDED FOR SALE OR RESALE, AND THIS NOTICE MUST REMAIN ON ALL COPIES.

Note: Features and specifications listed in this document are subject to change without notice and represent the maximum capabilities of the software and products with all options installed. Although every attempt has been made to ensure the accuracy of information contained within, Eaton makes no representation about the completeness, correctness or accuracy and assumes no responsibility for any errors or omissions. Features and functionality may vary depending on selected options.

For spec'ing or service assistance, call 1-800-826-HELP (4357) or visit www.eaton.com/roadranger. In Mexico, call 001-800-826-4357.

Roadranger: Eaton and trusted partners providing the best products and services in the industry, ensuring more time on the road.

Eaton

Vehicle Group
P.O. Box 4013
Kalamazoo, MI 49003 USA
800-826-HELP (4357)
www.eaton.com/roadranger

Printed in USA

For parts or service call us
Pro Gear & Transmission, Inc.



1 (877) 776-4600

(407) 872-1901

parts@eprogear.com

906 W. Gore St.

Orlando, FL 32805

